Forced Convection Constant Temperature Oven

DNE401/411
DNE601/611
DNE811
DNE911

Instruction Manual

First Edition

- **Thank you for purchasing "Forced Convection Constant Temperature Oven DNE Series" of Yamato Scientific Co., Ltd.**
- **This product has not been designed for medical applications. Use this as a laboratory drying sterilizer only.**
- **In order to use this Equipment properly, please read this Instruction Manual and Warranty Card thoroughly before use. Keep them in safe place close to this Equipment so that you can refer to them any time.**

⚠ **Warning**: **Please read the important warning notes in this Manual carefully and thoroughly, and get the good understanding of their contents before using this Equipment.**

YAMATO SCIENTIFIC RUSSIA, INC.

Contents

1. Safety Precautions 1
Explanation of symbols 1
List of symbols 2
Warning and Cautions 3
2. Before operating the Equipment 4
Precautions when installing the Equipment 4
2. Before operating the Equipment 9
3. Names and functions of each part 10
Main unit 10
Structure of the main unit 12
Structure of the main unit 13
Control Panel 15
4. Operating procedure 16
Prior confirmation 16
Date & Time setting 17
Buzzer function selection 18
Fixed temperature operation 20
Auto stop operation 24
Auto start operation 27
Program operation 30
How to copy or delete programs 39
About the wait function 41
Setting key lock mode 42
Calibration offset 43
Setting the recovery mode 44
Resetting integrated CO2 volume and CO2 emission factor 45
Backup data saving / reading out / resetting 47
Monitoring data 48
Independent Overheat Prevention Device 50
5. Handling precautions 51
Warning 51
Caution 52
6. Maintenance method 57
Daily inspection/maintenance 57
7. Long storage and scrap 58
When not using the Equipment for a long time / when scrapping 58
Matters to consider when scrapping the Equipment 58
8. When a trouble occurs 59
Message error table 59
Troubleshooting 60

9. After sales service and warranty 61
Request to repair parts. 61
10. Specifications 62
Specifications 62
11. Accessory 64
List of accessories 64
12. Wiring diagram 66
DNE401/601 Wiring diagram 66
DNE411/611 Wiring diagram 67
DNE811 Wiring diagram 68
DNE911 Wiring diagram 69
Wiring diagram part symbols. 70
13. List of dangerous substances. 71
14. Standard setup manual. . . . . エラー! ブックマークが定義されていません。
Attachment：Programming sheet. 73

1. Safety Precautions

Explanation of symbols

About symbols

Various symbols are provided in this Instruction Manual and on the product to ensure safe operation. Improper handling of this Equipment without understanding their contents will lead to the results classified below. Be sure to fully understand the description of symbols below before proceeding to the text of this Manual.

Warning Indicates a situation which may result in death or serious injury (Note 1.)

Caution Indicates a situation which may result in minor injury (Note 2) and property damages (Note 3.)

（Note 1）Serious injury means a wound, an electrical shock, a bone fracture or intoxication that may leave after effects or require hospitalization or outpatient visits for a long time

（Note 2）Minor injury means a wound or an electrical shock that does not require hospitalization or outpatient visits for a long time.

（Note 3）Property damage means damage to facilities, devices and buildings or other properties.

Meanings of symbols



This symbol indicates a matter urging user to follow the warning (“caution” included).
Specific description of warning is indicated near this symbol.



This symbol indicates prohibitions.
Specific prohibition is indicated near this symbol.



This symbol indicates matters that the user must perform.
Specific instruction is indicated near this symbol.

1. Safety Precautions

List of symbols

Warning


General Warnings


Danger!: High Voltage


Danger!: High Temperature


Danger!: Moving Part


Danger!: Explosion Hazard

Caution


General Cautions


Caution: Electrical Shock!


Caution: Burns!


Caution: Heating Container without water!


Caution: Water Leak!



Caution: For water only


Caution: Toxic Chemicals

Prohibitions


General Prohibited Actions


No open flame


Do not disassemble


Do not touch

Compulsions


General Mandatory Actions


Connect grounding wire



Leveled Installation


Disconnect Power


Regular Inspection

1. Safety Precautions

Warning and Cautions

⚠ Warning

Never operate the Equipment in an atmosphere where flammable or explosive gas is present.

Never operate this Equipment in an atmosphere where flammable or explosive gas is present. This Equipment is not explosion-proof. It will cause fire/explosion. (Refer to “Chapter 13. List of Dangerous Substances” on P.68).

Ground always the Equipment.

Ground always this Equipment properly in order to avoid electric shock due to electrical leakage.

Turn the power of the controller and the ELB off immediately when you notice any abnormality.

Turn the power of the controller and the ELB off immediately and unplug Power Cord from outlet or disconnect the breaker of switch board of facilities, If smoke or strange smell is generated from this Equipment by chance. It may cause fire or electrical shock.

Do not operate at Power Cord/Power Cable bundled state.

Do not operate at Power Cord/Power Cable bundled state. If it is operated in such a manner, it will overheat, and then cause fire.

Do not damage Power Cord/Power Cable.

Do not damage Power Cord/Power Cable by bending, pulling, or twisting with force. It may cause fire or electric shock.

Never use an explosive or a combustible substance.

Never use an explosive or a combustible substance or any substances that contain such a substance. Otherwise an explosion or a fire may result.

Never disassemble nor modify the Equipment.

Never disassemble nor modify this Equipment. Those actions may cause malfunction, fire or electric shock.

Never touch high temperature sections.

Never touch high temperature sections. Some sections of this Equipment are heated during and right after operation. Watch out for getting burned.

Prohibit to be connected with multiple Power Cords/Power Cables in single outlet.

May cause heat generation or fire on power line, if multiple Power Cords/Power Cables are connected with extension cord reel or in single outlet. Besides, may drop input voltage to this Equipment, and not keep its performance and proper temperature control.

⚠ Caution

Turn immediately the power of the controller and the ELB off at thundering.

Turn immediately the power of the controller and the ELB off at thundering. If not, it may cause fire or electric shock.

2. Before operating the Equipment

Precautions when installing the Equipment

1. Choose proper place for installation

Do not install this Equipment in the place where:

- the location is rough, dirty or un-leveled.
- flammable gas, explosive gas or corrosive gas will be generated.
- ambient temperature will be more than 35℃ or less than 5℃.
- ambient temperature will fluctuate.
- Liquid may splash
- there is excessive humidity and dusty.
- there is direct sunlight.
- there is constant vibration.
- outside the building.
- **power supply is instable.**

Install the Equipment(s) at the place with sufficient space as specified as below
Take special care around the exhaust ports which are located on the ceiling of the main unit for models DNE401/411 and DNE601/611, and at the back of the main unit for models.

① DNE401/411/601/611

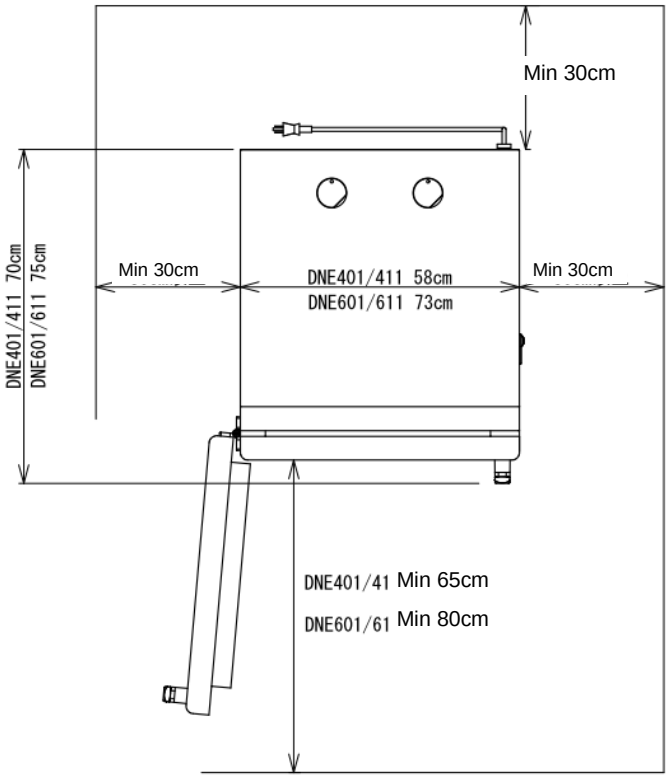

2. Before operating the Equipment

Precautions when installing the Equipment

1. Take care for the place and the environment of installation.

② DNE811

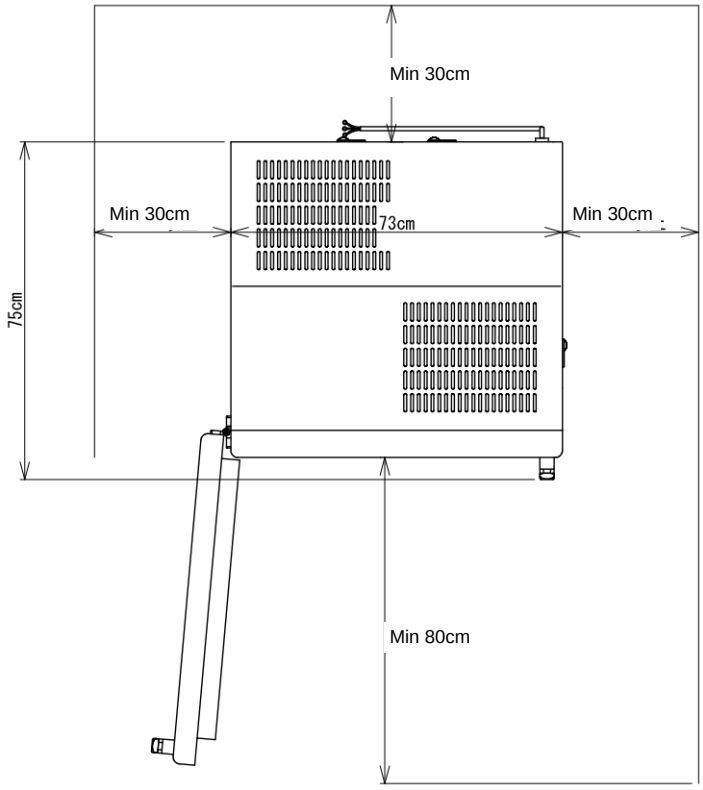

③ DNE911

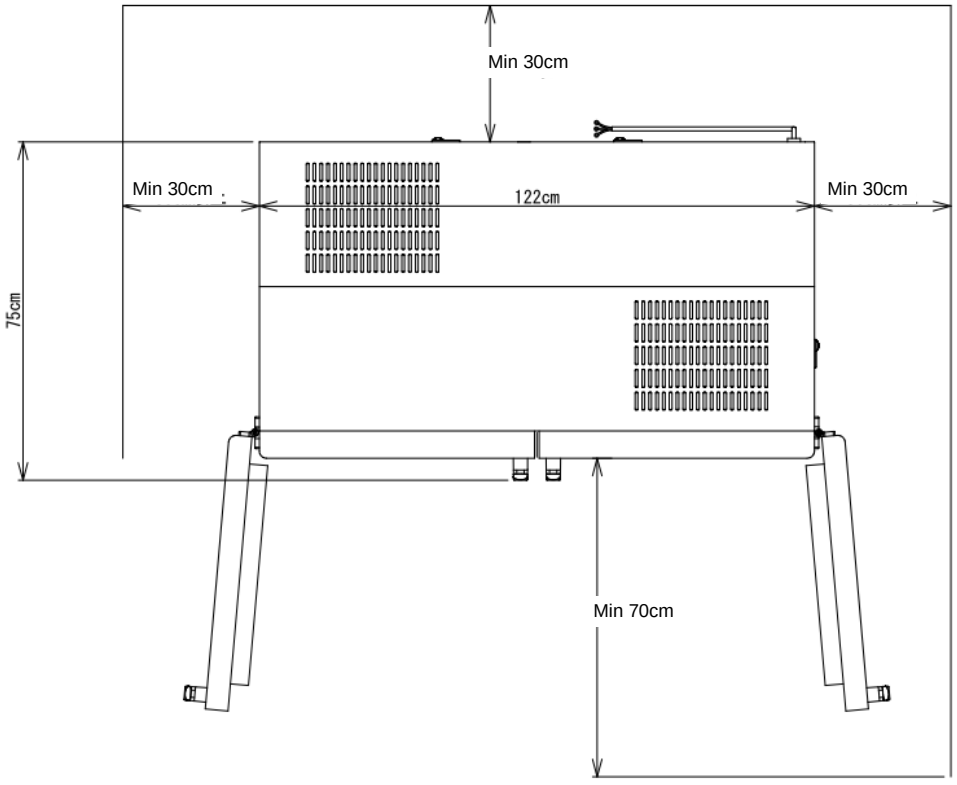

2. Install the Equipment on leveled location.



Install this Equipment on leveled floor. If it is installed on rough and/or slope floor, vibration or noise will be occurred, and unexpected trouble and malfunction may be happened.

Weight of this Equipment is as follows:
DNE401/411；approx. 63 kg、DNE601/611；approx. 77kg、DNE811；approx. 92kg、DNE911；approx. 185kg です。
Handle this Equipment carefully by two people at least at the transportation and the installation
Models DNE811 and DNE911 have caster wheels and adjusters. Make sure that the adjusters are lifted before transportation and move only slowly taking care for gaps.

3. Implement safety measures when installing the unit.

May be injured by moved and/or fallen this Equipment down by earthquake and/or unexpected impact. Recommend to install this Equipment at the place away from the access door and to take other safety steps.

4. Set the Equipment adjusters.（DNE811, DNE911）

Set 2(two) adjusters underneath front bottom of this Equipment.

Set those adjusters by the following procedure after this Equipment installation.

① Turn each adjuster until securely sand on the floor.
② Check any gap between floor and 4(four) standing points.
③ Tighten each nut of its adjuster against to the nut above to prevent loosening.

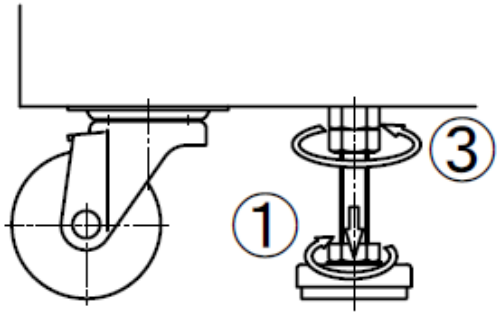

5. Implement appropriate safety measures after installation.

May be injured by moved and/or fallen this Equipment down by earthquake and/or unexpected impact.
Implement appropriate measures against falling down for safety.

6. Ventilate sufficiently for the Equipment

Do not operate the Equipment blocked in the radiating slit holes-Louver on its side and back panels and top panel. Refer to 3. “Name and Functions of each part” on page 8 for the location of Louvers.
Internal temperature will rise, causing a malfunction of the controller to compromise the performance as well as to cause a possible accident or a fire.

7. Do not operate at the location of liquid splashing.

Do not operate this Equipment at the location of liquid splashing. If Controller of this Equipment will be wetted by splashing any kind of liquid, it may cause accident, controller malfunction, electrical shock and/or fire.

8. Never operate in an atmosphere where flammable or explosive gas is present.

Never operate this Equipment in an atmosphere where flammable or explosive gas is present. This Equipment is not explosion-proof. Spark may be discharged by switching Earth Leakage Breaker (ELB) “ON（｜）” and “OFF（○）” and also relay during operation, and then it may cause fire or explosion. See Chapter 13. “List of Dangerous Substances” for flammable and explosive gases on page . 64

9. Connect Power Cord/Power Cable to receptacle or switch board of facilities.

Connect Power Cord/Power Cable to suitable receptacle/switch board of facilities according to electrical requirements as follows.

Electrical requirements:	DNE401	AC115V	single phase	50/60Hz	10A or more （ELB capacity ; 15A）
	DNE411	AC220V	single phase	50/60Hz	5.5A or more （ELB capacity ; 10A）
	DNE601	AC115V	single phase	50/60Hz	11A or more （ELB capacity ; 15A）
	DNE611	AC220V	single phase	50/60Hz	6A or more （ELB capacity ; 10A）
	DNE811	AC220V	single phase	50/60Hz	11.5A or more （ELB capacity ; 15A）
	DNE911	AC220V	single phase	50/60Hz	14A or more （ELB capacity ; 20A）

The operational voltage range is ±10%, the voltage range where the specified performance is guaranteed is rating±5%, the frequency is rating±1%.
※ Check line voltage of its receptacle/switch board of facilities and/or whether utilize the same line with other equipments or not, if this Equipment does not start up/operate even to turn Earth Leakage Breaker(ELB) On(｜). Take correct action for the solution, such as changing its power source away from other equipment.
May drop input voltage to this Equipment and cause to degrade its heating and also temperature control performance, if multiple power plugs/power cables are connected with single outlet.

2. Before operating the Equipment

Precautions when installing the Equipment

10. Take care when connecting the power cord.（DNE411, DNE611, DNE811, DNE911 AC220V specification）

These models are designed to operate at single-phase AC220V. Ask your dealer or an electrical technician for connection work of the power cord.
Connection requires professional knowledge and skills. A fire or an electrical shock may result if an unqualified person performs this work.

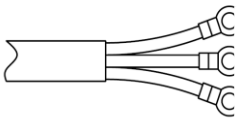

Core color	Wiring on the distribution board
White	Ground side
Black	Voltage side
Green	Earth

11. Must connect grounding wire properly.

Never operate this Equipment at bundled Power Cord/Power Cable. May heat its Cord/Cable and then cause fire, if operate at bundled it.
Do not modify, bend forcibly, twist or pull Power Cord/Power Cable. Otherwise, may cause fire and/or electrical shock.
Do not damage Power Cord/Power Cable by setting under any desk and/or chairs, or by pinching it between objects. Otherwise, may cause fire and/or electrical shock.
Do not place Power Cord/Power Cable close to kerosene heater, electric heater, or other heat-generating devices.
Insulation of Power Cord/Power Cable may burn and cause fire or electrical shock.

Turn immediately off Earth Leakage Breaker (ELB) and also disconnect Power Plug/breaker of switch board of facilities, if it is damaged such as exposure of core wire or disconnection.
May cause fire or electrical shock, if this Equipment is operated with damaged Power Cord/Power Cable.
Ask local dealer to replace Power Cord/Power Cable.
Connect Power Cord/Power Cable to appropriate receptacle or switch board of facilities.

12.（1）Must connect grounding wire properly.（DNE401、DNE601 AC115V specification）

- Must connect grounding wire properly to grounding line or terminal in order to avoid electrical shock due to electrical leakage.
- Never connect grounding wire to gas line pipe or water line pipe due to fire or electrical shock.
- Never connect grounding wire to telephone grounding line or to lightening conductor due to fire or electrical shock.
- Never connect multiple plug to single receptacle due to generating heat dangerously.

Connect to grounded receptacle.

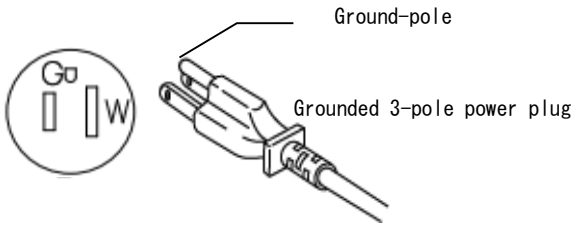

Receptacle with ground connection

12.（2）Must connect grounding wire properly.（DNE411、DNE611、DNE811、DNE911 AC200V specification）

- Require to ground by Electrical Equipment Technical Standards Section 19-calss D(Grounding Resistance Max. 100Ω) in Japan, if grounding terminal is not provided. Please contact with local dealer, local electrician, or Yamato Customer Service Center.
- Connect the terminals firmly to switch board of facilities or appropriate power plug.
- Power plug itself will not be included as an accessory of this Equipment. Connect to the power supply facilities that meet the electric capacity.

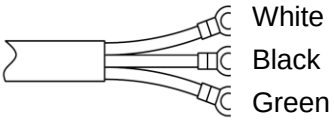

Core color	Wiring on the distribution board
White	Ground side
Black	Voltage side
Green	Earth

Never connect grounding wire to gas line pipe, water line pipe or telephone grounding wire due to fire or electric shock.

13. Never disassembly nor modify the Equipment.

Never disassemble nor modify this Equipment. Those actions may cause this Equipment malfunction, fire or electric shock.

14. Installation of shelf boards and samples (Do not put samples directly on the bottom of the chamber.)

The models DNE401/411 and DNE601/611 have two shelf boards, the model DNE811 has four boards and the model DNE911 has eight boards.
One of those boards (two for DNE911) is (are) screwed to the lowest shelf rung on the shelf pillar inside at the time of factory shipping.
Put other shelf boards to places you want in the bath.
There is a heater below the rectifying plate, which causes the temperature on and around the plate is always higher than the set temperature. Placing a specimen on the rectifying plate directly may damage the specimen or cause an accident from a high temperature.
If a specimen clogs the suction port of the rectifying plate, proper temperature control will be hampered and burning of specimens or a fire may result from an abnormal temperature. Be sure to place specimens on a shelf board and never attempt to place them directly on the rectifying plate.

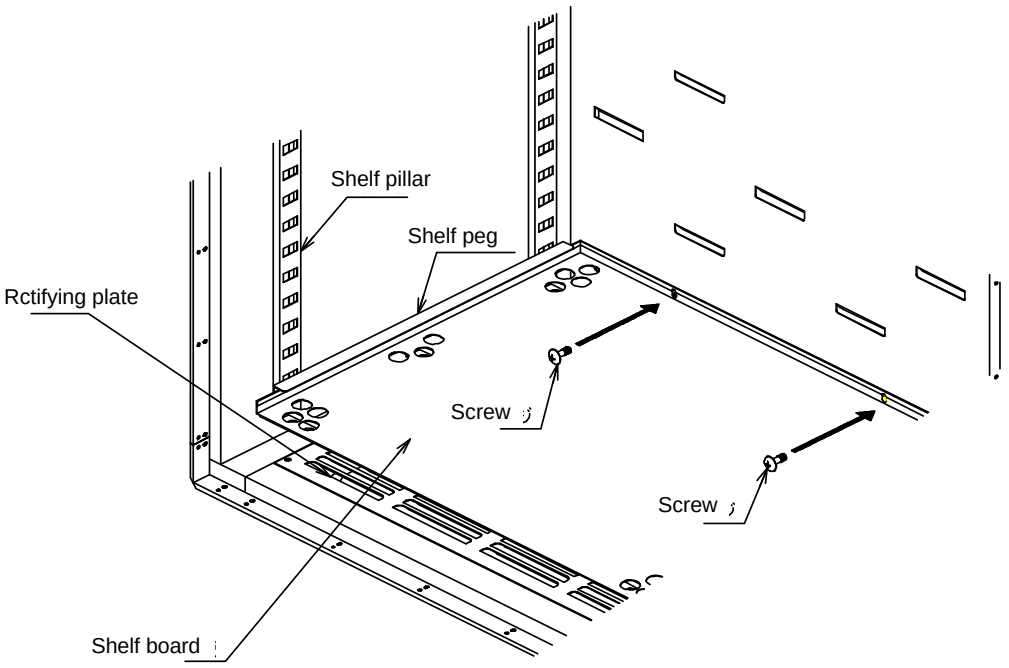

3. Names and functions of each part

Main unit

External view（DNE401/411、DNE601/611）

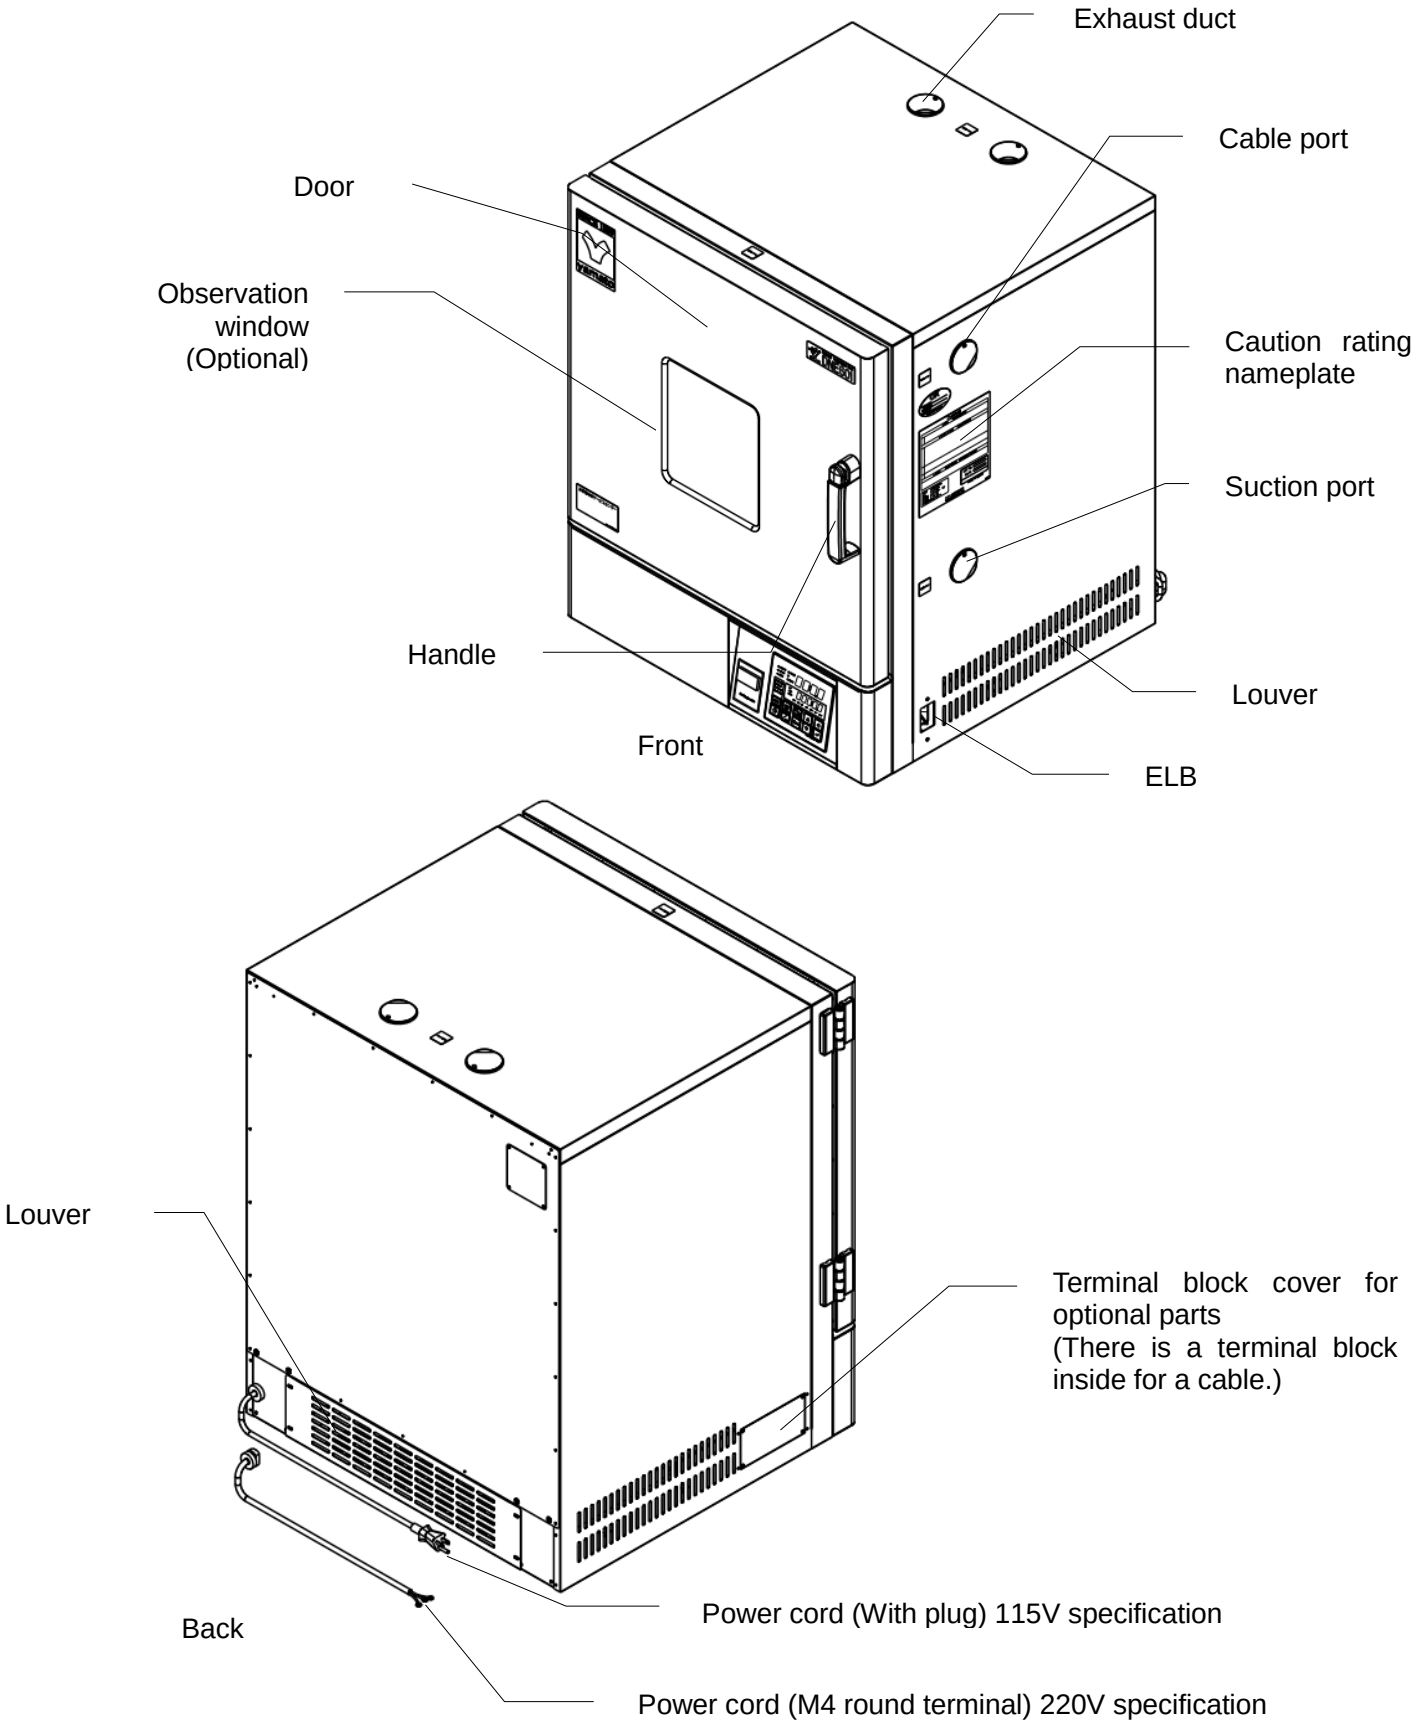

3. Names and functions of each part

Structure of the main unit

External view（DNE811）

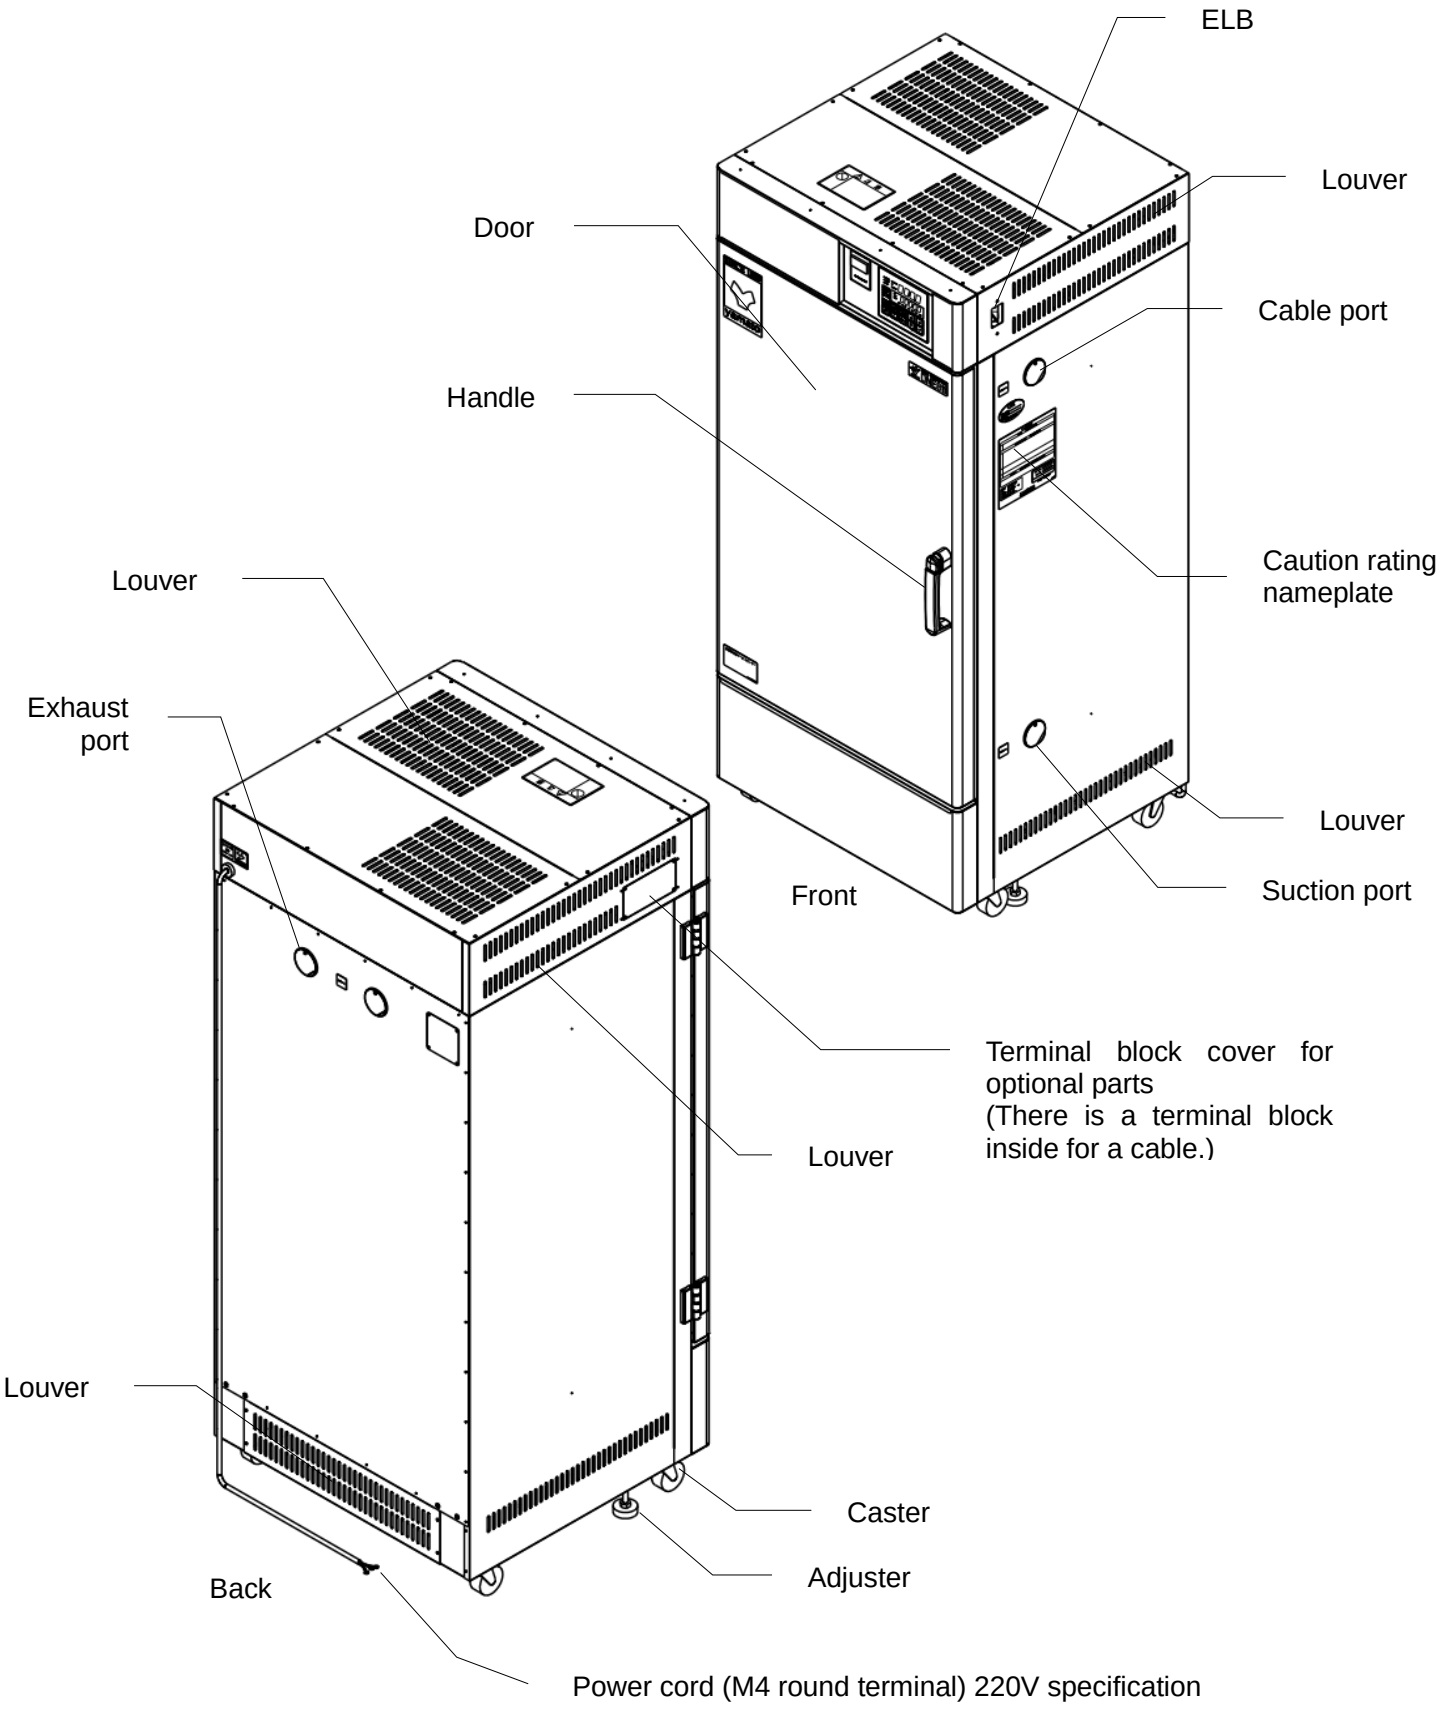

3. Names and functions of each part

Structure of the main unit

External view（DNE911）

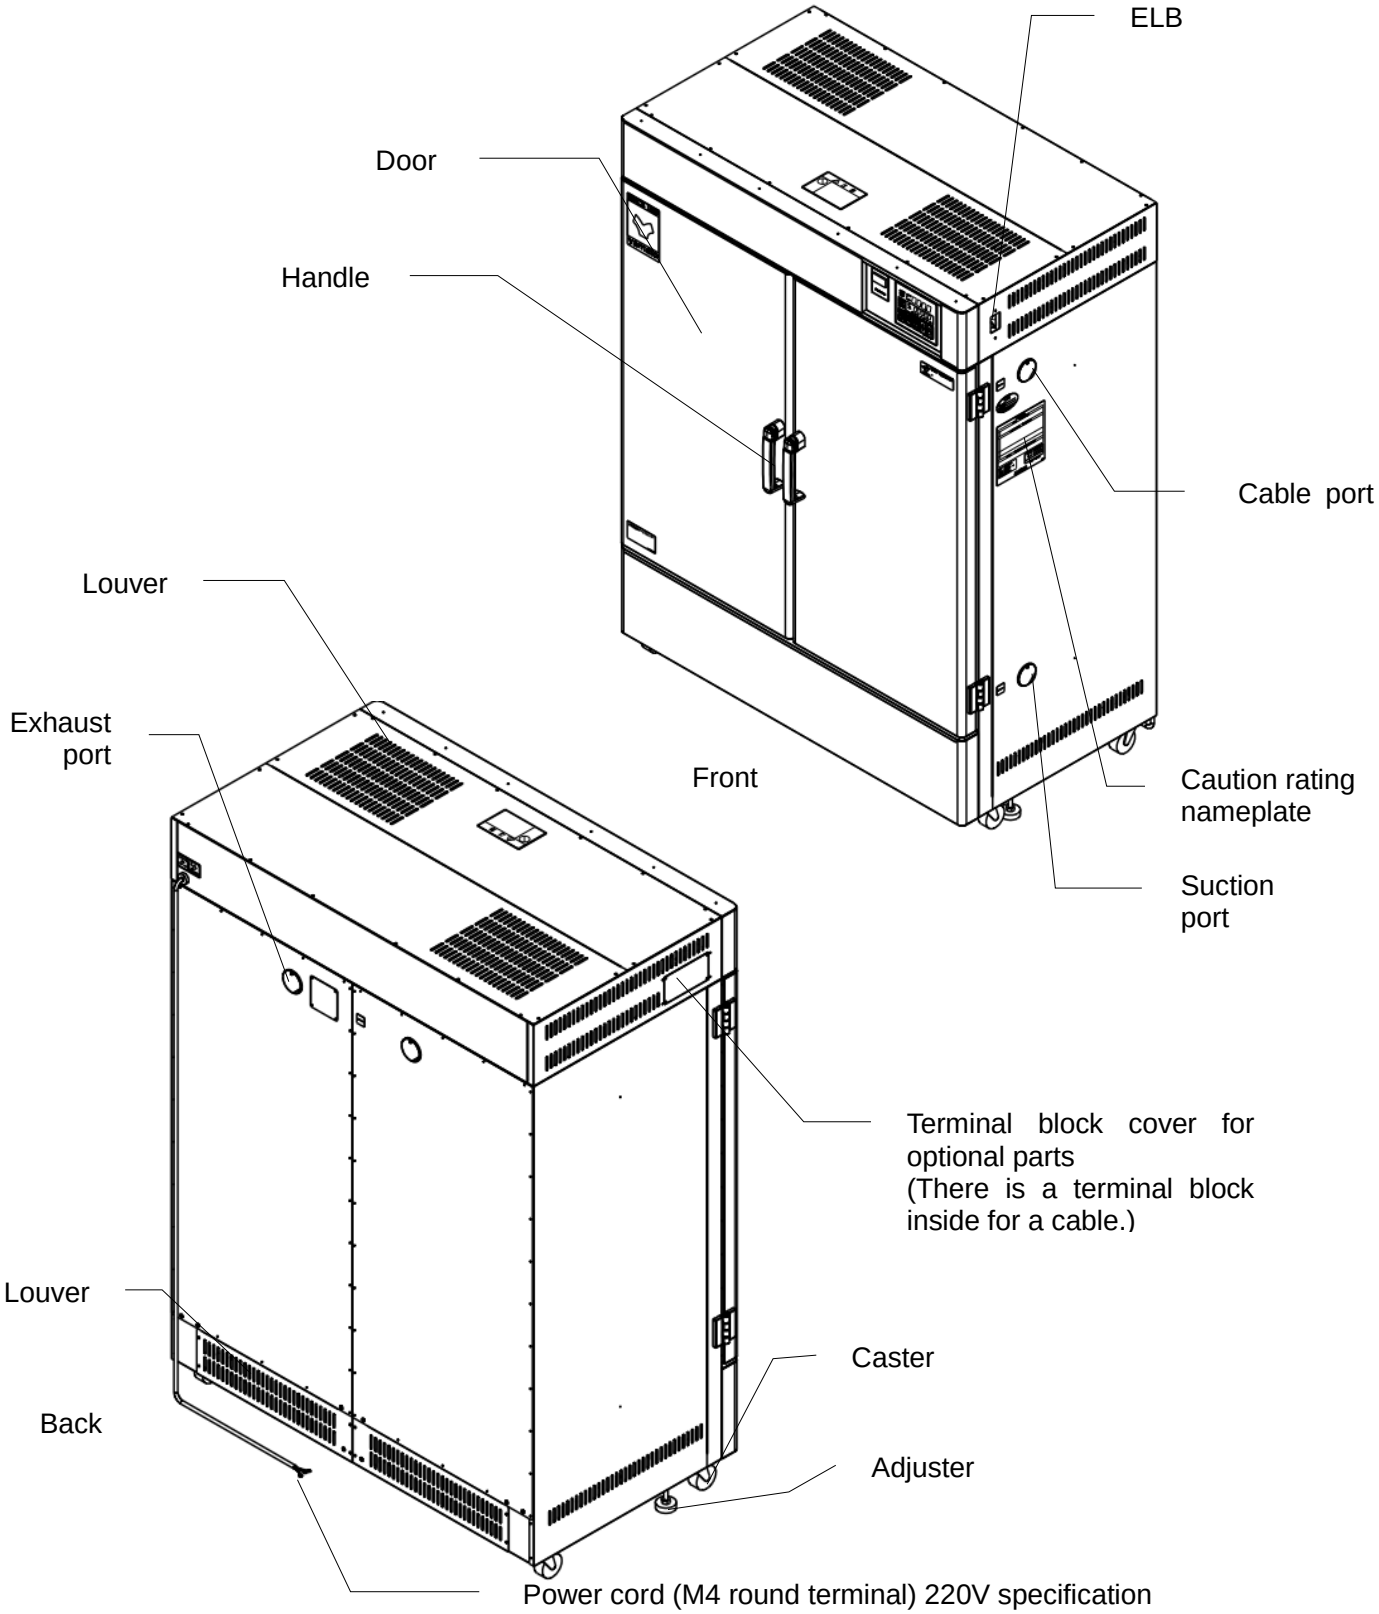

3. Names and functions of each part

Structure of the main unit

DNE401/411/601/611

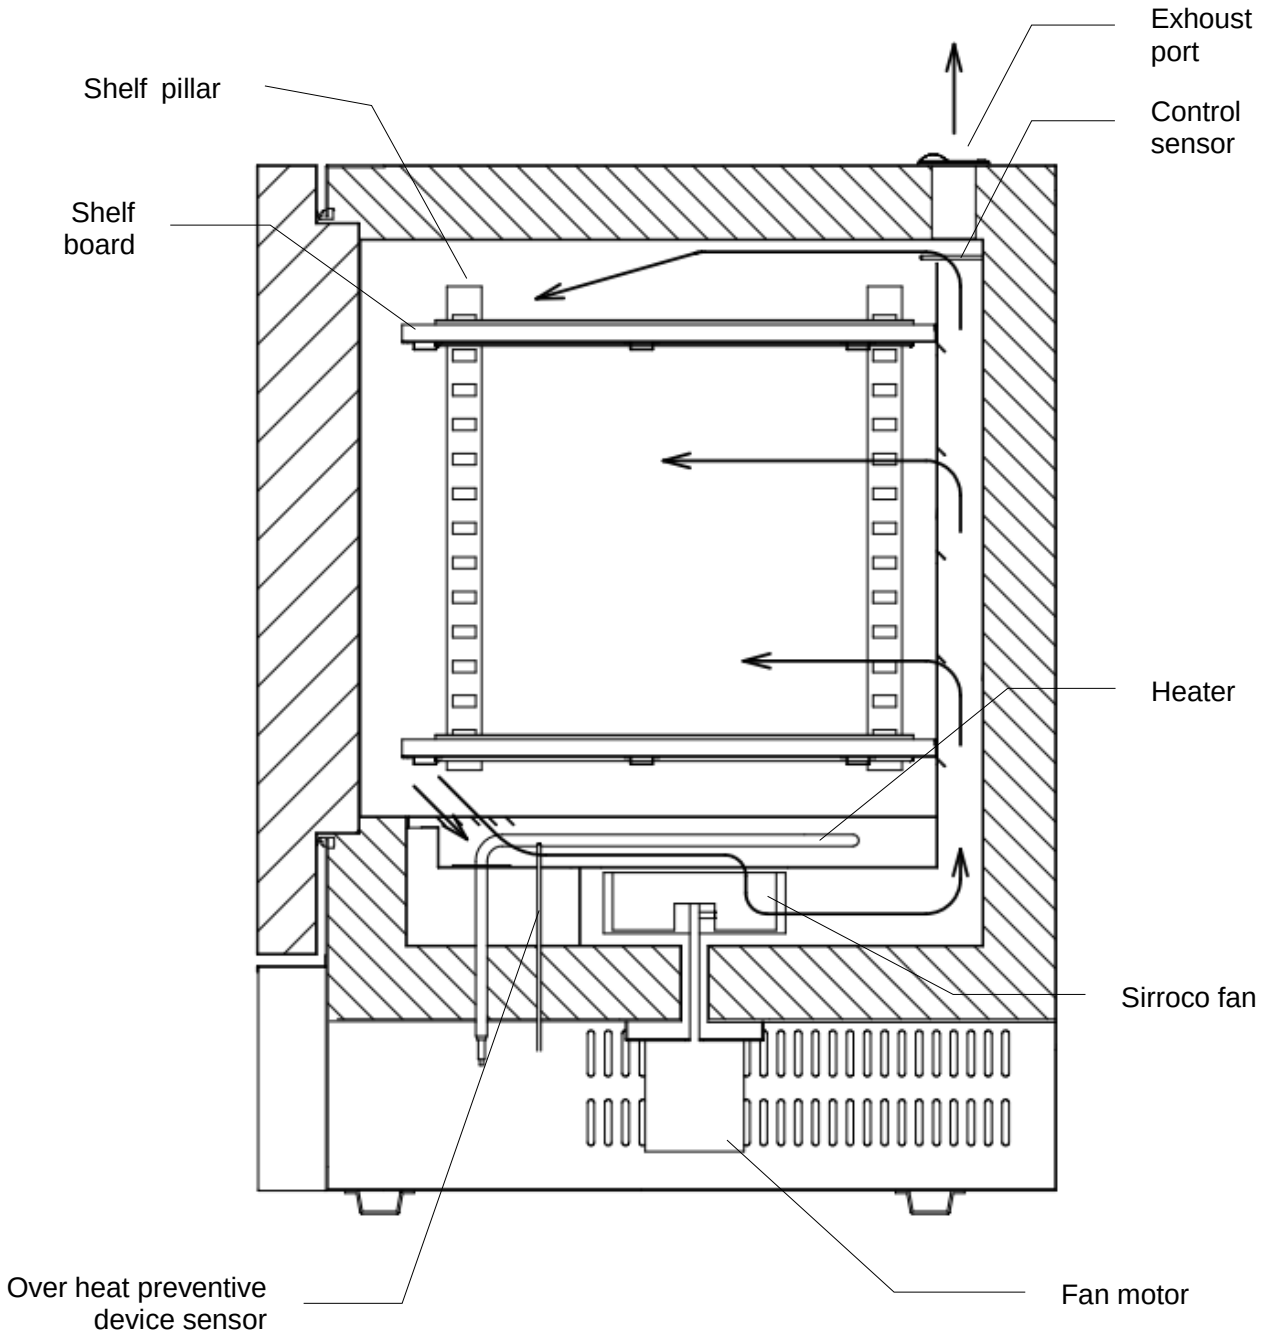

3. Names and functions of each part

Structure of the main unit

DNE811/911

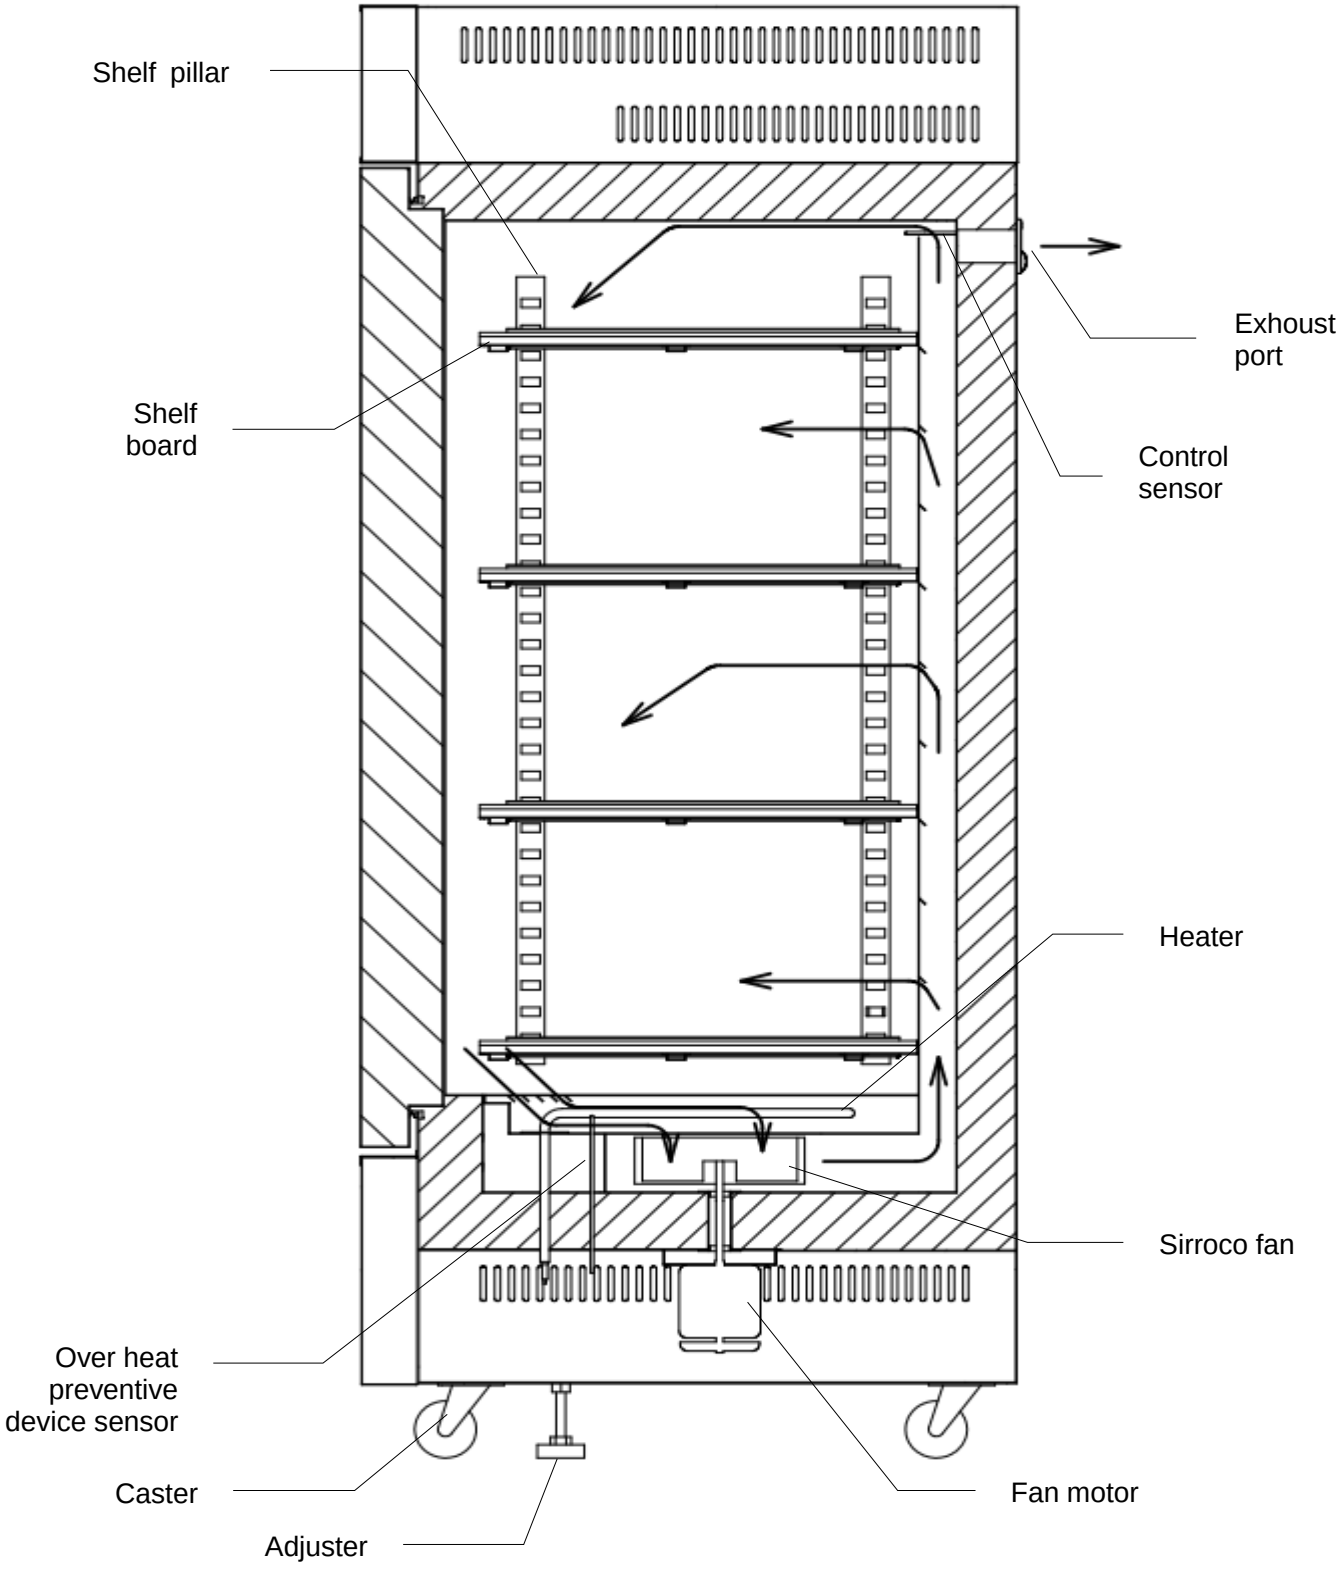

3. Names and functions of each part

Control Panel

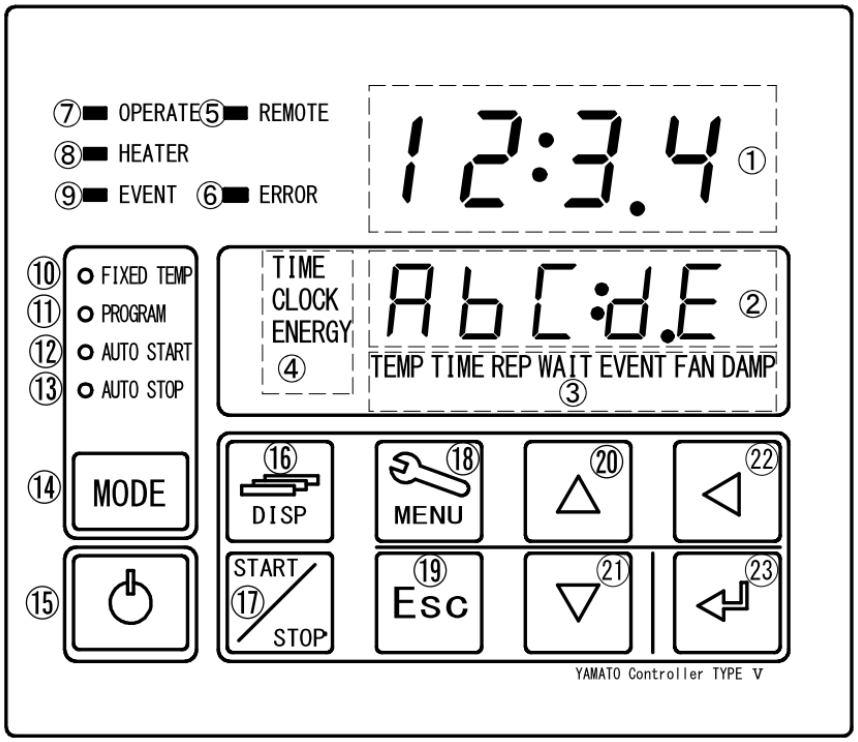

No	Наименование	Описание
1	Верхний дисплей	Отображает измеренную температуру в камере и номера ошибок
2	Нижний дисплей	Отображает целевую (заданную) температуру и различную информацию
3	Дисплей установок программ	Подсветка одной из ламп, выбранных на основе различных настроек.
4	Загорается при настройке продолжительности /времени и в режиме мониторинга	Загорается одна из ламп, выбранных из 3 (трех) различных настроек.
5	Индикатор REMOTE	Загорается в процессе дистанционного управления.
6	Индикатор ERROR	Загорается каждый раз при возникновении ошибки
7	Индикатор OPERATE	Горит непрерывно во время работы и мигает в режиме ожидания.
8	Индикатор HEATER	Мигает или горит, пока нагреватель находится под напряжением.
9	Индикатор EVENT	Горит при установке передачи данных о событиях (опция)
10	Индикатор FIXED TEMP	Горит при выбранном режиме постоянной температуры.
11	Индикатор PROGRAM	Горит при работе в режиме программирования.
12	Индикатор AUTO START	Светится при работе в режиме автоматического запуска.
13	Индикатор AUTO STOP	Светится в режиме автоматической остановки.
14	Кнопка MODE	Используется для выбора режима работы (⑩～⑬ на панели).
15	Кнопка включения контроллера	Включает контроллер в “Режим ожидания” или "Спящий режим".
16	Кнопка DISP	При удержании нажатой включает функцию мониторинга. При работе в меню настроек действует как кнопка возврата.
17	Кнопка START/STOP	Используется для запуска или остановки выбранной операции.
18	Кнопка MENU	Используется для доступа к установкам различных параметров.
19	Кнопка Esc	Используется для отмены операции или выхода из меню настроек без подтверждения изменений каких-либо параметров.
20	Кнопка ▲(Вверх)	Применяется для увеличения значения выбранного параметра.
21	Кнопка ▼(Вниз)	Применяется для уменьшения значения выбранного параметра.
22	Кнопка ◄	Применяется для перемещения поля ввода влево при вводе значений.
23	Кнопка ENTER	Используется для подтверждения ввода или выбора значения.

4. Operating procedure

Prior confirmation

1. Check the power supply and the ground wire.

Make sure to connect with this Equipment Power Cord/Power Cable to appropriate power source and to ground definitely.

2. Check the ELB.

Check if the ELB functions properly.
See “Maintenance method” on P.57 Chapter 6.
Check ELB performance once a month or before continuous long-term operation.
Tick current time on Bottom Screen of Control Panel at ELB ON(|).

3. Check the Independent Overheat Preventive device.

Make sure to set IOPD temperature more than 30℃ higher of Target Temperature in Chamber.
Check IOPD performance before continuous long-term operation. Refer to “Independent Overheat Prevention Device” on page 50.

4. About the handling of the exhaust port

When you use the exhaust port on the ceiling of the main unit (on the rear for the models DNE811 and DNE911), open the suction port at the lower point on the right side of the unit.
Take extreme care when opening or closing the exhaust or the suction ports, both of which will be hot and may cause a burning.

The controller of this product keeps backup memory for customer settings including the calendar, timer settings, or operation programs using the built-in battery. This battery will hold data for about five years even if you turn power of the unit off. (Battery life will change depending on specific operating conditions.)

※ Contact with Yamato local dealer or Yamato Customer Service Center in case of replacing this battery. Make backup data file of the existing program data in case of being processed program mode. See “Backup data saving/reading out/resetting” on page 44.

Set up date & time properly in accordance with local time after replacing with new battery.

1	**Turn on power.** 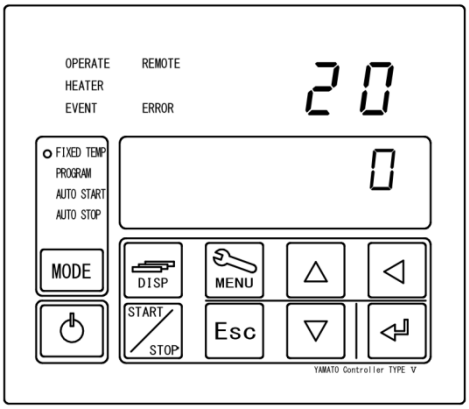	Turn on(|) Earth Leakage Breaker(ELB) on the right side of this Equipment. Bottom Screen of the controller indicate clock time. This is “**Idle State**” of this Equipment. Press and hold ⏻ key to display standby screen. This is “**Standby State**” of this Equipment. Indicate read temperature in Chamber on Top Screen and indicate target temperature on Bottom Screen. The fan motor will start.
2	**Display year/month/date and time on each Screen by MENU key.** 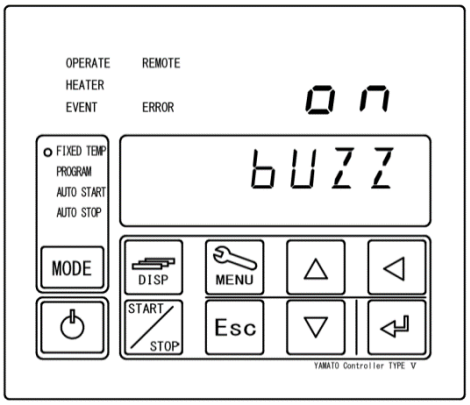	① Press MENU key. ② Press MENU key few times until [FUNC] is indicated on Bottom Screen and then press ↵ key. ③ Press MENU key to display year on Top Screen and month/date/time on Bottom Screen, When Bottom Screen show [BUZZ]. The DISP key can be used to reverse the process. 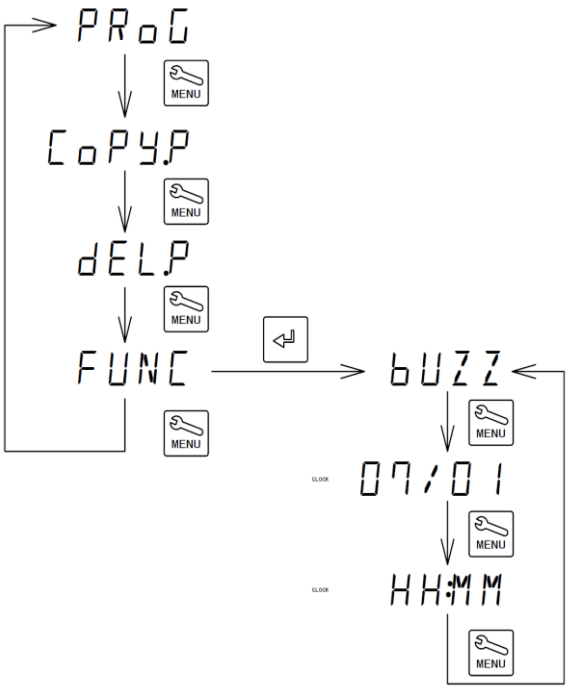

Date & Time setting

3	**Set up year and month/date.** 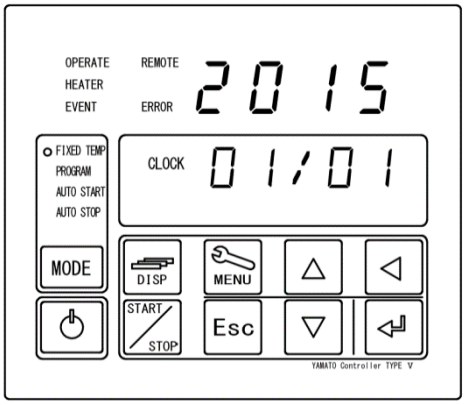	Set up year/month/date and clock time. ① Flash CLOCK lamp. Year and month/date are displayed on Top and Bottom Screen respectively. ② Press [↵] key. ③ Set calendar year with [△][▽] keys and then press [↵] key. ④ Set month/date with [△][▽] keys and then press [↵] key. ※ Press [◁] key to shift setting position.
4	**Set up clock time (described according to 24-hour time).** 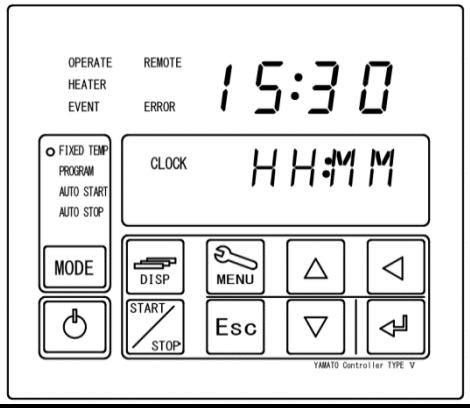	① Press [MENU] key. ② Press [↵] key, set clock time with [△][▽] keys, and then press [↵] key. Enter clock time in accordance with 24-hour time. ※Press [◁] key to shift setting position. ③ Press [Esc] key twice to get back to initial screen after completion of those settings.

Buzzer function selection

1	**Select buzzer function.** 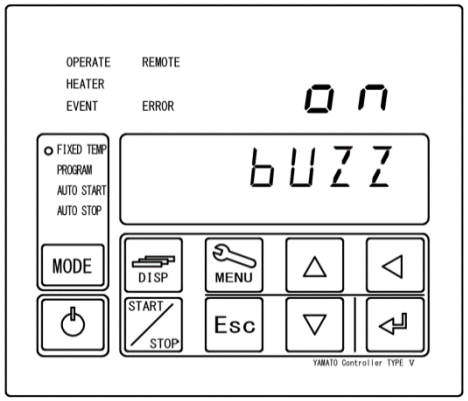	① Press [MENU] key and [↵] key to display [bUZZ] on Bottom Screen with same process of clock time setting described in [2], and then press [↵] key. ② Select one from three types of buzzer function with [△][▽] keys and then press [↵] key. ON: Activate clicking sound for all keys and beeping sound for alarm. (Set “on” initially at Factory shipment) CLR :Activate only clicking sound for "Controller POWER key and ENTER key", and beeping sound for alarm. OFF: Deactivate clicking sound for all keys. **※ The buzzer will sound when an error occurs even if you set “bUZZ” to a setting other than ON.** ③ Press [Esc] key twice to get back to initial screen after completion of those settings.

Operating procedure

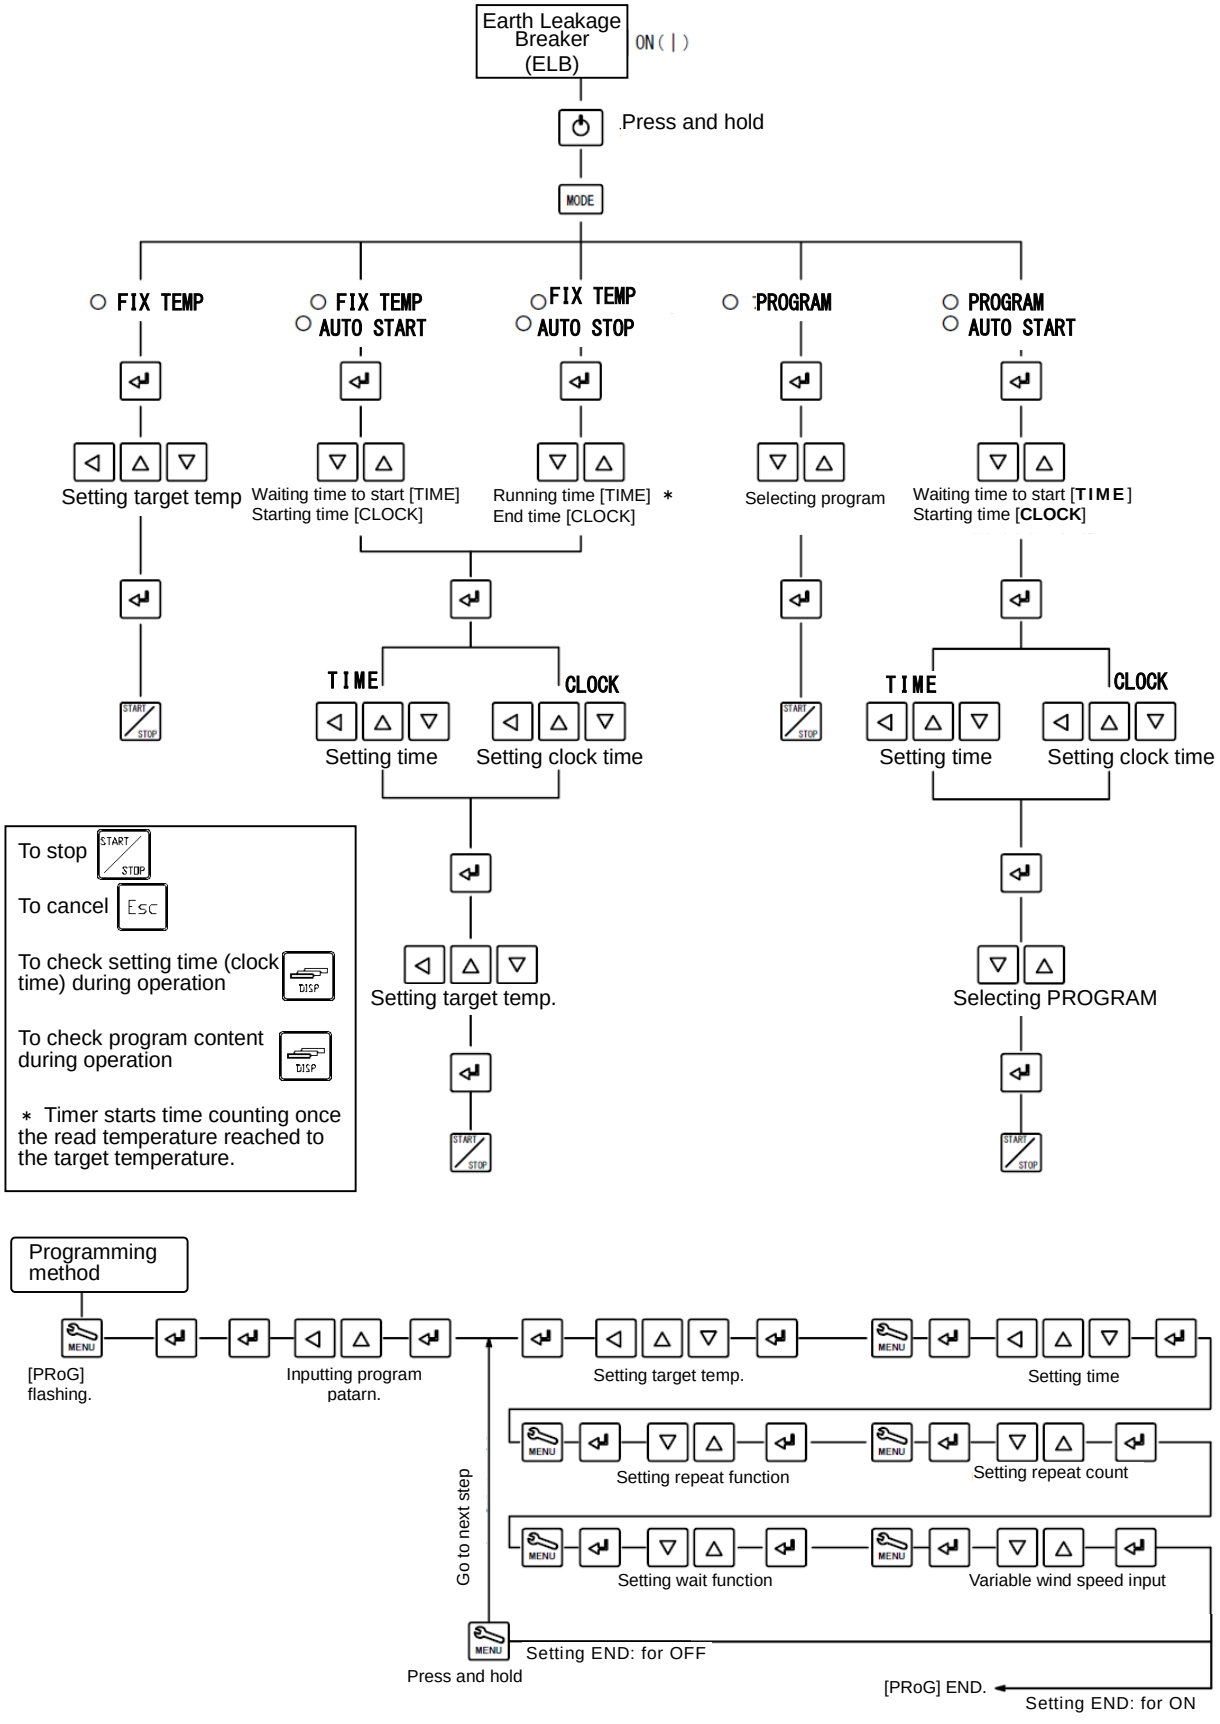

FIXED TEMP(Fixed Temperature) mode is to keep running at target temperature. It will keep running until operation stops.

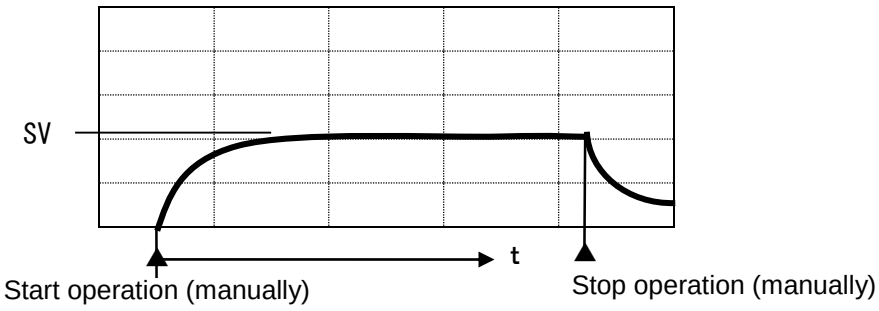

SV: Set Value (Target Temperature), t : Time

Set Fixed Temperature mode.

1 Turn on the controller.

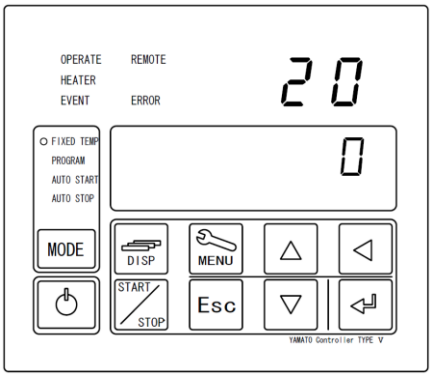

Turn on Earth Leakage Breaker(ELB) on(|) the left side wall of this Equipment. (**Idle State**)

Press and hold [⏻] key to turn on the controller power. (**Standby State**)

Indicate read temperature in Chamber on Top Screen and indicate target temperature on Bottom Screen.
The fan motor will start.

2 Select Fixed Temperature Operation.

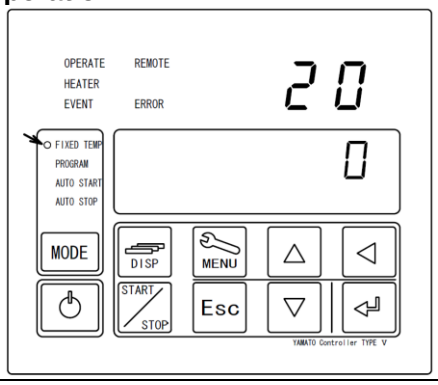

Press [MODE] key to turn FIXED TEMP (Fixed Temperature mode) lamp on.

※Fixed Temperature mode would be selected at first time operation. After that, most latest operated mode is selected.

3 Set target temperature.

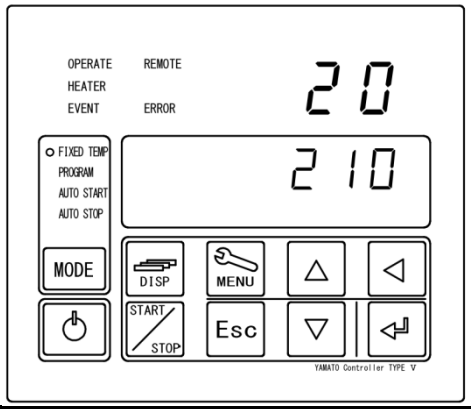

① Press [↵] key. Then flash changeable digits on Bottom Screen.
② Shift to flashing digit with [◁] key and then change to desired digit with [△] [▽] keys.
Operating Temperature Range : 0～220℃

③ Press [↵] key when target temperature setting has completed.
Press [Esc] key once or twice to cancel its setting.

4 Starting operation

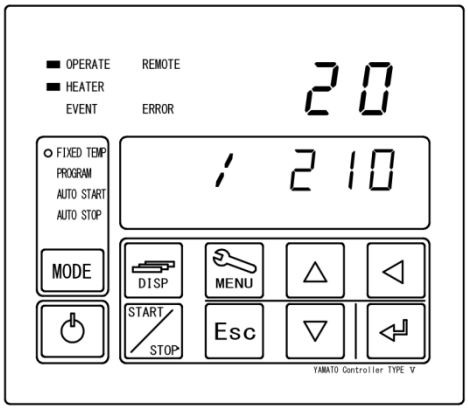

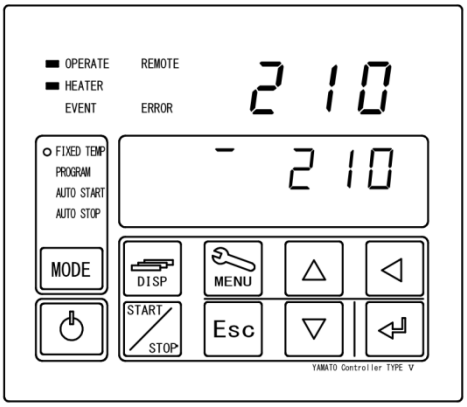

Use the START/STOP key to start operation.

The OPERATE (operating) lamp and the HEATER (heater) lamp will come on and temperature control starts.

※ Bottom screen during heating

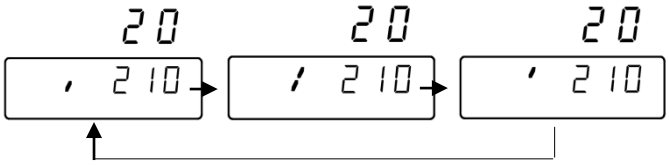

※ Bottom screen while temperature is stable

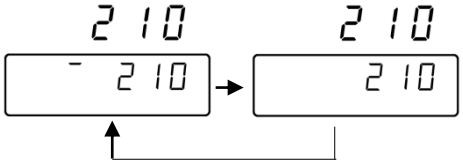

※ Bottom screen while temperature is decreasing

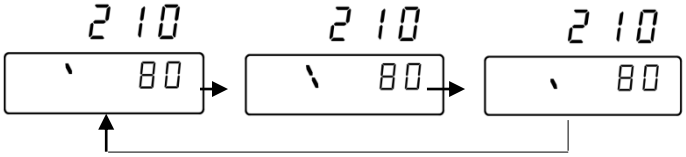

5 Stopping operation

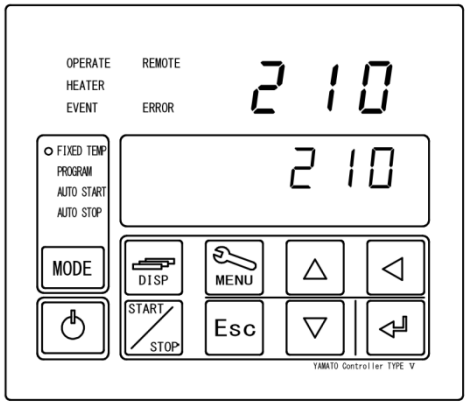

Use the START/STOP key to manually stop operation.
The screen will return to the one before starting operation when you stop operation.

※ The fan motor keeps operating even operation is stopped. Press the ⏻ key longer to turn the controller power off to stop the fan motor.

6 Stop running Fixed Temperature Opeation with timer setting.
（Quick Automatic Stop Function）

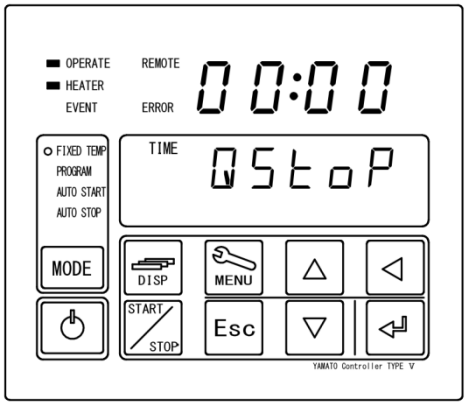

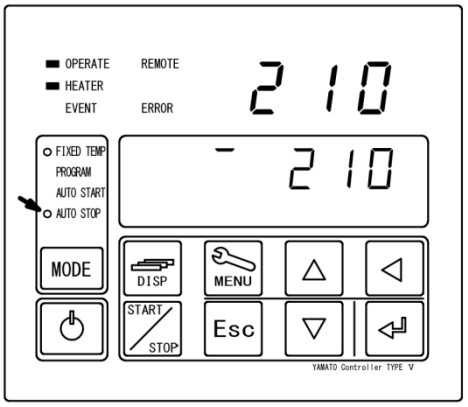

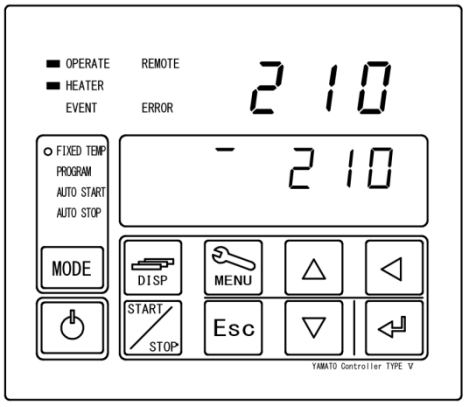

Quick Automatic Stop Function is to stop automatically running Fixed Temperature Operation.

① Press [MODE] key at running Fixed Temperature operation.

② Show [QSTOP] on Bottom Screen and start [TIME] lamp flashing on the left top of Bottom Screen.

③ Select the method to stop from TIME/CLOCK with [△] [▽] key and then press [↵] key.

④ Set TIME（capable setting range: 0～99hr：59min）or CLOCK (according to 24-hour time) on Top Screen and then press [↵] key.

Example 1. Setting time to stop:
Operation is stopped automatically in 35 hours and 30 minutes once temperature reached to target temperature.

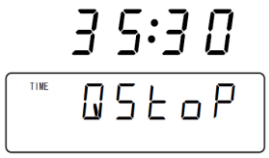

Example 2. Setting clock time to stop:
Operation is stopped automatically at 15:00.

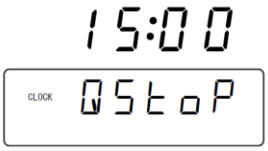

⑤ The AUTO STOP (Auto Stop) lamp comes on and the Auto Stop function starts.

①

※ You can use the [DISP] key to check the remaining operation time/stop time information on the Bottom screen.

※ Screen to check the remaining operation time

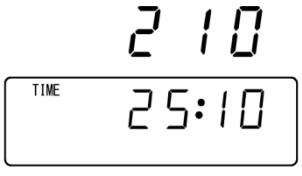

※ Screen to check the operation stop time

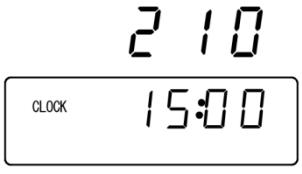

Press the [DISP] key again or wait for about 10 seconds to return to the original status.

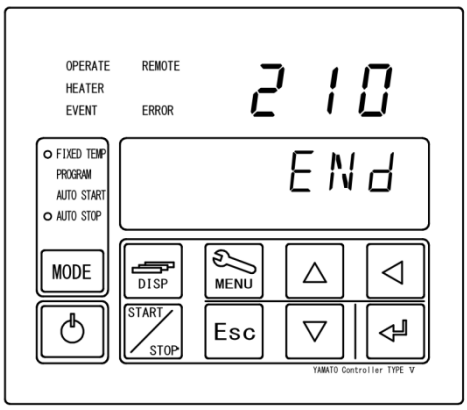

⑥ When the set time duration elapses or the time comes, the Bottom screen will indicate [END] and operation will stop.

⑦ Use the START/STOP key to eliminate the [END] indication.

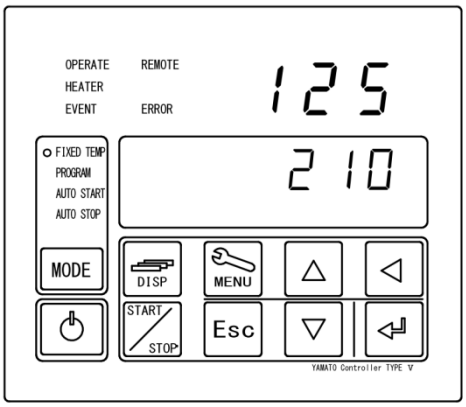

※ When you stop operation, the screen will return to the one before starting operation.

※ The fan motor keeps operating after operation has been stopped. Press the ⏻ key longer to turn the controller power off to stop the fan motor.

This operation mode is used to automatically stop operation by setting the timer.

The operation mode where operation is automatically stopped by setting an operation duration.(when you set an operation duration)

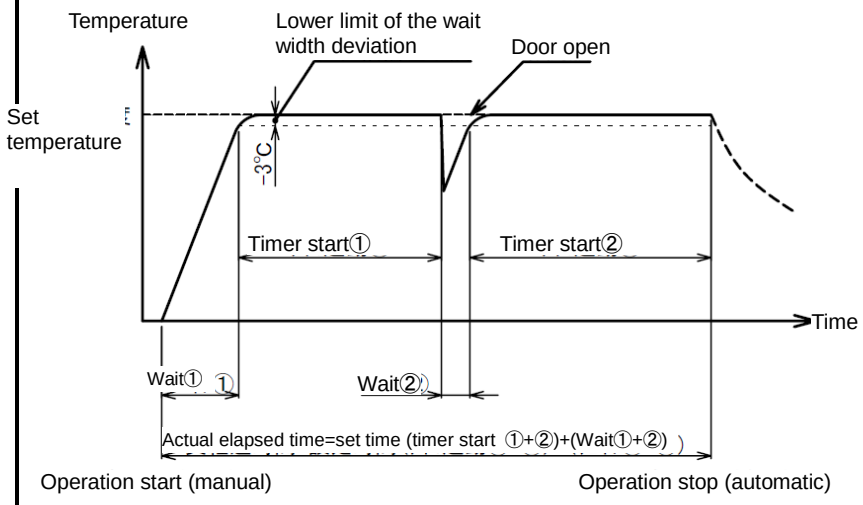

※ When you set a time, the wait function will be activated, the mode will remain “waiting” without counting down the time until temperature indication will be within the wait deviation range between -3℃ and +6℃ to the set temperature. Counting down starts when the temperature in the chamber reaches the temperature -3℃ (indication) to the set temperature.
Even if the temperature in the chamber (indication) the mode will be “waiting” if the lower limit of the wait width deviation is exceeded and time counting down will not occur until the temperature in the chamber (indication) returns.

Operation mode where operation stops automatically at the set time (when an operation time is set)

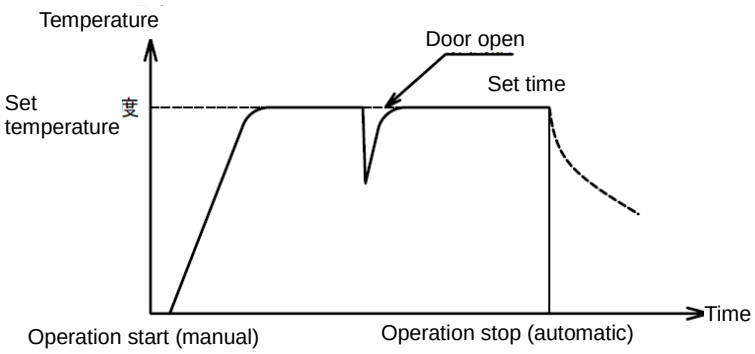

※ The wait function will not work if you select a time setting. Operation will stop when the set time comes. The time you can set is up to 24 hours from the present time.
When a power failure occurred before the set time and continued after that and then the unit recovered automatically, operation will continue to the next set time so remember to stop operation manually.

Set Automatic Stop mode

1 Turn on the controller

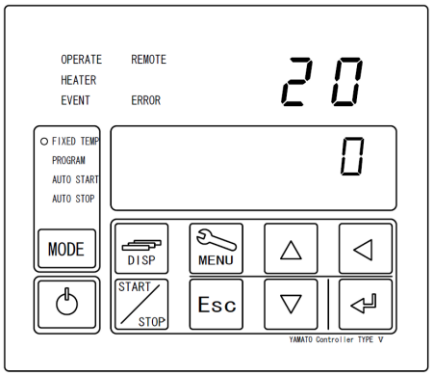

Turn on（｜）Earth Leakage Breaker (ELB) on the upper right side wall of this Equipment. (**Idle State**)

Press and hold ⏻ key to turn on the controller power.

Indicate circulating liquid temperature in Chamber on Top Screen and indicate target temperature on Bottom Screen.
The fan motor will start.

2	**Selecting Automatic stop Operation** 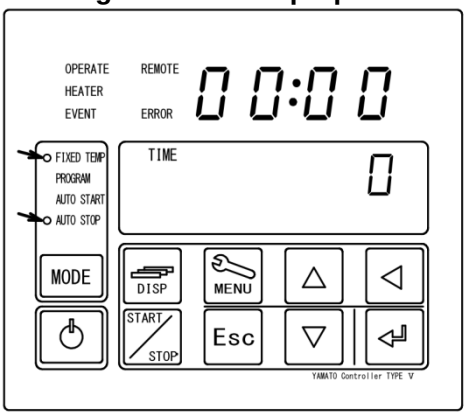	Press MODE key to turn FIXED TEMP (Fixed Temperature mode) and AUTO STOP (Automatic Stop mode) lamp on. ※Fixed Temperature mode would be selected at first time operation. After that, the latest operated mode is selected.
3	**Set target temperature and operation running time / clock time to stop.**	① Press ↵ key. Select stop method from TIME/CLOCK with △ ▽ keys and then press ↵ key. ② Set TIME（capable setting range: 0～99hr：59min）or CLOCK (according to 24-hour time) on Top Screen and then press ↵ key. ③ Set target temperature on Bottom Screen and then press ↵ key.
	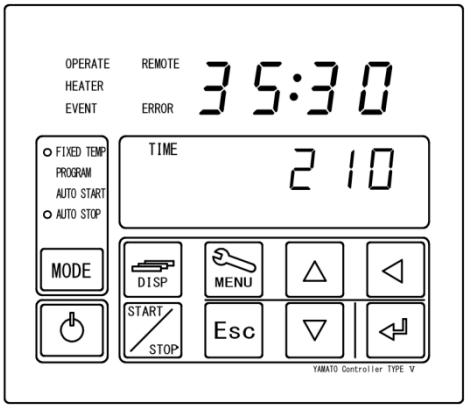	**Example 1.** Setting running time: Operation is stopped automatically in 35 hours and 30 minutes once temperature reached to 210 ℃ of target temperature.
	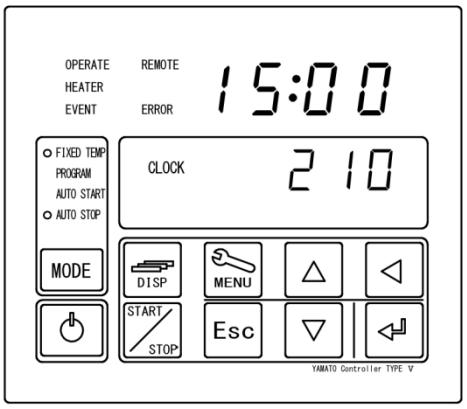	**Example 2.** Setting clock time to stop: Start operation and reach to 210℃ in Chamber of target temperature, and operation is stopped automatically at 15:00.

4 Starting operation

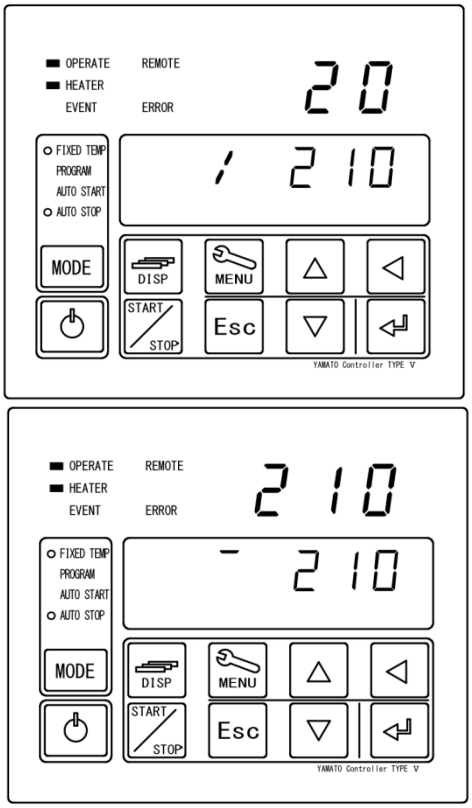

Use the START/STOP key to start operation.

The OPERATE (operating) lamp and the HEATER (heater) lamp will come on and temperature control starts.

※ You can use the DISP key to check the remaining operation time/stop time information on the Bottom screen.

※ Screen to check the remaining operation time

※ Screen to check the operation stop time

Press the DISP key again or wait for about 10 seconds to return to the original status.

5 Cancelling operation

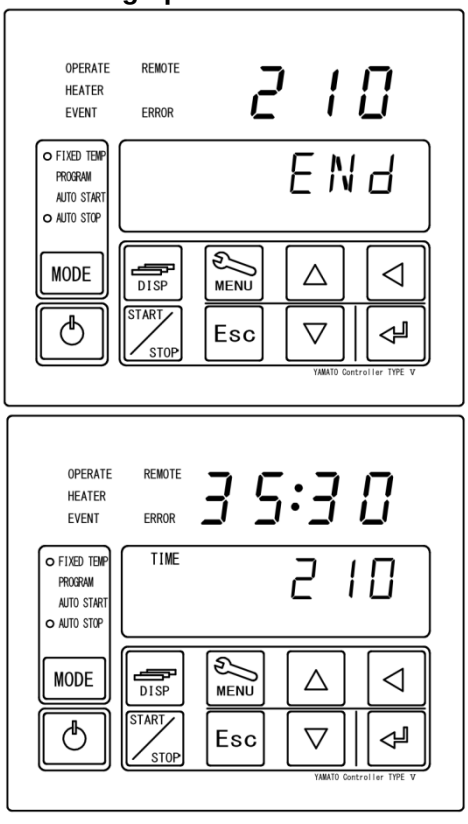

① When the set time duration elapses or the time comes, the Bottom screen will indicate [END] and operation will stop.

② Press the START/STOP key to eliminate the [END] indication.

※ When you stop operation, the screen will return to the one before starting operation.

※ The fan motor keeps operating after operation has been stopped. Press the ⏻ key longer to turn the controller power off to stop the fan motor.

AUTO START (Automatic Start) mode is to start operation automatically with timer. This operation does not stop automatically once its start. Stop manually, if required.

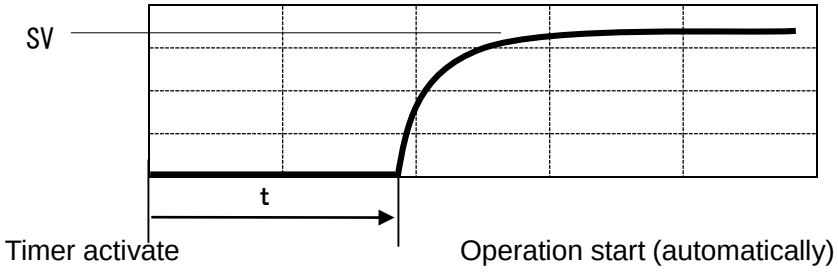

SV ; Target temperature　t ; Auto start setting time (time)

Set Automatic Start mode

1　Turn on the controller.

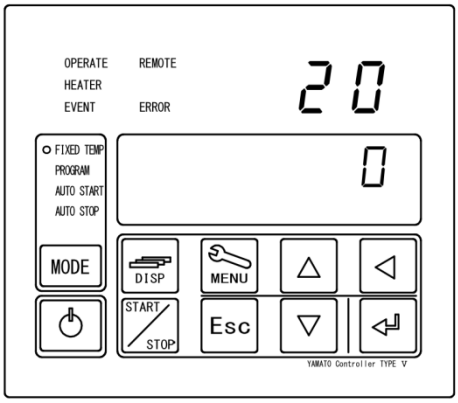

Turn on（｜）Earth Leakage Breaker(ELB) on the right side wall of this Equipment. (**Idle State**)

Press and hold [⏻] key to turn on the controller power. (**Standby State**)

Indicate circulating liquid temperature in Chamber on Top Screen and indicate target temperature on Bottom Screen.
The fan motor will start.

2　Select Automatic Start mode

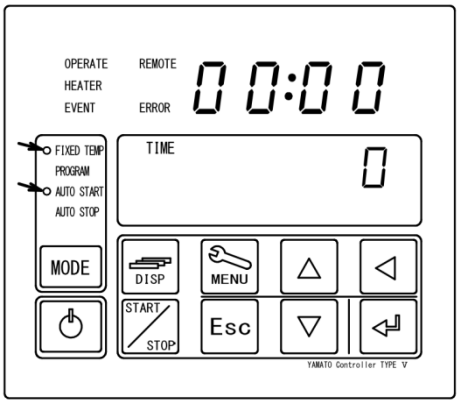

Press [MODE] key to turn FIXED TEMP (Fixed Temperature mode) and AUTO START (Automatic Start mode) lamp on.

※ Fixed Temperature mode would be selected at first time operation. After that, the latest operated mode is selected.

3　Set target temperature and operation wait time / clock time to start

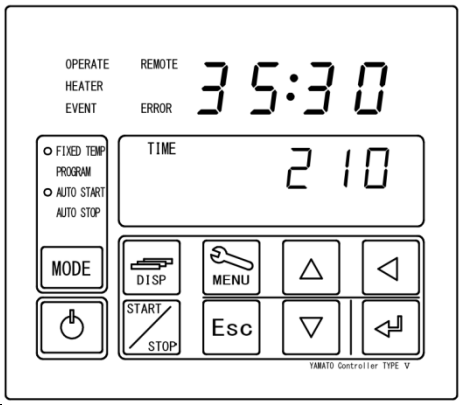

① Press [↵] key.
Select start method from TIME/CLOCK with [△] [▽] keys and then press [↵] key.

② Set TIME（capable setting range: 0～99hr : 59min）or CLOCK (according to 24-hour time) on Top Screen and then press [↵] key.

③ Set target temperature on Bottom Screen and then press [↵] key.

Example 1. Setting wait time to start:

Press START/STOP key to count timer for 35 hours and 30 minutes, and then start automatically operation to reach to 250℃ of target temperature in

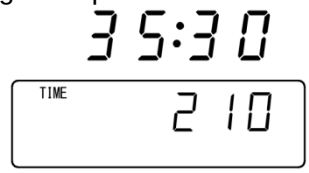

Example 2. Setting clock time to start:

Press START/STOP key to start automatically operation to reach to 250℃ of target at temperature at 15:00.

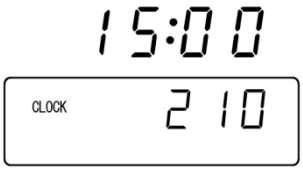

4 Starting operation

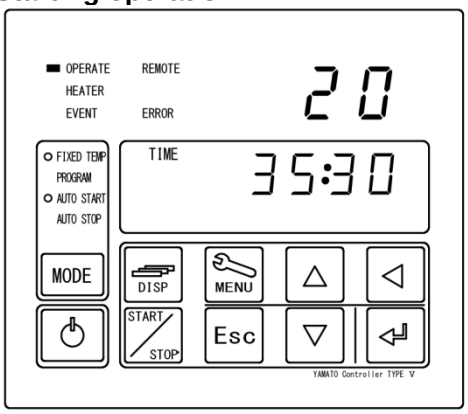

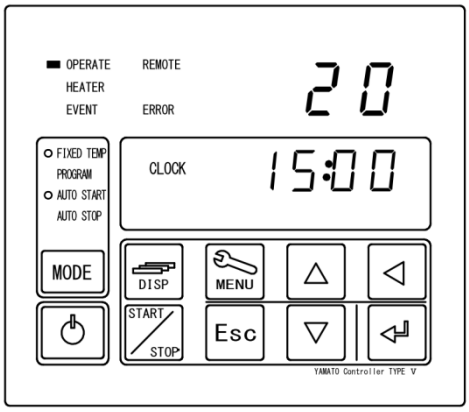

① Press START/STOP key to be standby mode for starting operation.

② Press START/STOP key to be standby mode for starting operation.

※ ※ The Top screen shows the present temperature in the chamber while the Bottom screens shows the operation wait duration and the operation start time. When you have selected a wait time, counting down of the set time starts.

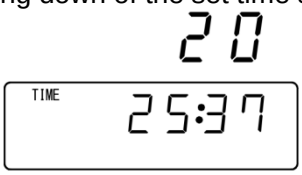

※ You can check the set temperature on the Bottom screen using the DISP key.

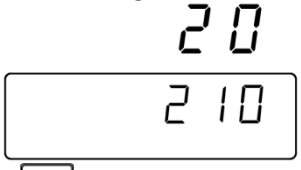

Pressing the DISP key again will make the Bottom screen show the operation wait duration and the operation start time.

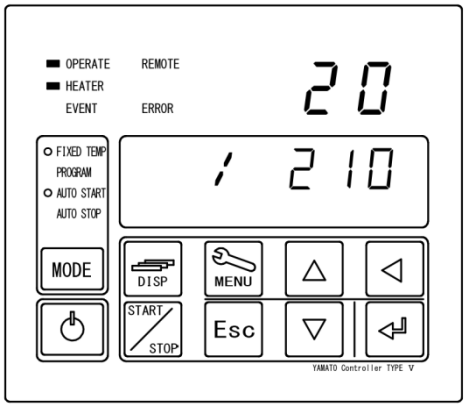

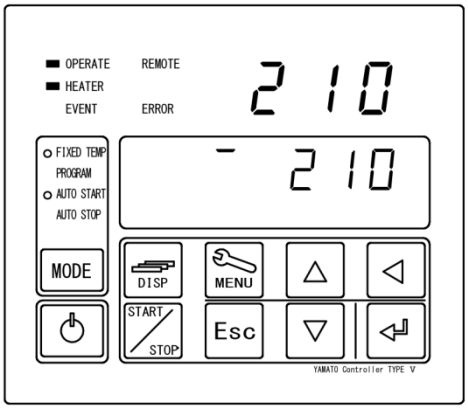

③ When the set time duration elapses or the time comes, the OPERATE (Operating) lamp will change its status from flashing to staying on as well as the HEATER (Heater) lamp comes on and temperature control will start.

※ You cannot use the Quick auto stop function for the Auto start operation.

5 Stopping operation

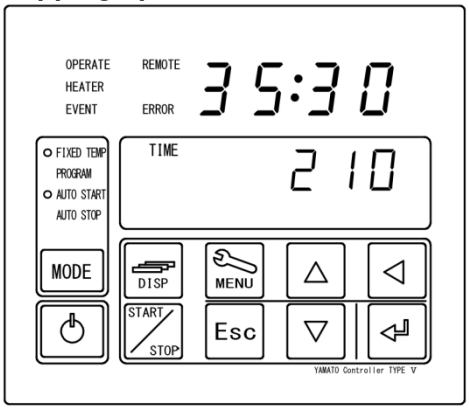

Use the START/STOP key to manually stop operation.
The screen will return to the one before starting operation when you stop operation.

※ The fan motor keeps operating even operation is stopped. Press the ⏻ key longer to turn the controller power off to stop the fan motor.

PROGRAM mode is to run programmed cycle such as figure below.

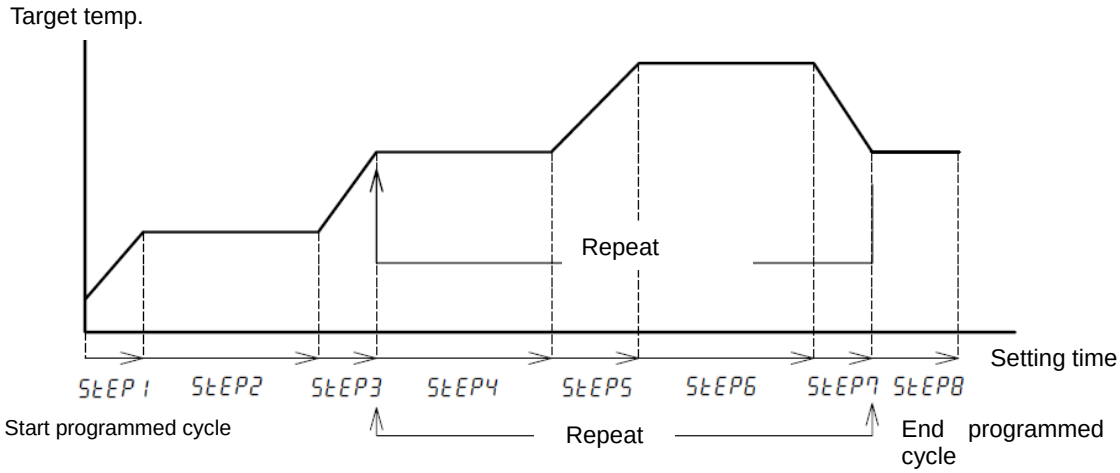

Setting the program operation

1 Turning on the controller

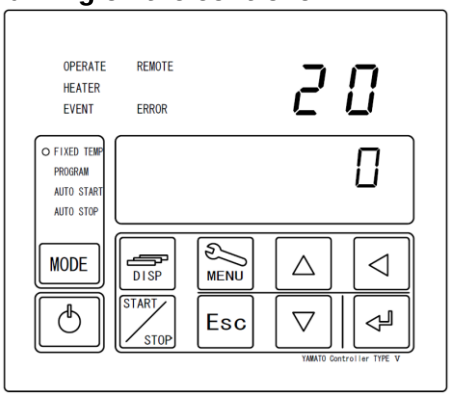

Turn the ELB on the left side of the main unit[ON(|)].
Pressing the ⏻ key longer will turn the controller power on.
The Top screen shows the temperature in the chamber while the Bottom screen shows the set temperature.
The fan motor will start.

∗ Register target program prior to start running cycle at first.

For how to register a program, see “P.33 Programming method”.
Create as many as steps up to 99 at maximum and save programmed pattern data up to 99 in total. (For example:11 program patterns will be stored at maximum, if each pattern is programmed 9 steps. The number of steps in the repeat intereval will be the number of the steps set in the registration part irrespective of the number of repetitions. ）

2 Select program mode

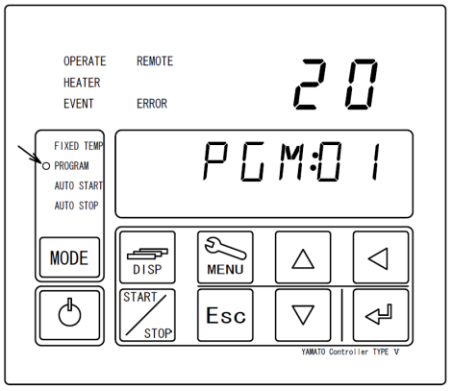

Press MODE key to turn PROGRAM Lamp on.

The bottom screen shows [PGM:01] ([01] indicates a program you used in the last session.)

※ Fixed Temperature mode would be selected at first time operation. After that, the latest operated mode is selected.

3	**Select program patter number** 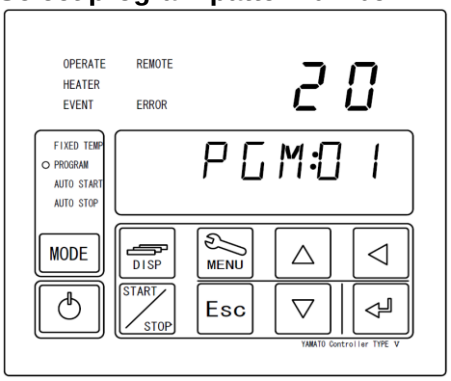	Press [↵] key. 01, a part of [PGM:01], is flashing on Bottom Screen. Select particular number of desired program pattern with [△] [▽] keys and then press [↵] key.
4	**Start program mode** 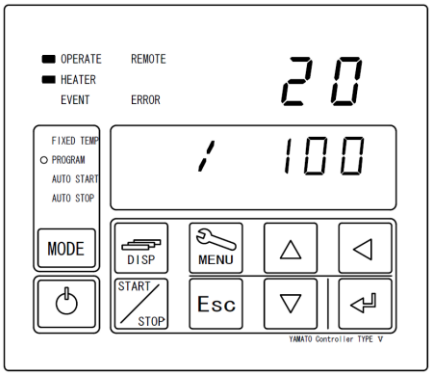	Press [START/STOP] key to start programmed cycle operation. ※ Never run its cycle if [END] is not set at the end step in the program. Check again that program setting, if cycle do not start. ※ You cannot start operation by pressing the [START/STOP] key for pattern numbers for which any programs are not registered. ※ You can check the program pattern number, the step number or the remaining operation time being executed on the Bottom screen with the [DISP] key during operation. ※ Screen to check the number of a program pattern being executed. 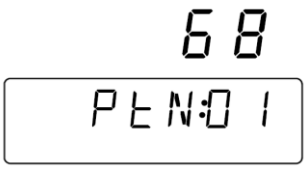 ※ Screen to check the number of a program step being executed. 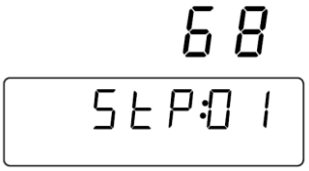 ※ Screen to check the remaining time of a step being executed. 

5 Cancelling program operation

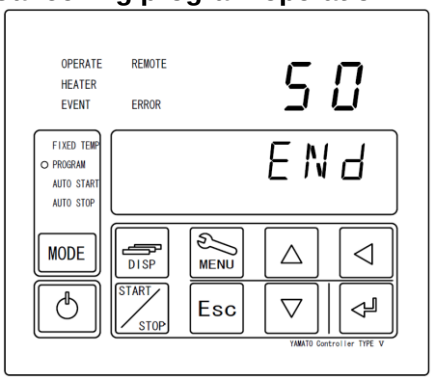

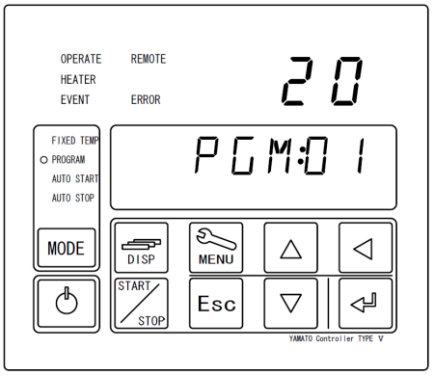

① When the set program ends, the Bottom screen shows[END] and operation will stop.

② You can eliminate the [END] indication using the START/STOP key.

※ The screen will return to the one before starting operation when you stop operation.

※ The fan motor keeps operating after operation is stopped. Press the ⏻ key longer to turn the controller power off to stop the fan motor.

Sample program setting

In this example, 8 steps are registered in the program pattern 2, steps from 4 to 7 will be repeated 5 times and the whole session will end at the step 8.
Note: Steps 4 to 7 will be repeated 6 times.

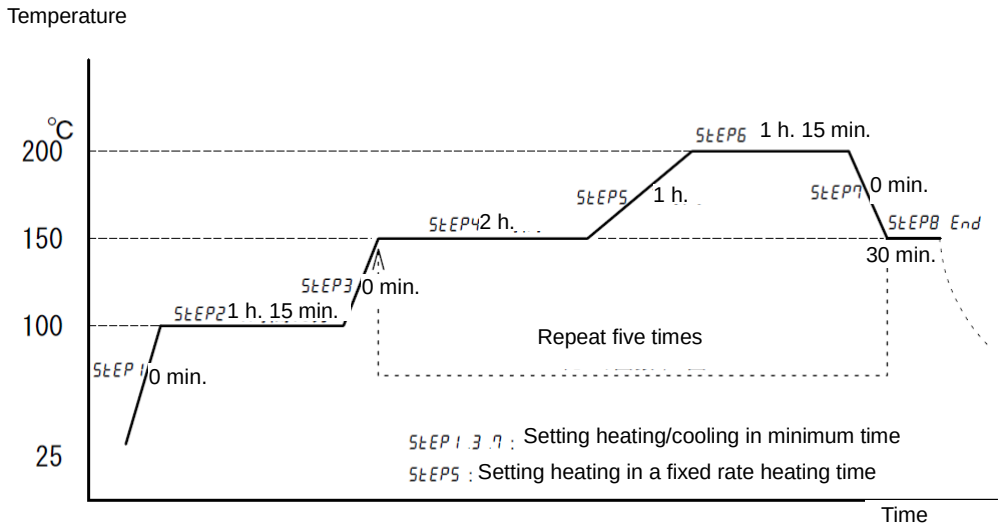

Pattern No	Step	Set temp.	Set time	Repeat dstn.	Repeat No.	Wait	End
P＊＊:01	P02: ＊＊	TEMP	TIME	REP(STEP)	REP(COUNT)	WAIT	ENDST
02	01	100	00:00	0	0	ON	OFF
	02	100	01:15	0	0	OFF	OFF
	03	150	00:00	0	0	ON	OFF
	04	150	02:00	0	0	OFF	OFF
	05	200	01:00	0	0	ON	OFF
	06	200	01:30	0	0	OFF	OFF
	07	150	00:00	4	5	ON	OFF
	08	150	00:30	0	0	OFF	ON

※ When set time for heating or cooling steps beyond the heating or the cooling capacity (0 minute in the example) of the unit, it will operate at the full power for a short time at wait [**ON**]. At wait [**OFF**], the step will proceed to the next one irrespective of whether the set temperature is attained or not and you need to take care for setting a wait for heating or cooling for a short period.

※ When set time for heating or cooling steps beyond the heating or the cooling capacity of the unit, it will heat or cool at a fixed rate irrespective of the wait setting of [**ON**] or [**OFF**], and the operation will proceed to the next step once the set temperature is reached within the set time.

※ When a fixed temperature step is set and wait is [**ON**], the wait mode will continue from the time when the temperature in the chamber drops below the lower limit of the wait width deviation temperature due to, for example, opening of the door until the temperature in the chamber will recover above that lower limit. At [**OFF**] the process will proceed to the next step after the set time irrespective of changes of the temperature in the chamber.

※ When you use the repeat function, program the operation so that the set temperature before shifting to the repeat mode will be the same as the set temperature of the destination of repetition.

※ Checking the heating capacity and the cooling capacity before setting is encouraged since these will differ depending on the environmental temperature and the operating conditions.

NO	Indication	Operating procedure
Ⅰ	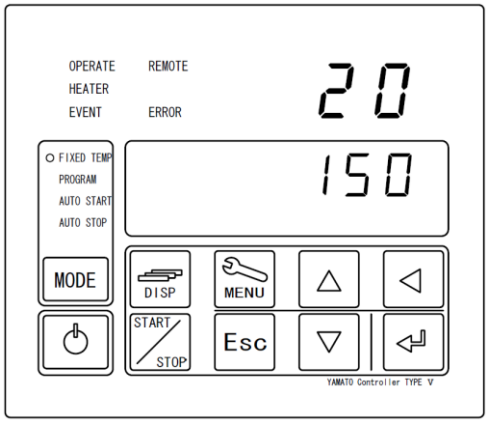	
Ⅱ	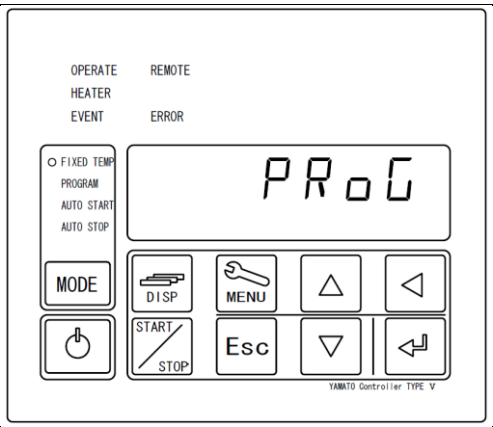	[PROG] flashes. 
Ⅲ	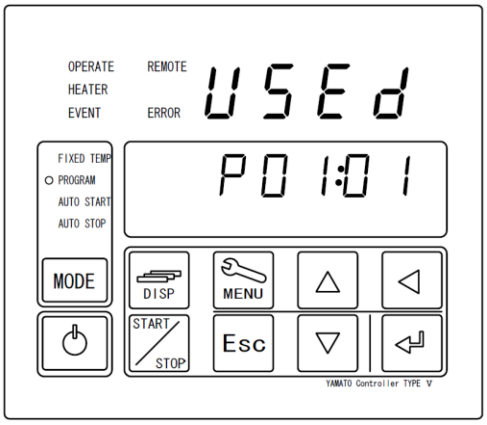	○ The PROGRAM lamps flashes.  [USED] means that the program has already been registered.  [**1**] of P01:0**1** flashes.  Makes [**1**] of P0**1:**01 flash.  Input as [P0**2:**01].
1-1	Inputting [**P02:＊＊**] of program pattern 02 - - - - P02:01	[**2**] of P0**2**:01 flashes and the Top screen shows [**----**] which means any programs are not registered.

1-2	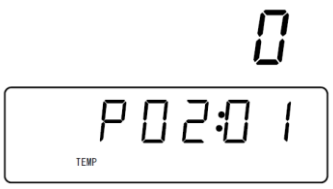	Input pattern 02, STEP 01. TEMP flashes.
1-3		Input 100℃. [000] flashes
1-4		00 hour 00 minute MENU TIME flashes
1-5		Repeat:0（No repeat destination） MENU REP flashes.
1-6	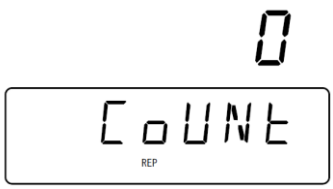	Number of repetition:0（No repetitions） MENU REP flashes.
1-7		Wait function ON setting （Set time counts down when the indicated temperature is-3℃ to the set temperature and within +6℃.） MENU WAT flashes.
1-8	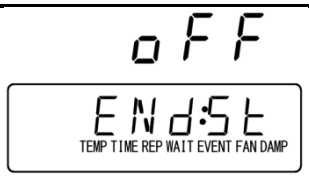	END setting OFF （To input the next step, set this to OFF; to input the final step, set this to ON） MENU All program setting items flash .
1-9	If a setup of STEP1 is completed	Press the MENU key longer.

2-1	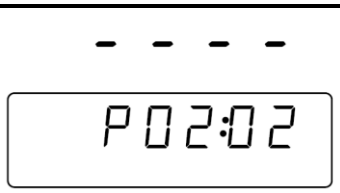	Input pattern 02, STEP 02 
STEP02 ≀ STEP03 ≀ STEP04 ≀ STEP05 ≀ STEP06	Input parameters from **STEP** #2 to #6 in accordance with setting conditions with same process of inputting parameters on **STEP** #1.	※ Press  key while registering program. Show [REST. P] on Bottom Screen. And show the rest of available steps on Top Screen.
7-1	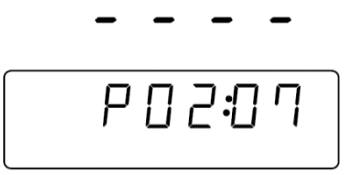	Input pattern 02, STEP 07  TEMP flashes.
7-2	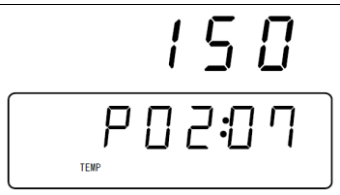	Input 150℃. 
7-3		Input 00 hour 00 minute.  TIME flashes
7-4		Input repeat destination (Repeat dstn : 4)  REP flashes

7-5	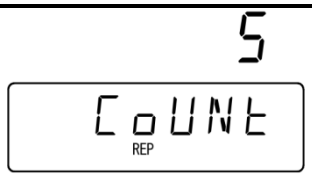	Input the number of repetitions(Number of repetitions : 5) ※ Number of repetitions may be set between 1 and 99 or [INF], limitless. MENU REP flashes
7-6		Set the wait function to ON. （ Set time counts down when the indicated temperature is-3℃ to the set temperature and within +6℃.） MENU WET flashes
7-7	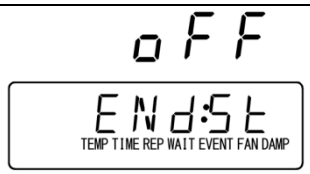	END setting OFF（To input the next step, set this to OFF; to input the final step, set this to ON） MENU All of the program setting items flash
8-1	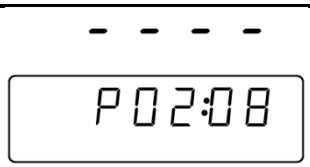	Input pattern 02. STEP 08 Press the MENU key longer. TEMP flashes.
8-2	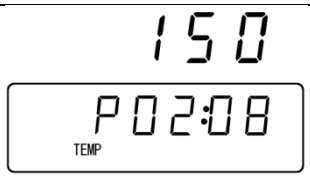	Input 150℃.
8-3		Input 00 hour 30 minutes. ※ Inputting [INF] for the final step makes its time limitless. MENU TIME flashes

8-4		Input repeat [**0**] (No repeat dstn)  REP flashes
8-5	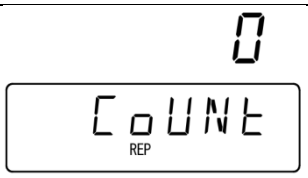	Input a repeat number of [**0**] (No repetitions)  REP flashes
8-6	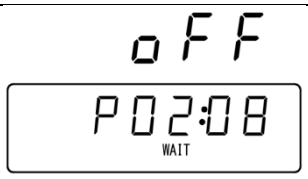	Set the wait function to **OFF**. 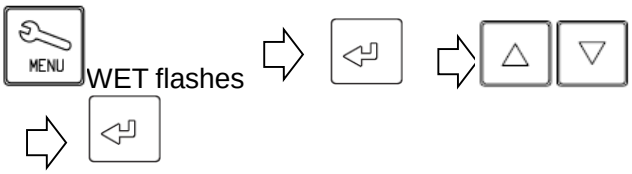 WET flashes
8-7	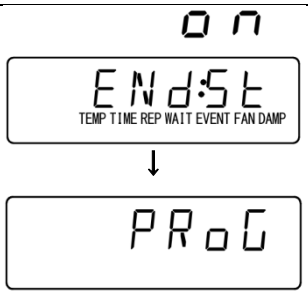	Set **END** to [**ON**]. 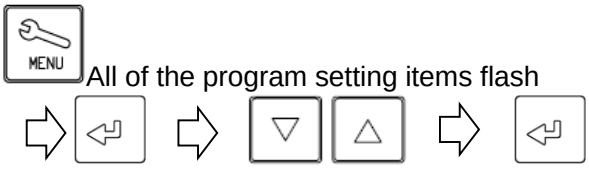 All of the program setting items flash ※ Be sure to set the **END** step **ON** for the final step of a program pattern. Any operation programs without an **END** step **ON** will not be recognized as a complete program.

※ Duplicate and use the programming sheet at the end of this book.

1-1	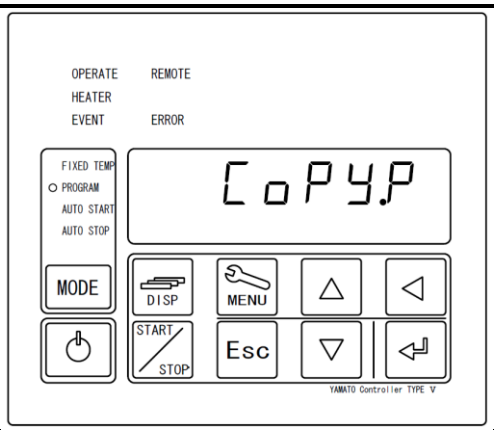	※ Copying a program Use the MENU key to flash [COPYP] on the Bottom screen and press the ↵ key.
1-2	SrC PGM:01	When [**01**] of PGM**:01** flashes, input the patter number to copy from with the ▽ △ keys and then determine using the ↵ key.
1-3	dESt PGM:02	[DEST] flashes on the Top screen shows while pattern numbers not used and [＊＊] of PGM**:**＊＊ flash on the Bottom screen and input a pattern number [＊＊] of the copy destination with the ▽ △ keys and determine using the ↵ key.
1-4	oK 01-02 ↓ SrC PGM:01	The Top screen shows [ ]o K] the Bottom screen shows the pattern number of the copy source- copy destination number [01−02] then the screen will move to the program copy screen.

2-1	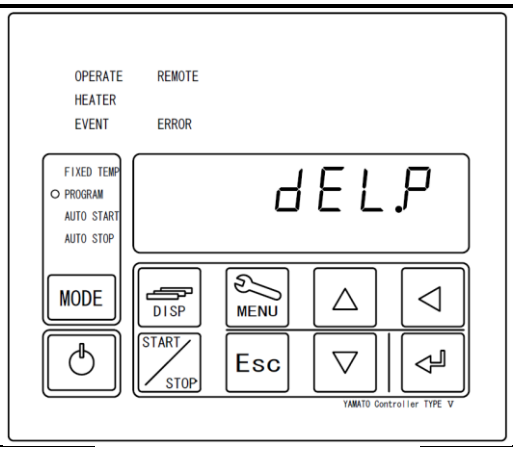	※ Deleting a program You cannot delete a program during operation. Carry out deletion while the stand-by screen is displayed. Use the MENU key to flash [DELP] on the Bottom screen and then press the ↵ key.
2-2	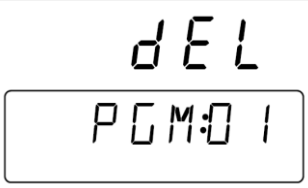	When [**01**] of PGM**:01** flashes, select a pattern number to delete with the ▽ △ keys or select [AL](all delete) with the ◁ key and then press the ↵ key longer.
2-3	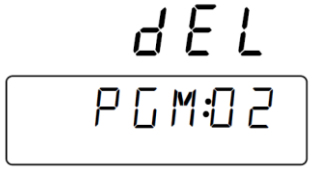 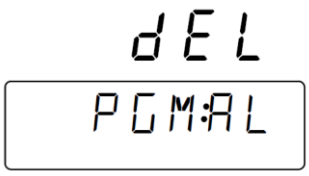	When [DEL] flashes, determine using the ↵ key.
2-4	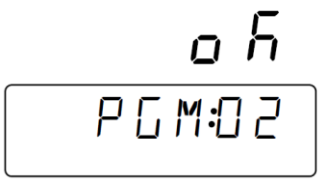 ↓ 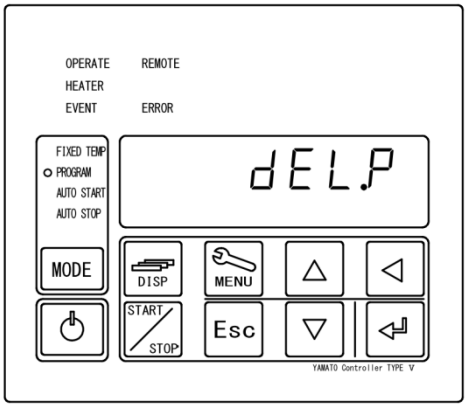	The Top screen shows [oh] and the Bottom screen shows the pattern number of the copy source- copy destination number [**PGM:02**] then the screen will move to the program delete screen.

About the wait function

When the wait function is set to [ON], the mode will remain “waiting” without counting down the time until temperature in the chamber (indication) will be within the wait deviation range between -3℃ and +6℃ to the set temperature. When you set the set time to 0 minute, the unit will operate from the “Start temperature” to the “Set temperature” at full power.
When you have set time longer than the specified performance, the unit will control heating and cooling so that the set temperature will be attained (within the wait width deviation range) at the set time.
Even when the indicated temperature drops while temperature is stable due to opening of the door, the mode will remain “waiting” without counting down the time if the wait width upper or lower limit is exceeded.
When you set the wait function to [OFF], the unit will proceed to the next step at the set time irrespective whether the temperature is within the wait width deviation between the set temperature and the indicated temperature.
When the set time is set to a short time exceeding the heating and cooling capacity, the unit will proceed to the next step before the set temperature is attained and you need to make sure that the wait function is set at [ON] when you are going to operate at the full power.

※ Example of estimated heating/cooling at indicated setting of wait [All ON] and [ALL OFF] in the program in the table below.

Step	1	2	3	4	5	6	7	8	9	10
Set temp(℃)	100	100	50	50	100	100	50	50	75	75
Set time	0 min	30 ,on	0 min	30 min	0 min	5 min	0min	5 min	2 hr	30 min
	Heating and cooling time of steps (1), (3), (5) and (7) are at the full power setting.									
	Heating time of the step (9) has been set longer than the specification.									

【Example of estimated process at “Full ON” setting for the wait function】

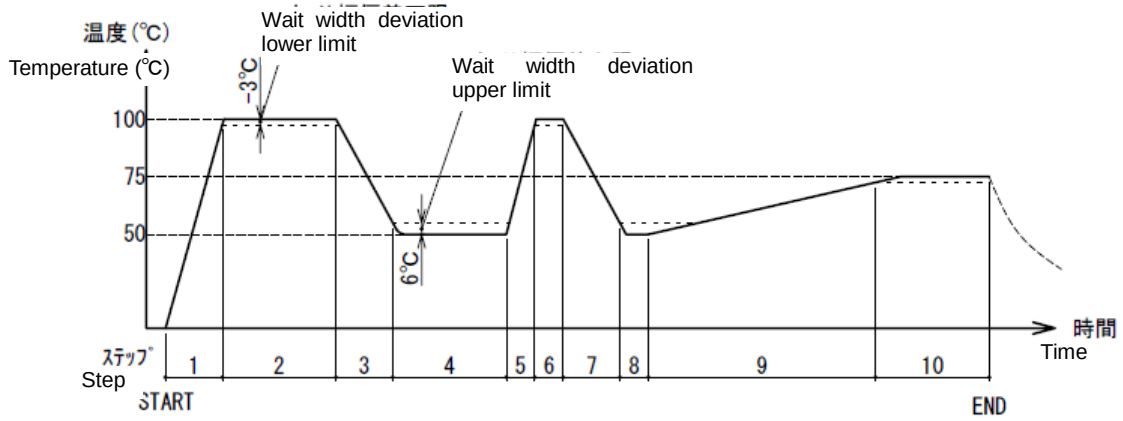

【Example of estimated process at “Full OFF” setting for the wait function】

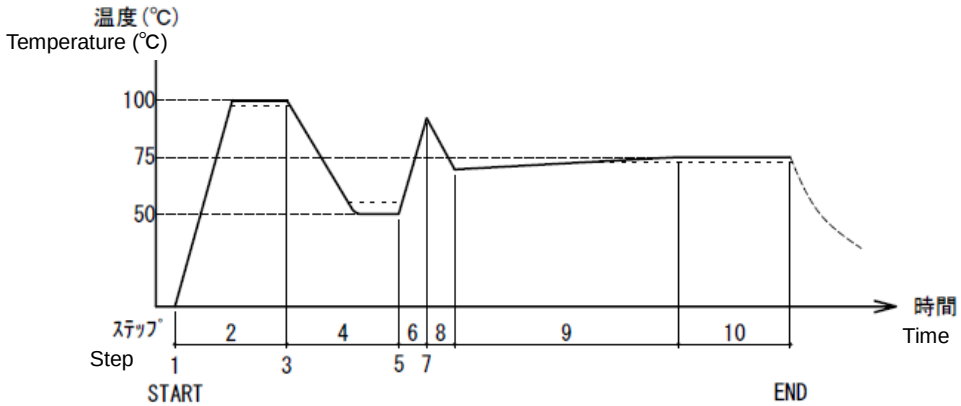

※ Set a type of key lock.

1 Turn the controller power off

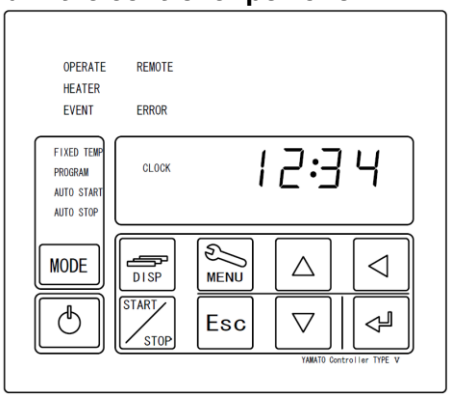

Turn the ELB on the left side of the main unit [ON(|)]. The Bottom screen will show the current time.

While the unit is being operated, press the [⏻] key longer to turn the controller power off.

2 Enter password

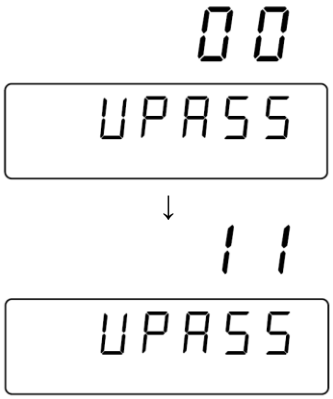

① Press and hold [MENU] key.
Show [UPASS] on Bottom Screen and [**00**] flashing on Top Screen.

② Press [△][▽] and [◁] keys to enter password "11" on Top Screen and press [↵] key (The password is fixed to "11".).

3 Set key lock

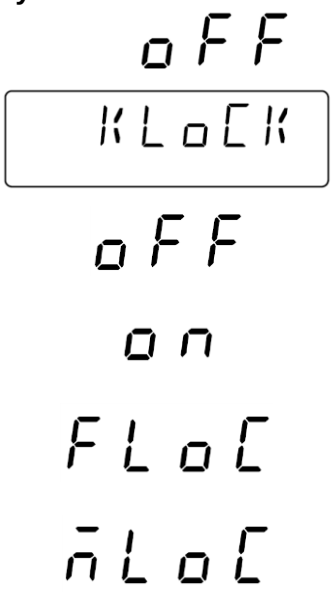

① The Bottom screen shows [KLOCK] while the Top screen sows [OFF]. [OFF] is the factory setting.

② Use the ⇨ [↵][△][▽] keys to select a type of key lock and then determine using the [↵] key.

OFF : Key lock function disabled (Factory setting)

ON : Any keys other than the [⏻] and the [START/STOP] keys are disabled.

FLOC : Only the [MENU] key is disabled.

mLOC : Only the [MODE] key is disabled.

③ Pressing the [⏻] key longer will return to the time display screen.

Calibration Offset Function offset the difference between read temperature by this Controller and actual measured temperature of Chamber. This Function enable parallel compensation in minus or plus direction over the whole Controller Temperature Setting Range of this Equipment.

Example

When the measured Chamber temperature is lower than read temperature by 2℃:

The read temperature can be calibrated by inputting “Calibration Offset value -2.0” for 2℃ compensation against actual Chamber temperature.

If read temperature is 200℃ for example, its temperature will shift to 198℃ after offset calibration.

※ **This -2℃ compensation is applied over the whole controller Temperature Setting Range (0～210℃). Note that offset value might be changed depending on sample setting arrangement and/or Target Temperature.**

∘

1	**Turning the controller power off** 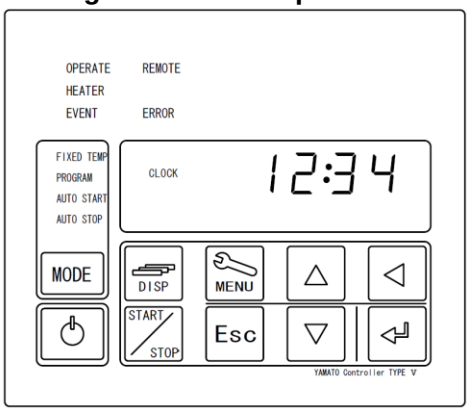	Turn the ELB on the right side of the main unit [ON(|)]. The Bottom screen will show the current time. While the unit is being operated, press the ⏻ key longer to turn the controller power off.
2	**Enter password.** 	① Press and hold MENU key. Show [UPASS] on Bottom Screen and [**00**] flashing on Top Screen. ② Press △ ▽ and ◁ keys to enter password “11” on Top Screen and press ↵ key (The password is fixed to “11”.).
3	**Set Calibration Offset value.** 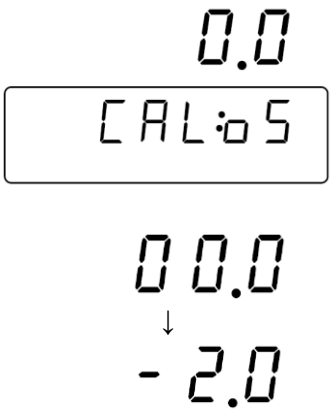	① Press MENU key to display [CAL:OS] on Bottom Screen then press ↵ key. ② Input offset value by △ ▽ and ◁ keys and then press ↵ key. You can enter an offset amount up to ±15.0℃ Example Read temperature : 200℃ and actual measured temperature : 198℃ ⇒Offset input value: -2.0℃ ※ Although you can input values up to the first decimal place, the temperature indications and measured temperatures will be rounded before indication. ③ Pressing the ⏻ key longer will return to the time display screen.

※ Describe the recovering operation at power failure.

1	**Turning the controller power off** 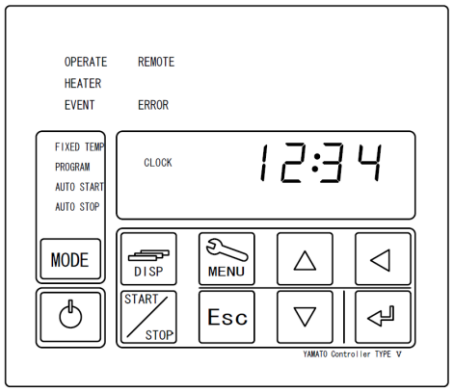	Turn the ELB on the right side of the main unit [ON(|)]. The Bottom screen will show the current time. While the unit is being operated, press the [⏻] key longer to turn the controller power off.
2	**Enter password.** 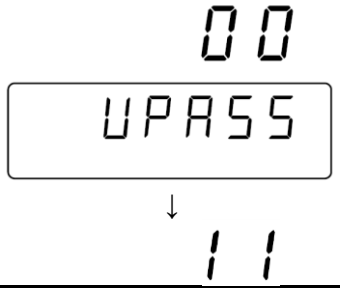	③ Press and hold [MENU] key. Show [UPASS] on Bottom Screen and [**00**] flashing on Top Screen. ④ Press [△][▽] and [◁] keys to enter password "11" on Top Screen and press [↵] key (The password is fixed to "11".).
3	**Setting recovery from a power outage** 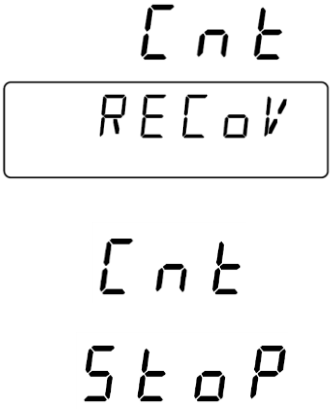	① Press [MENU] key to display [RECOV] on Bottom Screen and then press [↵] key. ② Press [△][▽] key to select recovery type at power failure and press [↵] key. CNT : The operation will resume right at power failure after power recovery. (set at factory) STOP : The operation will terminate as Idle State after power recovery. ③ Pressing the [⏻] key longer will return to the time display screen.

Resetting integrated CO2 volume and CO2 emission factor

※ Explaine how to set conversion factor for CO2 emission and how to reset the integrated CO2 volume on Top Screen.

1 Turning the controller power off

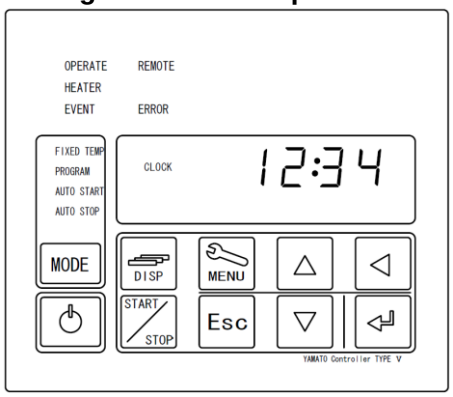

Turn the ELB on the left side of the main unit [ON(|)]. The Bottom screen will show the current time.

While the unit is being operated, press the [⏻] key longer to turn the controller power off.

2 Enter password.

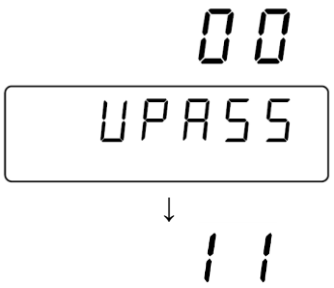

① Press and hold [MENU] key.
Show [UPASS] on Bottom Screen and [**00**] flashing on Top Screen.

② Press [△] [▽] and [◁] keys to enter password "11" on Top Screen and press [↵] key (The password is fixed to "11".).

3 Reset monitor display.

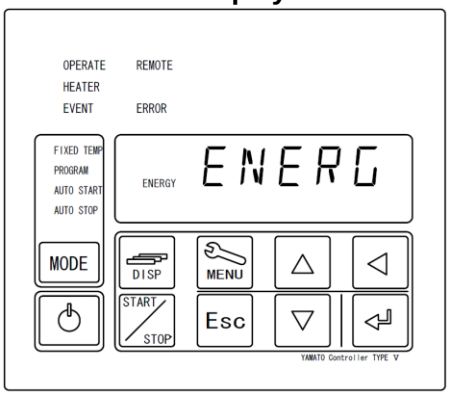

① Pressing the [MENU] key will make the monitor function indication ENERGY and [ENERG] flash on the Bottom screen.

② Pressing the [↵] key will show items to reset integrated [POWRT] power consumption.

③ Press [MENU] key to select monitoring item on Bottom Screen and then press [↵] key.

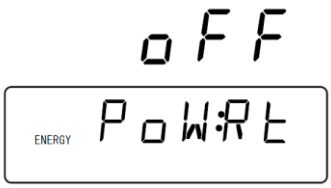

POWRT：Integrated power consumption

Pressing the [↵] key will result in:
OFF（lit）→RUN（flash）
Press [↵] key to reset Integrated Power Consumption.
Press [Esc] key to return to [PoW:Rt].

Resetting integrated CO2 volume and CO2 emission factor

3	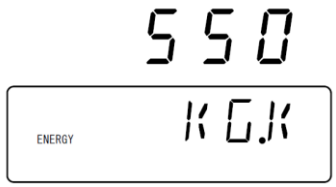 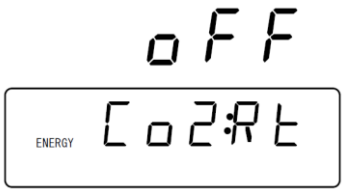	KG. K：(CO2) discharge coefficient Quoted from the substitutive values, factory setting of **550** （0.000550t-CO2/kWh） , the Environmental Ministry Press Release on 6 November 20013. Confirm the discharge coefficient of different utility companies with each company. Pressing the ⏎ key will result in: **550**（lit）→**0550**（flash） Press the ◁ △ ▽ keys to change a discharge coefficient. ⏎ key is used to determine Esc key is used to return CO2:RT：Integrated CO2 Emission Press ⏎ key, and then change from OFF (illuminate) to →RUN (flash) on Top Screen. ⏎ key is used to reset Integrated CO2 Emission. Esc key is used to return ④ Pressing the ⏻ key longer will return to the time display screen.

※ Back up, read out and reset controller for various setting information.

1	**Turning the controller power off** 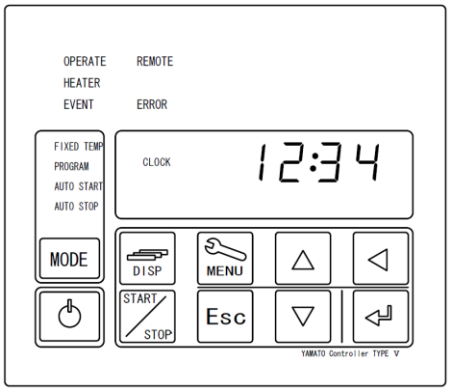	Turn the ELB on the left side of the main unit [ON(|)]. The Bottom screen will show the current time. While the unit is being operated, press the ⏻ key longer to turn the controller power off.
2	**Enter password.** 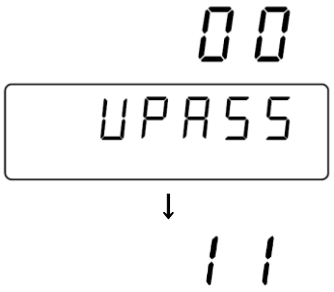	③ Press and hold MENU key. Show [UPASS] on Bottom Screen and [**00**] flashing on Top Screen. ④ Press △ ▽ and ◁ keys to enter password "11" on Top Screen and press ↵ key (The password is fixed to "11".).
3	**Save and read out and/or reset setting information.** 	① Press MENU key few times and show following items on Bottom Screen, respectively: U BKS : Back various setting information up. ↵ key「RUN」(flash)→ ↵ key「OFF」(illuminate) U BKR : Read backup setting information out. ↵ key「RUN」(flash)→ ↵ key「OFF」(illuminate) INI.U : Initialize various setting information. ↵ key「RUN」(flash)→ ↵ key「OFF」(illuminate) ※ Various setting information will be included registered programs, temperature offset value and other data such as key lock mode, calibration offset, recovery mode and so forth. ② Pressing the ⏻ key longer will return to the time display screen.

※Check Integrated Power Consumption, integrated Operating hours and so forth by this “Monitor Item Display” function of this Equipment.
Can not modify any setting information shown on Top Screen.

1 **View integrated value on Top Screen**

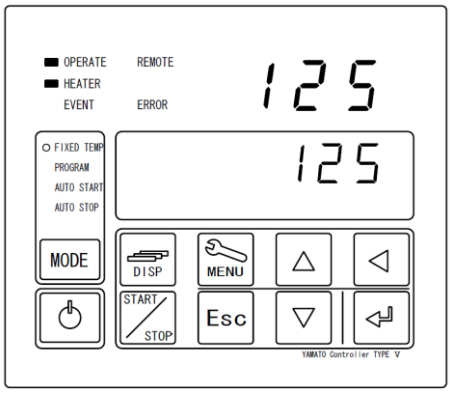

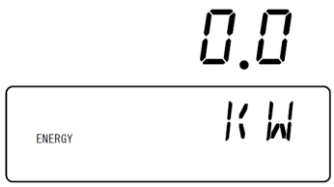

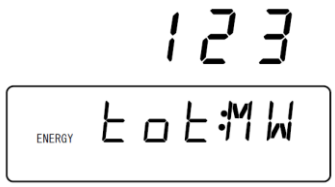

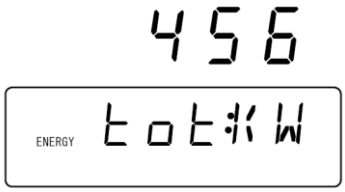

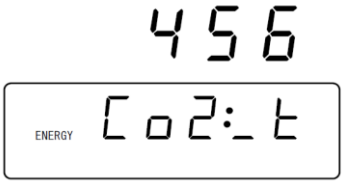

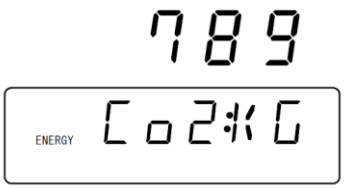

※Monitor Items can be checked at Controller POWER key ON or during operation state.

Press and Hold DISP key.
Monitor Items display screen activate and current Power Consumption appear on Top Screen.

Use the DISP key shows the integrated power consumption (MW) (kW), CO2 discharge amount (t) (kg) heater operation amount (%), integrated live time (Unit: 10000 hours) (Unit: 1000 hours), integrated operation time (Unit: 10000 hours) (Unit: 1000 hours).

Monitor Items display screen is ended, and Idle Screen or Standby Screen is displayed finally.

KW　Current Power Consumption is calculated from instantaneous power to power at one hour. Power consumption may be indicated as [**0.0**] and [**3.6**] alternately while temperature is stable. Power consumption is indicated as [**0.0**] during standby.

TOT:MW　Integrated power consumption (MWh). This is indicated in a three-digit integer number.

TOT:KW　Integrated power consumption (kWh). This is indicated in a three-digit integer number.
【 Sample indication 】 Integrated power consumption:123,456kWh

CO2:_T　CO2 discharge amount (t). This is indicated in a three-digit integer number.
CO2 discharge amount is calculated by multiplying the power consumption by a discharge coefficient. Confirm the discharge coefficient of different utility companies with each company.
The initial value input is quoted from the substitutive values, factory setting of 0.550(k-CO2/kWh), the Environmental Ministry Press Release on 6 November 20013. For updates of the coefficients, see the section, Setting and resetting the monitor indication, item [3].

CO2:KG　CO2 discharge amount (kg). This is indicated in a three-digit integer number.

【Sample indication】CO2 discharge amount:456,789kg

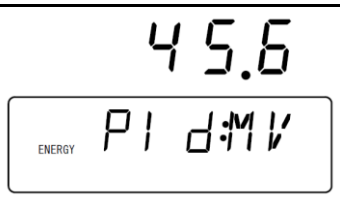

PID:MV Heater Operation Output

Heater Operation Output is the parameter to control output power ratio in percent of heater rated capacity. Heater output will be controlled by PID operation value between100 to 0% till reaching to Target Temperature.

【Sample indication】Present heater operation amount: 45.6%

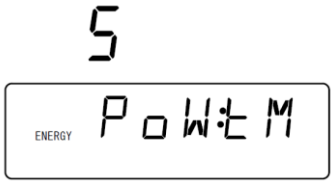

POW:TM Integrated live time (hours). Only the ten thousand digit will be indicated.

Integrated live time shall be the accumulated time elapsed from turning the ELB ON(｜) to OFF OFF(○).

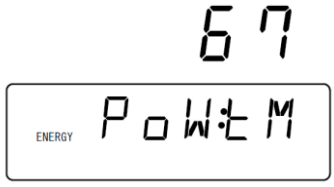

POW:TM Integrated live time (hours). Up to the thousand place is displayed.

【Sample indication】 Integrated Power ON Hours ; 50,067 hours

Adding capability will up to 65,535 hours.

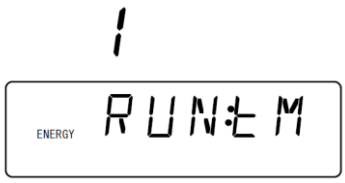

PUN:TM Integrated operation time (hours). Only the ten thousand digit will be indicated.

Integrated Operation Run Hours mean to add operation hours from start to end.

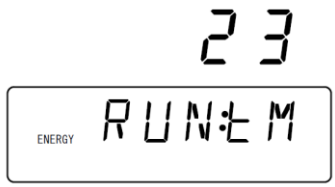

PUN:TM Integrated operation time (hours). Up to the thousand place is displayed.

【Sample indication】Integrated live time:10,023 hours

Up to 65535 hours can be cumulated.

Use the 

key to the standby/operating screen.

This Equipment have redundant safety devices-1) Automatic Overheat Prevention (automatic reset) function on the Controller, and -2) Independent Overheat Prevention Device(IOPD) with independent power, circuit and sensor away from the Controller.
Main Relay of this Controller will be shut heater output power off when one of safety devices is activated at Chamber internal temperature beyond its setting temperature.
Those functions will avail at Earth Leakage Breaker(ELB) ON(|).

Set temperature on Independent Overheat Prevention Device(IOPD)	※Set temperature with ▼▲ keys on its panel.
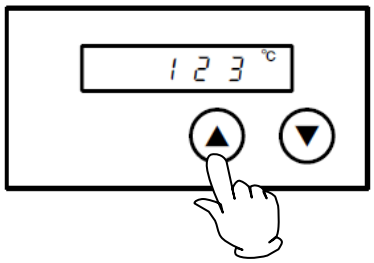	

May stop its operation by activating Independent Overheat Prevention Device(IOPD) when the difference between set temperature on IOPD and Target Temperature will be too close each other. Must set IOPD temperature at least 20℃ higher than Target Temperature.

Note that the objective of this IOPD will not protect for samples but from overheating this Equipment.

Factory settings and setting temperature ranges are as shown below:

Model	Set temperature at shipment	Setting temperature range
All models	240℃	0℃～260℃

Control Chamber stable at required temperature first, and let IOPD setting temperature down by 1℃ and then find out IOPD activating temperature, if IOPD will get to be activated at required temperature.
Must wait for 5(five) seconds for the next 1℃ down of IOPD setting temperature, because its function will be operated to need some times.
Display ER07 on Top Screen on Control Panel, if this IOPD is activated.
When you have set an operation temperature you want for IOPD , recording of the set temperature takes several seconds and you need to wait for about five seconds before turning the ELB off.

5. Handling precautions

⚠ Warning

1. Never use any explosive or flammable substances.

Never process any explosive, flammable samples and also samples contained with those substances. It will cause fire/explosion. (See Chapter 13. List of dangerous materials on page 71.)

2. Take extreme care when using a resin container.

Be sure to check the withstand temperature before using a resin container. Using such a container under a temperature beyond its withstand temperature will melt resin and a fire or an explosion may result.

3. Turn the ELB off when an abnormality occurs.

If unit begins emitting smoke or abnormal odors for reasons unknown, turn off main ELB immediately, disconnect power cable from power supply, and contact original dealer of purchase. Continuing to operate without addressing abnormalities may disassemble or repair unit. Repairs should be always be performed by a certified technician.

4. Do not put any foreign objects in the unit.

Never insert any metal or easily flammable objects into the openings in the chamber (radiation port, cable port, etc.). A fire, an electric shock or burning may result.

If a foreign object has entered inside, immediately turn the ELB off and ask your dealer, one of our sales offices or the customer service center for inspection. Leaving as it is will cause a fire or an electric shock.

5. Take extreme care for handling of samples after operation at a higher temperature.

Take care not to touch samples when taking them in or out since inside the chamber, internal wall of the door or samples are still hot for some time after operation at a higher temperature. Be sure to put on heat-resistance gloves and take extreme care for burning when handling samples.

6. Take extreme care when opening the door during operation at a higher temperature.

When you attempt to open the door during operation at a higher temperature, never touch the door since the internal chamber or the inside of the door are hot.
When the door is opened, the heater and the fan motor will stop for safety but note that the fan motor will keep rotating from inertial and hot air will be blown out.
Note that if a fire alarm is installed around the unit, it may go off erroneously.

7. Never attempt to touch hot surfaces.

Never touch the door, the cable port, suction port or around the exhaust port during or immediately after operation. They are hot and may cause burning.

5. Handling precautions

⚠ Caution

1. Do not climb on the Equipment.

Do not climb on this Equipment. May cause personal injury and/or its failure by tipping it over and being damaged.

2. Do not place any stuff on the Equipment

Do not place any stuff on this Equipment. May cause personal injury falling it off.
Do not close up any flammable materials such as paper around it.

3. Turn immediately off the Breaker of the Equipment at thundering.

Turn immediately off the Breaker of the controller, when thundering and lightning start. If do not so, it may cause fire or electric shock by the thunderbolt.

4. Do not keep Door open after operation.

Do not keep Door open to cool the sample down quickly, etc. right after operation. May deform Control Panel and cause failure of this Controller by heat wave from Chamber.

5. Do not process any corrosive samples.

Do not process any samples containing corrosive chemicals even though Chamber is made of stainless steel which this steel may be corroded by strong chemical acid, etc.

6. Operate at the proper temperature.

Operating temperature range will be room temperature+20℃～210℃(DNE401/411/601/611) and +15℃～210℃(DNE811/911).
Never operate this Equipment at temperature out of its range. Operating the unit outside the operating temperature range may cause a malfunction of the unit or an accident.

7. Take extreme care when placing samples.

Do not set samples heavier than 15kg. Weight capacity of one shelf will be about 30kg
Spread samples evenly throughout on each shelf as many as possible.

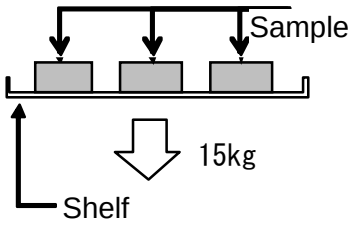

Do not set excessive amount of samples on shelves. Chamber temperature may not be controlled correctly. Must keep following procedure to control Chamber temperature correctly;
1) install the supplied shelves, 2) keep space between samples as wide as possible. 3) require space opening more than 30% at each shelf.

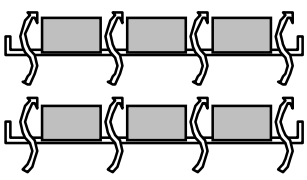

Require space opening more than 30% at each shelf.

⚠ Caution

8. Never set samples on bottom of Chamber.

Never set samples on bottom of Chamber. If samples will be processed at setting on bottom of it, this Equipment may be not given as its full performance and become high temperature unlikely and also cause failure.
Set samples on attached shelves properly installed on their brackets.
Do not allow samples to contact directly to side walls of Chamber.

9. Do not process humid or wet specimens.

Do not process humid specimens.
Water condensed inside the unit may cause an electric shock, a malfunction of the unit.

Before processing a wet specimen, completely drain water off. Otherwise, rust, corrosion or condensation may occur in and out the bath and excessive increase in humidity may adversely influence to the electric system causing an electric leak or other malfunctions or preventing proper operation.

10. Take care for processing of powder and small samples.

The unit employs blowing to improve temperature distribution inside the chamber. When processing powder or small samples, make sure that the sample will not scatter. A fire or an electric shock may result if a flammable or a metal object enters the heater.

Heating may take some time when the amount of samples is large or when processing samples with a larger heat burden. Check the appropriate amount as necessary and set the sample. Also note that the temperature indication may be unstable when processing heat-generating samples (note that sample itself must be free of fear of explosion, inflammation or ignition).

11. Note that the sample temperature and the measured temperature are not always the same.

Be aware of temperature sensor which it is installed on Chamber inside upper portion and control Chamber temperature. Therefore, if the amount of specimen is large or the equipment is in the middle of heating, sensor detected temperature may not agree with temperature of the samples. In particular, actual Chamber temperature will differ greatly from Read Temperature displayed on Controller, right after opening or closing of this Equipment Door.
When a gap occurs between the temperature in the bath and the measured temperature requiring adjustment, compensate temperature by referring to “P.43 Setting a calibration offset”.

12. Check the following in terms of the recovery mode.

When operation stopped from a power failure and then power recovers, the unit will automatically resume operation.
See “P.44 Setting the recovery mode” for details.

13. Be sure to set a temperature of the Independent Overheat Prevention Device.

Must be set temperature of Independent Overheat Prevention Device (IOPD).
Note that temperature of this IOPD must be set to temperature over 30℃ higher than Target Temperature.
Refer to Chapter 4. Operating Procedure –“Independent Overheat Prevention Device” for how to set and other cautions on page 50.

14.Take care for the following in terms of the Gasket on Chamber.

Be aware of Gasket on Chamber that is made from silicon rubber and may vaporize benzoic acid, oil, etc. from volatile components of rubber used at their production during operation.
Ask specific Gasket made from fluoro-rubber for samples that are not compatible with those chemicals.
Note that the rubber may be rusted or corroded by acids, alkaline, and halogenated solvent.

【Caution】

Show substances that they will erode silicon rubber (standard specification) and fluoro-rubber (special specification) for Chamber Gasket on Table 5.1.
Never process samples that will be contained these substances showing on its Table.
Please contact with Yamato Scientific Customer Service Center for applicability of substances other than those listed below.

Table 5.1 - Typical substances eroding Gasket on Chamber

Material / Classification	Silicon Rubber	Fluoro-rubber
Hydrocarbons	Butane, Isooctane, Benzine, Toluene, Xylene, Styrene, Diphenyl, Pinene, Kerosene	Propane
Halogen, Haloid Hydrocarbon	Methyl Chloride, Methylene Chloride, Chloroform, Carbon Tetrachloride, Trichloroethylene, Phlorobenzene, Monochloronaphthalene, R-11、R-12、R-21、R-22、R-113、R-114、Bromine	R-21、R-22
Ketone, Aldehyde	Methyl Ethyl Ketone, Diisopropyl Ketone, Diclohexanon, Acetophenone	Acetone, Methyl Ethyl Ketone, Methyl Isobutyl Ketone, Diisopropyl Ketone, Diclohexanon, Acetophenone
Ester	Methyl Acetate, Ethyl Acetate, Propyl Acetate, Butyl Acetate, Amyl Acetate, Methyl Acetoacetate, Butyl Acrylate, Ethyl Methacrylate	Methyl Acetate, Ethyl Acetate, Propyl Acetate, Isopropyl Acetate, Butyl Acetate, Amyl Acetate, Ethyl Acetoacetate, Ethyl Acrylate, Butyl Acrylate, Ethyl Methacrylate
Ether	Diethyl Ether, Dibutyl Ether, Ethylene Oxide, Dioxane, Epichlorohydrin, Tetrahydrofuran	Diethyl Ether, Isopropyl Ether, Dibutyl Ether, Dibenzyl Ether, Ethylene Oxide、Dioxane, Epichlorohydrin, Furfural, Tetrahydrofuran
Alcohol	Amyl alcohol	
Multiple Alcohol Derivative		Cellosolve Acetate, Butyl Cellosolve, Triacetin

⚠ Caution

Material / Classification	Silicon Rubber	Fluoro-rubber
Fatty Acid, Phenol	Acetic Anhydride, Oleic Acid, Phenol Palmitate	Formic Acid、Acetic Anhydride, Hydroquinone
Nitrogen Chemical Compounds	Nitromethane, Nitroethane, Nitropropane	Nitromethane, Nitroethane, Nitropropane, Ethylenediamine, Dimethylaniline, Ethanol amine, Hydrazine, Triethanol Amine, Dimethyl Formamide, Pyridine, Piperidine
Sulfur and phosphorus compounds	Hydrosulfuric	Hydrosulfuric, Tributyl Phosphate
Other Chemical Compounds	Nickel Acetate, Lead Acetate, Zinc Acetate, Tetraethyl Lead, Vegetable Oil, Silicon Oil	Calcium Acetate, Nickel Acetate, Lead Acetate, Zinc Acetate
Inorganic Solvent	Hydrochloric Acid, Nitric Acid, Sulfuric Acid, Hydrobromic Acid, Phosphoric Acid, Hypochlorous Acid, Chromic Acid, Perchloric Acid, Sodium Hydrate	Sodium Hydrate, Aqueous Ammonia

15. Never fail to perform periodic inspection.

Check regularly Earth Leakage Breaker (ELB) and Independent Overheat Prevention Device (IOPD) which they are key part/Device for the safety of this Equipment.
Refer to Chapter 6. Maintenance Method on page 57.

16. Take care for the following when operating the product with the suction port and the exhaust port covers fully open.

Fully opening the suction port and the exhaust port covers may prevent the operating temperature from reaching the highest setting.

17. Take care for possible degradation of performance when using the cable port.

When a measurement sensor or a probe is inserted into the cable port close the cable port cover as much as possible and completely seal to any gaps with heat-resistant packing or sealant. If seal is insufficient, the temperature characteristic, cleanliness or other performance will degrade. Use an optional silicon plug (with one hole) as necessary. See"P.64 List of optional settings".

18. Smoke may generate when you operate the unit for the first time.

When you operate the unit for the first time, the bonding material of the heat insulation material may burn and generate odor, which, however, does not indicate a malfunction of the unit. Odor will not generate as you continue to use the unit for some time.

5. Handling precautions

⚠ Caution

19. During operation at a higher temperature

⚠ Do not attempt to touch the inside of the unit and the door when you open the door during operation a higher temperature. Also note that a fire alarm if installed around the unit may react.

20. About operation at a higher temperature

⚠ After operation at a higher temperature, the inside of the unit and the door as well as the specimen will remain hot for a while. Take care not to touch those parts when putting or taking out specimen. Be sure to put on heat resistant gloves to avoid burning.

21. Never use thinner or alcohol to remove soil off the unit.

⃠ Never apply any kinds of thinner and/or alcohol to wipe dirt off this Equipment.
May come paint off, and may change its color or deform its shape, Otherwise.
Note to turn Earth Leakage Breaker (ELB),off on the left side wall of this Equipment first, then maintain it.

22. About the ceiling of the main unit

⃠ Avoid placing any objects on the ceiling of the models DNE401/411 and DNE601/611 except for stacking using the optional stacking clamps. And never place any objects on the ceiling of the models DNE811 and DNE911.

23. Be sure to read the operating instructions.

❗ Be sure to read the operating instructions before using the unit.

6. Maintenance method

Daily inspection/maintenance

Warning

- Be sure to turn off Earth Leakage Breaker(ELB) of this Equipment before daily inspection and maintenance
- Inspect and maintenance this Equipment at ambient temperature on its Chamber.
- Never disassemble this Equipment.

Caution

- Wipe dirt off with wrung tightly soft cloth.
- Never clean this Equipment with benzene, thinner or scouring powder, or rub with a scrubbing brush.
  May cause deformation, degradation and/or discoloration.

Inspect monthly.

- **Inspect the ON and OFF functions of Earth Leakage Breaker(ELB).**
  - ・Prepare this Equipment for the inspection and connect Power Cord/Cable to receptacle or Switch Board of facilities.
  - ・Check ELB “OFF”, then turn ELB “ON（｜）”.
  - ・Press test button on ELB with ball-point pen etc. If ELB is shut down, ELB will be functional.

- **Check operation of Independent Overheat Prevention Device(IOPD).**
  - ・Be operating this Equipment at appropriate Target Temperature on Fixed Temperature Operation Mode.
  - ・Set this IOPD working temperature down to approximately 10℃ lower than Read Temperature.
  - ・Activate this IOPD and will be shut power off heater circuit in few seconds, and display “Er07” on Top Screen, display warning sign “Overheat” on Bottom Screen, illuminate ERROR Lamp on Control Panel, and buzz on the same time.
  - ＊Must check ELB and IOPD mentioned above prior to operate this Equipment for continuous long hours or unmanned operation during night time before starting operation.

◆Contact immediately with local dealer, Yamato sales office, or Yamato Customer Service Center for any questions.

7. Long storage and scrap

When not using the Equipment for a long time / when scrapping

⚠ Warning	⚠ Caution
Do not operate this Equipment for the time being. ● Turn Earth Leakage Breaker(ELB) off and disconnect Power Cord/Cable from receptacle /switch board of facilities.	Scrap this Equipment. ● Do not leave this Equipment alone where children may play and get at it. ● Before discarding the equipment, be sure to remove the hinge and the door lock assembly so that you cannot close the door hermetically.

Matters to consider when scrapping the Equipment

Pay attention always to the preservation of the global environment.

We, as Yamato Scientific Co., Ltd. highly recommend taking this Equipment apart as far as possible for separation or recycling to contribute to the preservation of the global environment according to the specified garbage collection method stipulated by each local government..

List major components and their materials for this Equipment as follows:

Names of major parts	Material
Major components of the Equipment	
External Structure	Chrome free electrogalvanized carbon steel sheet coated w/Chemical-proof baking finish
Chamber	Stainless steel plate
Heat Insulator	Ceramic fiber + glass wool
Door packing	Silicon rubber
Major components of electrical parts	
Switch and Relay	Composite of resin, cupper and other materials
Operation Panel	Polycarbonate resin
Printed Circuit Boards	Composite of fiber glass and other materials
Heater	Stainless steel pipe
Power Cord/Cable	Composite of synthesized rubber coating, cupper, nickel and other compound materials
Wires	Composite of fiber glass, fire-retardant vinyl, cupper, nickel and other materials
Stickers	Resin materials
Sensor (K thermo-couple)	Stainless steel and others

8. When a trouble occurs

Message error table

Show the error codes on Table 8.1 below.
Buzz and stop its operation at occurring errors on this Equipment.

Pressing any key (except for the  key) will stop the buzzer sound. When three minutes have passed as it is, the buzzer starts to sound again.

The Top screen shows an error code and the Bottom screen shows the error name. Note the error code, immediately turn power off and stop operating the unit.

Table 8.1 Table of Error Code

Error Display	Error Code Name	Causes and their solutions
ER01 SENS	Sensor Failure	● Fail in temperature sensor. ● Open circuit on temperature sensor line. ● Detect temperature out of its designed range. Contact original dealer of purchase.
ER02 TRIAC	TRIAC short circuit error	● Short on TRIAC circuit. ● Fail on Current Transformation (CT) sensor. Contact original dealer of purchase.
ER03 HEAT	Heater Line Disconnection	● Heater Line Disconnection ● Fail on Current Transformation (CT) sensor. ● The source voltage has dropped. Contact original dealer of purchase.
ER07 OHEAT	Independent Overheat Prevention Device(IOPD) activated	● Activate Independent Overheat Prevention Device (IOPD). Turn ELB on again and check both Chamber temperature and setting Temperature of IOPD. Contact original dealer of purchase, if this Equipment is not energized at ELB on.
ER10 RELAY	Main Relay Contact melted	Check at turning ELB on again: ● Melt down the contact point of Main Relay. ● Fail on Current Transformation (CT) sensor(s). Contact original dealer of purchase.
ER14 RAM	RAM Failure Reduced capacity or end of use life of the backup battery	Check at turning ELB on again: ● RAM Failure：Reset power once. ● Reduced capacity or end of use life of the backup battery： Contact original dealer of purchase, if this error cannot be reset by ELB on. Must be replaced backup battery.
ER15 EPROM	EEPROM Failure	Check at turning ELB on again: ● Change its data code on EEPROM. Contact original dealer of purchase, if this error cannot be reset by ELB on. Must be replaced backup battery.

Show troubleshooting guide on Table 8.2.
Refer to “Cause and their solutions” of Table 8.1 – Error Code on this Chapter “Massage Error Table” at

Table 8.2 - Troubleshooting Guide

Phenomena	Causes	Solutions
Do not display current time on Bottom Screen at Earth Leakage Breaker (ELB) ON.	・ Do not supply power. ・ Fail ELB. ・ Fail Controller.	・ Check connection to power supply and apply power. ・ Replace ELB. ・ Replace Controller.
Do not display anything on both Top and Bottom Screen at Controller Power key pressed and held.	・ Fail supplied power. (Required Voltage ±10%) ・ Fail Controller.	・ Connect to adequate power supply. ・ Replace Controller.
Do not rise Chamber temperature.	・ Activate IOPD and /or Self-diagnosis Function built–in on Controller, and shut heater circuit down (Error code displayed).	・ Refer to “Cause and their solutions” of Table 8.1 – Error Code on page 59.
Display temperature unstable.	・ Fluctuate ambient temperature heavily. ・ Fail supplied power. (Required Voltage ±10%) ・ Fail Controller. ・ Fail Temperature Sensor ・ Be affected by samples.	・ Review its location. ・ Connect to adequate power supply. ・ Replace Controller. ・ Replace Temperature Sensor. ・ See “P.53 15. Take care for processing of powder and small samples”.

Contact with local dealer or Yamato Customer Service Center phenomena other than Table 8.2 above.

9. After sales service and warranty

Request to repair parts

Request to repair parts は

When any abnormality occurs immediately stop operation, turn the controller power and the ELB off and contact your dealer, one of our sales offices.

Require the following information for repair.

- Model name of Yamato products
- Serial Number
- Date (year/month/date) of purchase
- Description of trouble in detail as possible

} See Warranty Card or caution rating nameplate on this Equipment.
(See Chapter 3. Names and functions of each part “on page 7 for details.

Be sure to present the warranty card to Yamato service representative.

Guarantee for maximum storage period of repair parts.

Guarantee that maximum storage period of repair parts will be 7(seven) years after end of their production, Forced Convection Constant Temperature Oven DNE401/411, E601/611, NE811, E911.
Repair parts will be defined the parts to maintain this Equipment performance.

10. Specifications

Specifications

<table>
<tr><td colspan="2">Название продукта</td><td colspan="6">Шкафы постоянной температуры с принудительной конвекцией</td></tr>
<tr><td colspan="2">Название модели</td><td>DNE401</td><td>DNE411</td><td>DNE601</td><td>DNE611</td><td>DNE811</td><td>DNE911</td></tr>
<tr><td colspan="2">Система</td><td colspan="6">Принудительная циркуляция и вентиляция</td></tr>
<tr><td colspan="2">Диапазон температур окружающей среды</td><td colspan="6">5℃～35℃</td></tr>
<tr><td colspan="2" rowspan="3">Источник питания</td><td>Одно-фазный AC115B.</td><td>Одно-фазный AC220B.</td><td>Одно-фазный AC115B.</td><td>Одно-фазный AC220B.</td><td colspan="2" rowspan="2">Однофазный AC220B.</td></tr>
<tr><td>10A</td><td>5.5A</td><td>11A</td><td>6A</td><td>11.5A</td><td>14A</td></tr>
<tr><td colspan="6">Подходит для сети 50/60Hz, рабочий диапазон напряжений：±10%</td></tr>
<tr><td rowspan="6">Производительность ※1</td><td>Диапазон настройки температуры</td><td colspan="4">Комн. темп.+20℃～210℃</td><td colspan="2">Комн. Темп.+15℃～210℃</td></tr>
<tr><td>Точность настройки температуры</td><td colspan="6">±0.5℃ （при 210℃）</td></tr>
<tr><td>Колебания температуры ※2</td><td colspan="6">±0.6℃ （при 210℃）</td></tr>
<tr><td>Точность распределения температуры</td><td colspan="6">±2.0℃ （при 210℃）</td></tr>
<tr><td>Кривая температуры</td><td colspan="2">6℃（при 210℃） JIS C60068</td><td colspan="2">8℃（при 210℃） JIS C60068</td><td>8℃（при 210℃） JIS C60068</td><td>10℃（при 210℃） JIS C60068</td></tr>
<tr><td>Время нагрева до макс. температуры</td><td colspan="2">Прибл.60 мин.</td><td colspan="2">Прибл.70 мин.</td><td>Прибл.45 мин.</td><td>Прибл.60 мин.</td></tr>
<tr><td rowspan="12">Структура</td><td>Корпус</td><td colspan="6">Электрогальванизированный стальной лист без хрома</td></tr>
<tr><td>Камера</td><td colspan="6">Пластина из нержавеющей стали</td></tr>
<tr><td>Теплоизоляция</td><td colspan="6">Стекловолокно</td></tr>
<tr><td>Дверь</td><td colspan="5">Одностворчатая (петля слева)</td><td>Распашные двойные двери</td></tr>
<tr><td>Нагреватель</td><td colspan="6">Трубчатый нагреватель из нержавеющей стали</td></tr>
<tr><td>Мощность нагревателя</td><td colspan="2">1.1 КВт</td><td colspan="2">1.2 КВт</td><td>1.2 КВт × 2</td><td>1.5КВт × 2</td></tr>
<tr><td rowspan="2">Вентилятор</td><td colspan="6">Вентилятор Сирокко（конденсаторный мотор）</td></tr>
<tr><td colspan="4">10 Вт.</td><td>30 Вт.</td><td>30 Вт. × 2</td></tr>
<tr><td>Всасывающий порт</td><td colspan="6">Внутренний диаметр φ33 мм (нижняя часть справа)</td></tr>
<tr><td></td><td colspan="6"></td></tr>
<tr><td>Выпускной порт</td><td colspan="4">Внутр. диаметр φ33 мм×2 (потолок)</td><td colspan="2">I.D.φ33mm×2(rear)</td></tr>
<tr><td>Ножки-ролики</td><td colspan="4">—</td><td colspan="2">Поворотные самоустанавливающи-еся колеса (без стопоров)</td></tr>
<tr><td>Установка уровня</td><td colspan="4">—</td><td colspan="2">Регуляторы уровня (2 спереди)</td></tr>
<tr><td rowspan="8">Управление</td><td>Тип</td><td colspan="6">V-образный контроллер</td></tr>
<tr><td>Контроль температуры</td><td colspan="6">PID Z контроллер</td></tr>
<tr><td>Метод установки температуры</td><td colspan="6">Цифровой ввод при помощи кнопок ▲/▼.</td></tr>
<tr><td>Метод отображе-ния температуры</td><td colspan="6">Верхний зеленый 4-разрядный цифровой LED дисплей, разрешение 1℃.
Нижний оранжевый 5-разрядный цифровой LED дисплей, разрешение 1℃.</td></tr>
<tr><td>Другие индикаторы</td><td colspan="6">LED-индикация температурных режимов: нагрев / стабильно / охлаждение</td></tr>
<tr><td>Таймер</td><td colspan="6">От 1 минуты до 99 часов. 59 минут: продолжительность работы. 24-часовая настройка: работа по времени.</td></tr>
<tr><td>Рабочие функции</td><td colspan="6">Работа с фиксированной температурой, Программа (макс. 99 шагов, до 99 шаблонов, повторение операции), Таймер выбора длительности / времени (автостарт / автостоп / быстрый автостоп работы с фиксированной температурой, автоматический запуск программы)</td></tr>
</table>

10. Specifications

Specifications

Модель		DNE401	DNE411	DNE601	DNE611	DNE811	DNE911
Контроллер	Дополнительные функции	Интегрированная функция таймера включения и работы (до 65 535 часов); Калибровка смещения; Интегрированная функция мониторинга энергопотребления, общего выброса CO2 и рабочей мощности нагревателя; Режим восстановления после аварийного отключения питания; Сохранение и доступ к информации о настройках оператора;					
	Управление нагревателем	Триак с управлением через ноль					
	Датчик	Термопара K-типа (для контроля температуры и независимого устройства предотвращения перегрева).					
Устройство безопасности	Контроллер	Функции самодиагностики (отказа датчика температуры, короткое замыкание симистора, отключение нагревателя, отказ вентилятора, оплавление контакта главного реле, автоматическое предотвращение перегрева), блокировка клавиш.					
	Блокировщик утечки тока на землю(ELB)	15A	10A	15A	10A	15A	20A
		Защита от тока утечки / короткого замыкания / перегрузки по току, номинальный ток чувствительности 30 мА					
	Независимое устройство предотвращения перегрева	Устанавливаемый диапазон температур : 0～250℃					
Стандарт	Внутренние размеры Ширина ※3 Глубина Высота	450 мм. 450 мм. 450 мм.		600 мм. 500 мм. 500 мм.		600 мм. 500 мм. 1000 мм.	1090 мм. 500 мм. 1000 мм.
	Венешние габариты Ширина ※3 Глубина Высота	580 мм. 645 мм. 860 мм.		730 мм. 695 мм. 910 мм.		730 мм. 695 мм. 1660 мм.	1220 мм. 695 мм. 1660 мм.
	Внутр. ёмкость	90 л.		150 л.		300 л.	540 л.
	Масса	Прибл. 63 Кг.		Прибл. 77 Кг.		Прибл. 92 Кг.	Прибл. 185 Кг.
	Количество ярусов для полок	11 / 30 мм.		13 / 30 мм.		29 / 30 мм.	29 / 30 мм. ×2
	Нагрузкой на каждую полку	Прибл. 15 Кг. / полка.					
Аксессуары	Материал полок	Перфорированная пластина из нержавеющей стали (нижняя пластина крепится винтами, модель DNE911 включает две пластины)					
	Кол-во полок / держателей	2/4				4/8	8/16
	Руководство экспл.	Эта брошюра, 1 шт.					
	Гарантийный талон	1 шт.					
Примечания	※1 Рабочие характеристики были измерены при номинальном напряжении источника однофазного переменного тока 115 В ± 5% или переменного тока 220 В ± 5%, комнатной температуре 23 ℃ ± 5 ℃, относительной влажности 65 % RH ± 20 %. Все выпускные, всасывающие и кабельные порты полностью закрыты и не загружены ※2 Значение рассчитывается путем деления измеренного значения в на 2. ※3 Не включая выступы.						

11. Accessory

List of accessories

Show the list of optional accessories for this Equipment on Tables11. 1 and 11. 2. 1_2
Forced Convection Constant Temperature Oven DNE401/411, DNE601/611, DNE811, DNE911 support a wide variety of optional parts.
※Note that some optional parts may not be installed after delivery.

Таблица 11.1 Список опций (послепродажная установка)

Опция	Код продукта	Модель	Подходит для	Комментарии
Подставка	211856	0N61	DNE401/411 DNE601/611	Основной блок можно закрепить на подставке для работы.
	212348	0T42	DNE401/411	
	212349	0T62	DNE601/611	
Зажим для штабелирования	212806	0DN26	DNE401/411	Вы можете ставить два основных блока друг на друга. Свяжитесь с нами для возможных комбинаций с другими сериями.
	212807	0DN28	DNE601/611	
Полки (1, 2 полки, крепления в комплекте)	212246	0DN20	DNE401/411	Дополнительные полки того же типа, что и стандартные полки.
	212266	0DN22	DNE610/611 DNE811	
	212490	—	DNE911	
Мат антисейсмический «Лабопита» В комплекте 4 мата.	296902	—	DNE401/411 DNE601/611	Предотвращает падение. Просто наденьте устройство на дно.
Датчик (К-термопара)	212946	0DT48	ВСЕ МОДЕЛИ	Датчик температуры для подтверждения температуры в камере или образцах.
Силиконовая заглушка (с одним отверстием)	212947	0DT52	ВСЕ МОДЕЛИ	Эта заглушка из силиконовой резины для фиксации и герметизации зазоров датчиков, вставленных в кабельный порт. В центре имеется отверстие диаметром 2 мм.

Таблица 11.2.1 Список опций (установка после поставки невозможна)

Опция	Код продукта	Модель	Подходит для	Комментарии
Набор внешних коммуникационных адаптеров	211880	0IN90	ВСЕ МОДЕЛИ	Подключите это оборудование к ПК через этот адаптер для внешней связи. Установите прикладное программное обеспечение, идущее в комплекте к этому набору.
Внешний коммуникационный терминал RS485	281442	0DM12	DNE401/411 601/611/811	Контролирует рабочее состояние этого Оборудования и управляет им удаленно.
	281443	0DM14	DNE911	
Набор внешних коммуникационных адаптеров	281444	0DM16	DNE401/411 601/611/811	Подключите это оборудование к ПК через этот адаптер для внешней связи. Установите прикладное программное обеспечение, идущее в комплекте к этому набору.
	281445	0DM18	DNE911	

11. Аксессуары

List of accessories

Таблица 11.2.2 Список опций (установка после поставки невозможна)

Опция	Код продукта	Модель	Подходит для:	Комментарии
Терминал вывода внешнего сигнала тревоги	281446	ODM20	DNE401/411 601/611/811	Выводит аварийный сигнал при возникновении ошибки на данном оборудовании. Отображает конкретную ошибку на нижнем экране.
	281447	ODM22	DNE911	
Выходной терминал истечения времени. Выходной терминал контроля режимов работы.	281448	ODM24	DNE401/411 601/611/811	Выходной сигнал тайм-аута. «END» в конце операции автоматической остановки и / или работы программы отображается на нижнем экране.
	281449	ODM26	DNE911	
Терминал вывода событий Терминал вывода сигнала истечения времени.	281450	ODM28	DNE401/411 601/611/811	Выходной сигнал режима работы при работе с данным оборудованием.
	281451	ODM30	DNE911	
Выходной терминал контроля режимов работы.	281452	ODM32	DNE401/411 601/611/811	Выходной сигнал ВКЛ-ВЫКЛ устанавливается для каждого режима, такого как режим ожидания, работы, окончание работы и шаги программы.
	281453	ODM34	DNE911	
Порт кабеля (внутренний диаметр 25 мм.)	281454	ODM36	Для всех моделей	Проконсультируйтесь с нами по поводу положения и количества портов. Возможна комбинация портов φ25 мм. и φ50 мм.
Порт кабеля (внутренний диаметр 50 мм.)	281455	ODM38	Для всех моделей	
Обзорное окно	281456	ODM40	DNE401/411	В центре двери можно сделать смотровое окно (Ш 250 мм. x В 280 мм.) (армированное стекло). Обратите внимание, что заявленная производительность для устройства с окном не гарантируется.
	281457	ODM42	DNE601/611	

These options may be installed or created after delivery or installation of the unit. Consult your dealer or one of our sales offices for optional parts.

12. Wiring diagram

DNE401/601 Wiring diagram

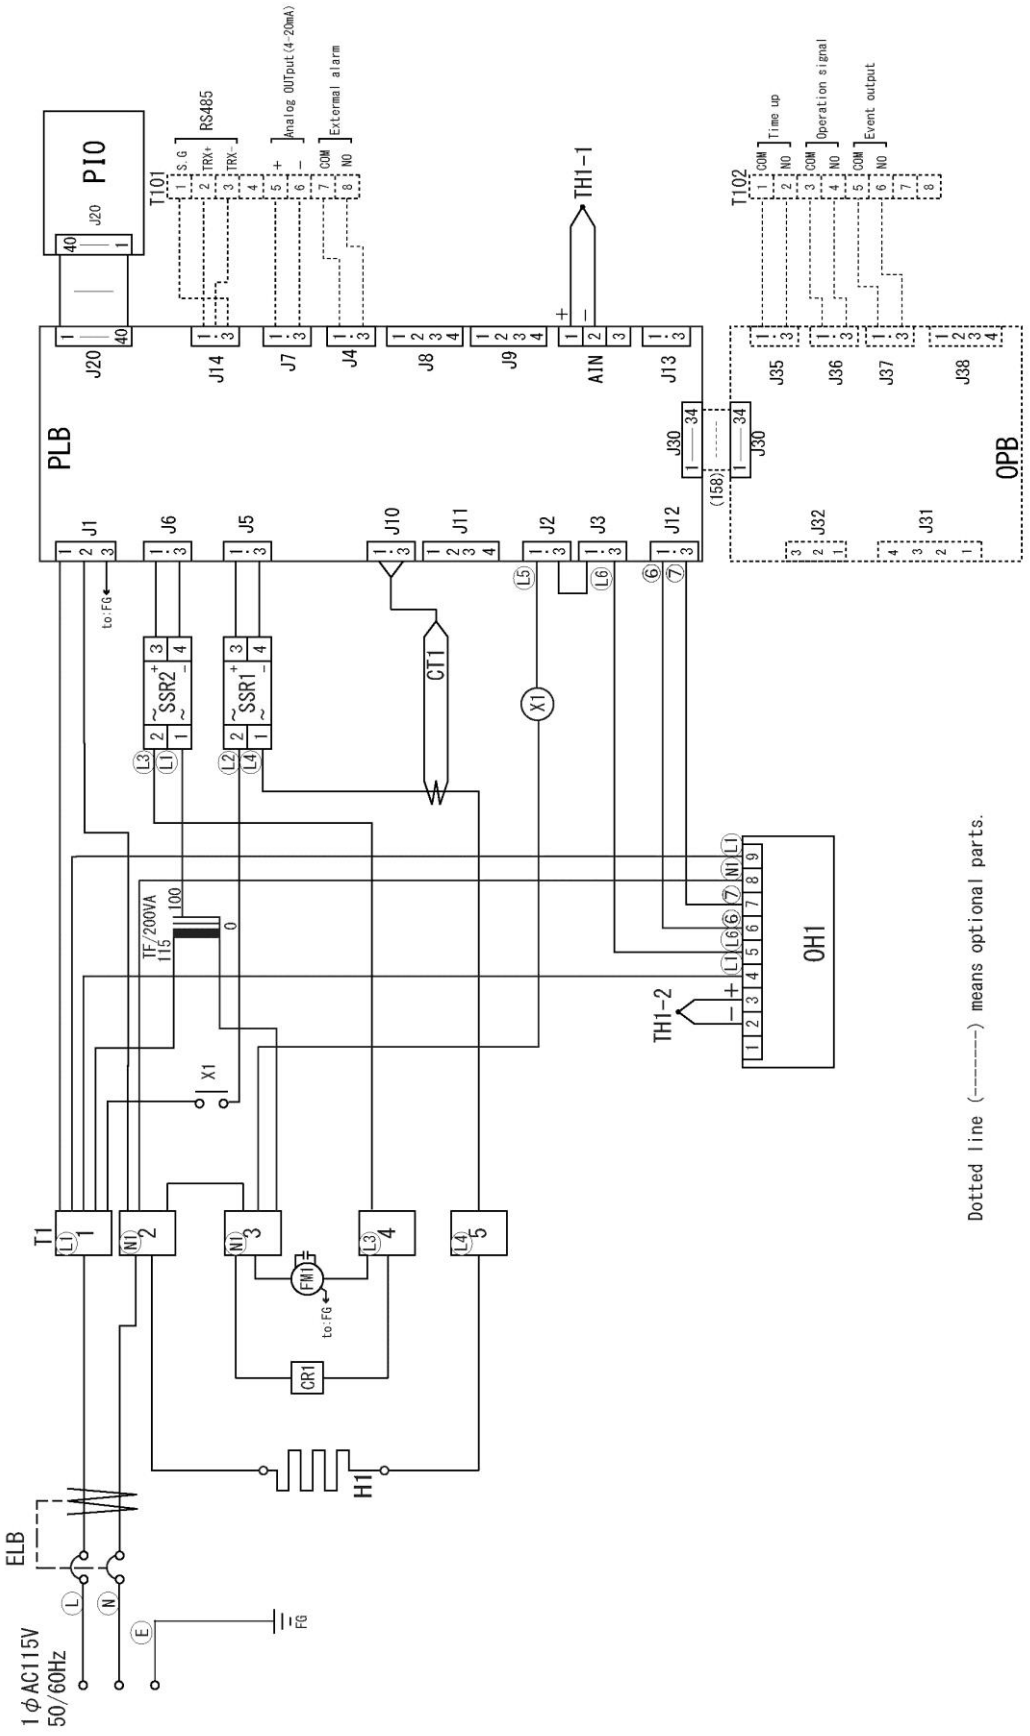

12. Wiring diagram

DNE411/611 Wiring diagram

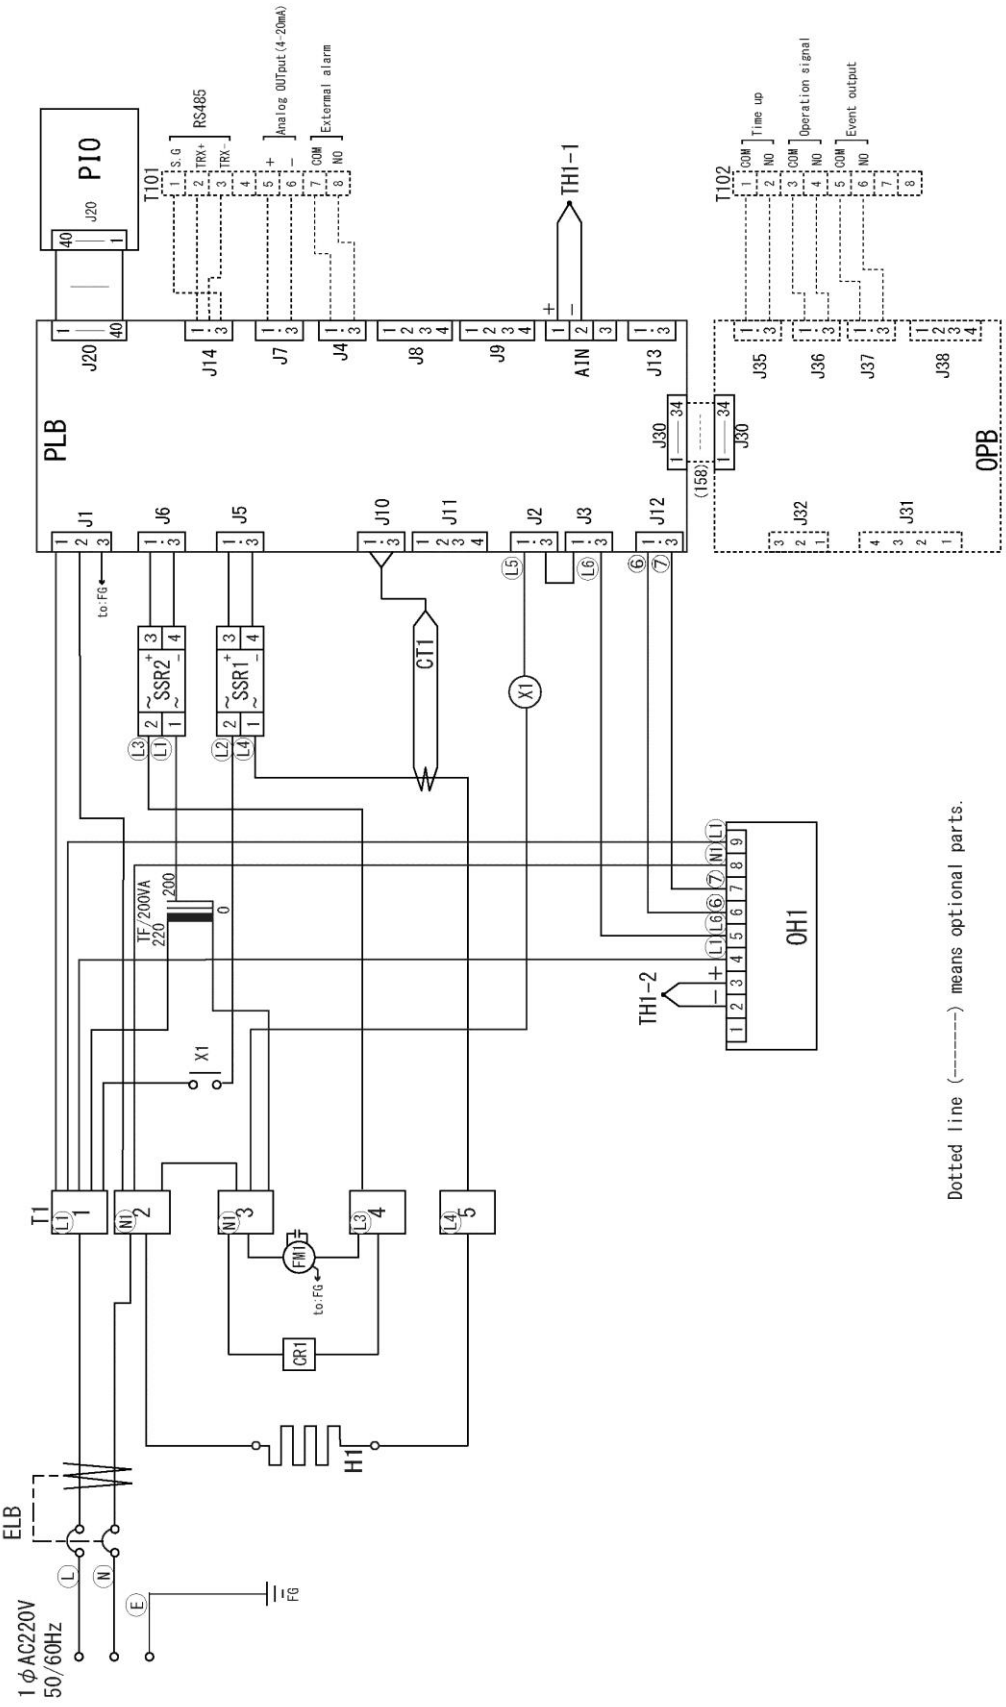

12. Wiring diagram

DNE811 Wiring diagram

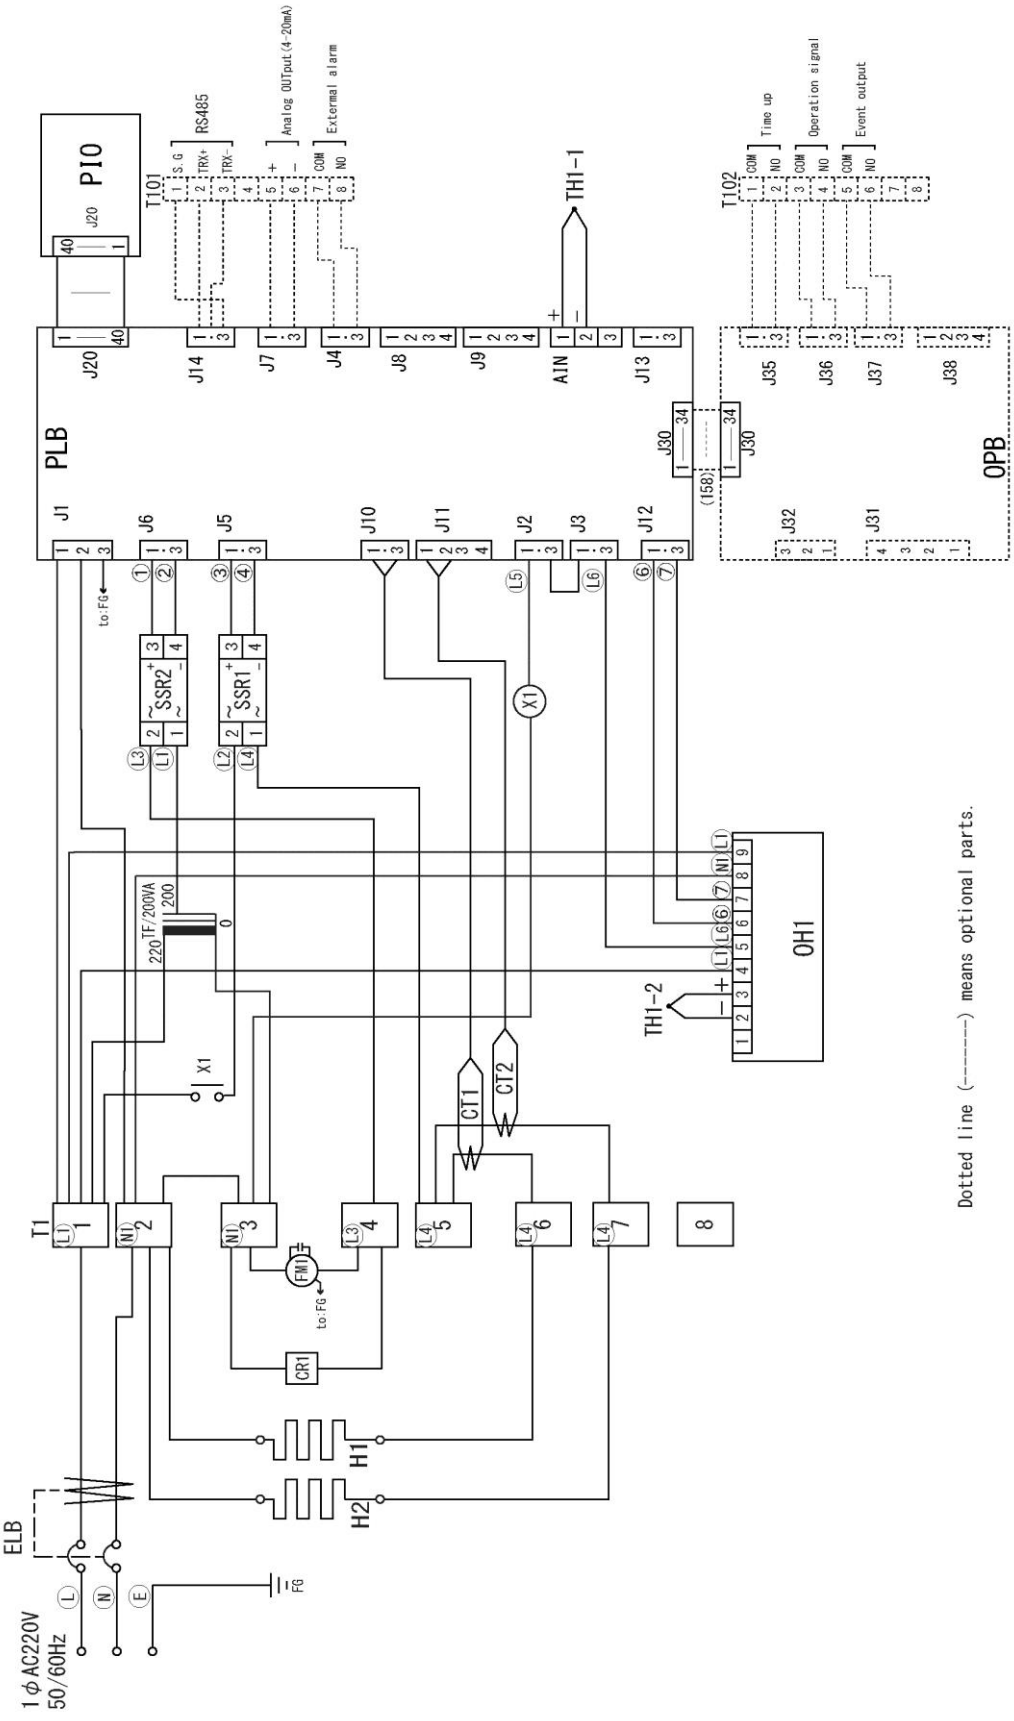

12. Wiring diagram

DNE911 Wiring diagram

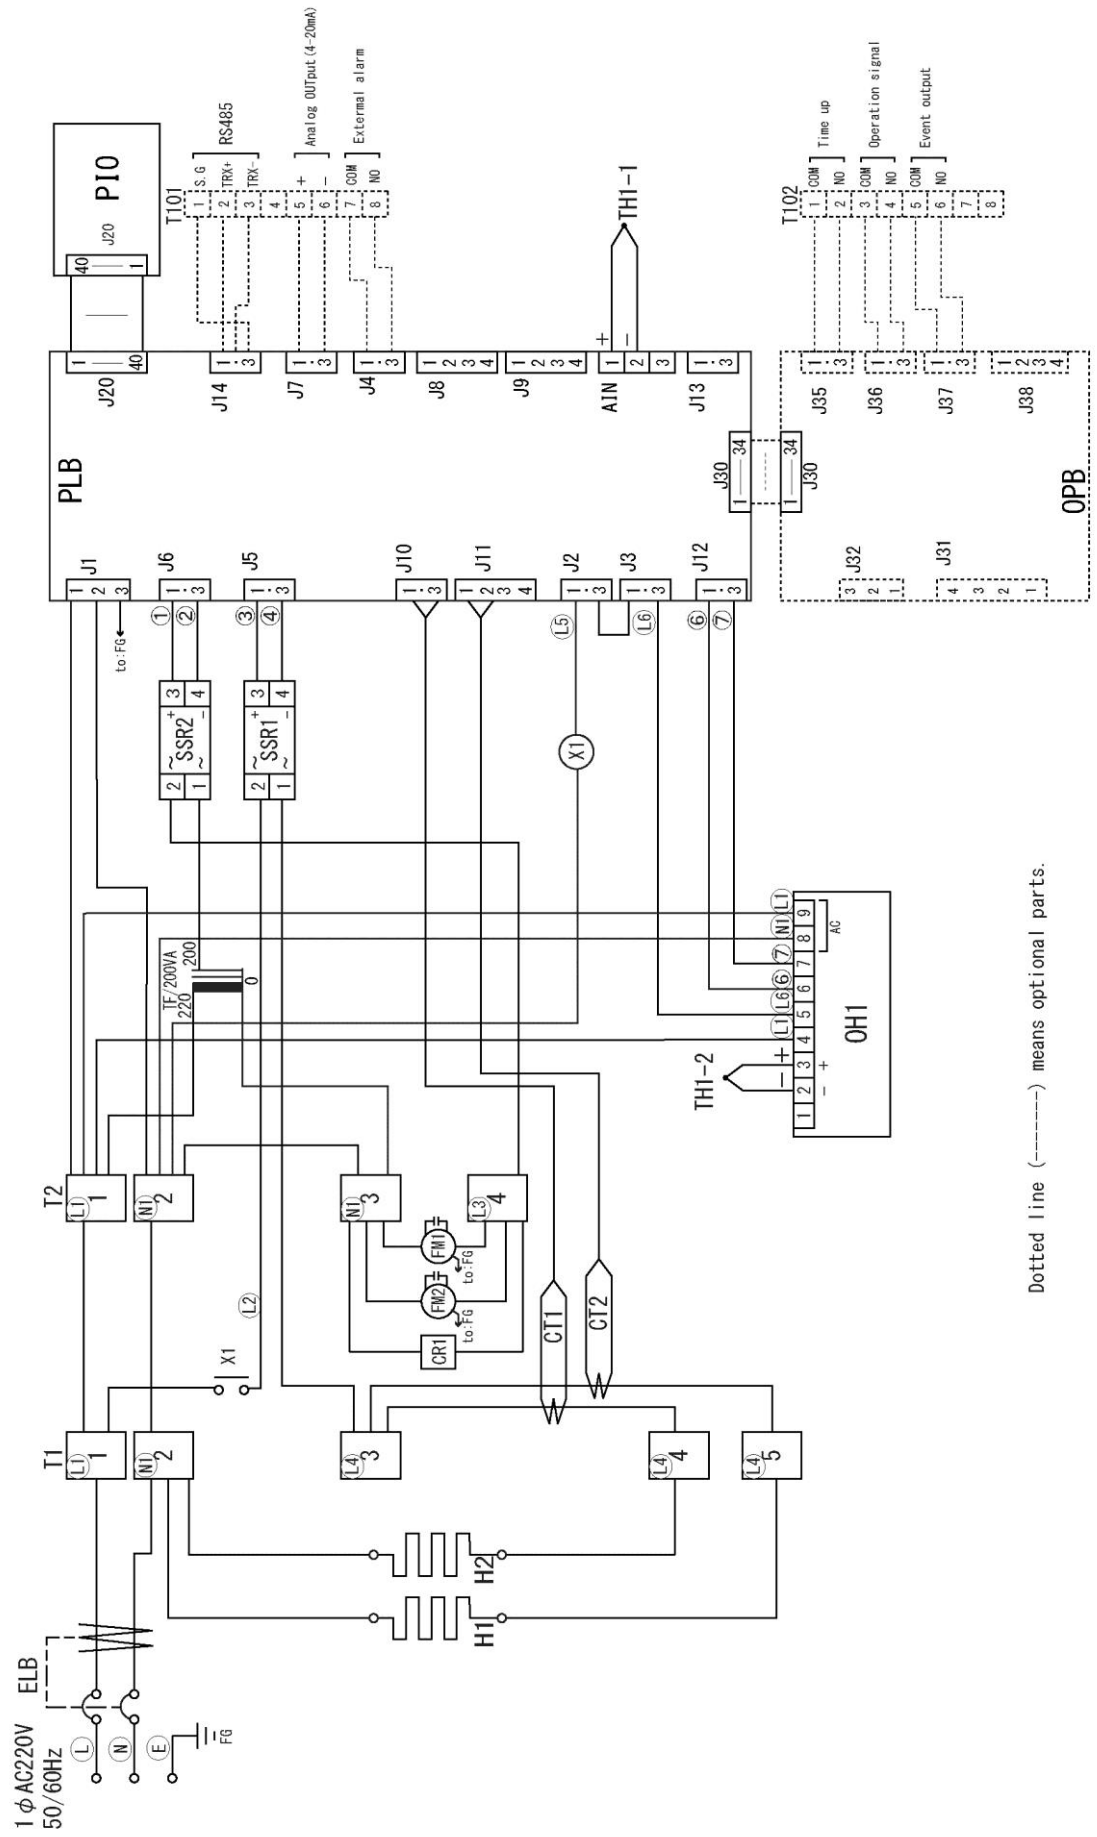

12. Wiring diagram

Wiring diagram part symbols

Символ	Номенклатура	Символ	Номенклатура
ELB	Блокировщик утечек (ELB)	PIO	Дисплейная плата V -типа.
T1	Клеммный блок	OH1	Независимое устройство предотвращения перегрева
T2	Клеммный блок	TH1-1	Датчик независимого устройства предотвращения перегрева.
X1	Основное реле	TH1-2	Датчик контроля температуры
SSR1、2	Твердотельное реле	TF	Трансформатор
H1、2	Нагреватель		
CT1、2	Элемент обнаружения тока		
CR1	Искрогаситель		
FM1、2	Мотор вентилятора		
PLB	Планарная плата V-типа		

Опциональные детали

Символ	Номенклатура	Символ	Номенклатура
OPB	Опциональная плата V-типа		
T101	Клеммный блок для внешних подключений		
T102	Клеммный блок для внешних приемных устройств.		

13. List of dangerous substances

Never process any explosive, flammable samples and also samples contained with those substances.

Explosive Substance	①Nitroglycol, Glycerine trinitrate, Cellulose Nitrate and other explosive nitrate esters
	②Trinitrobenzen, Trinitrotoluene, Picric Acid and other explosive nitro compounds
	③Acetyl Hydroperoxide, Methyl Ethyl Ketone Peroxide, Benzoyl Peroxide and other organic peroxides
	④Metallic Azide, including Sodium Azide, etc.
ExplosiveSsubstances	①Metal “Lithium” ②Metal “Potassium” ③Metal “Natrium” ④Yellow Phosphorus ⑤Phosphorus Sulfide ⑥Red Phosphorus⑦Phosphorus Sulfide ⑧Celluloids, Calcium Carbide (a.k.a, Carbide)⑨Lime Phosphide⑩Magnesium Powder ⑪Aluminum Powder ⑫Metal Powder other than Magnesium and Aluminum Powder ⑬Sodium Dithionous Acid (a.k.a., Hydrosulphite)
Oxidizing Substances	①Potassium Chlorate, Sodium Chlorate, Ammonium Chlorate, and other chlorates
	②Potassium Perchlorate, Sodium Perchlorate, Ammonium Perchlorate, and other perchlorates
	③Potassium Peroxide, Sodium Peroxide, Barium Peroxide, and other inorganic peroxides
	④Potassium Nitrate, Sodium Nitrate, Ammonium Nitrate, and other nitrates
	⑤Sodium Chlorite and other chlorites
	⑥Calcium Hypochlorite and other hypochlorites
Flammable Substances	① Ethyl Ether, Gasoline, Acetaldehyde, Propylene Chloride, Carbon Disulfide, and other substances with ignition point at a degree 30 or more degrees below zero.
	②n-hexane, Ethylene Oxide, Acetone, Benzene, Methyl Ethyl Ketone and other substances with ignition point between 30 degrees below zero and less than zero.
	③Methanol, Ethanol, Xylene, Pentyl n-acetate, (a.k.a.amyl n-acetate) and other substances with ignition point between zero and less than 30 degrees.
	④Kerosene, Light Oil, Terebinth Oil, Isopenthyl Alcohol(a.k.a. Isoamyl Alcohol), Acetic Acid and other substances with ignition point between 30 degrees and less than 65 degrees.
Combustible Gas	Hydrogen, Acetylene, Ethylene, Methane, Ethane, Propane, Butane and other gases combustible at 15℃ at one air pressure.

Programming sheet

Control №

Model name		Date of preparation	(Y) (M) (D)
Program pattern number		Prepared by	

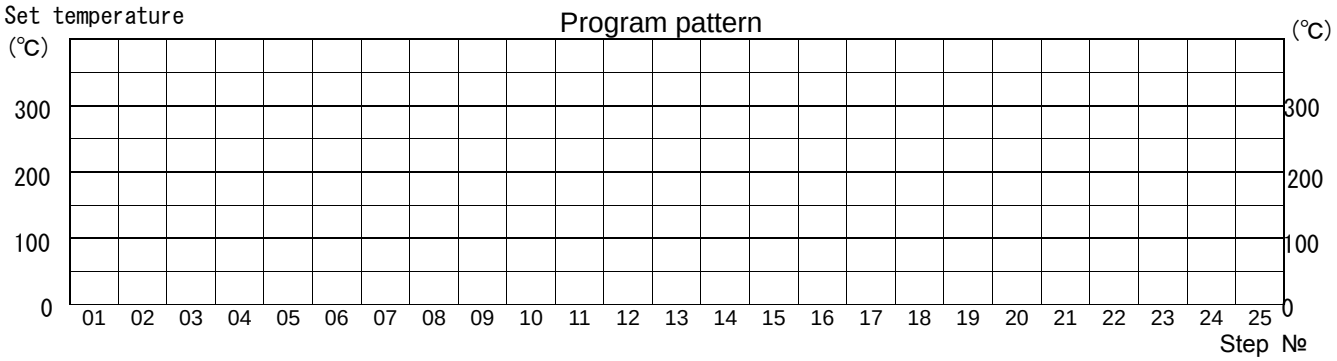

Pattern number	Step	Set temperature	Time	Repeat dstn	Number of repetitions	Wait	Event			End
		TEMP	TIME	REP	REP	WAIT	EVENT			END
P : 00**	**P02 : **	(℃)	Hr : Min	STEP	COUNT	ON/OFF	1	2	3	:ST
	01		:							
	02		:							
	03		:							
	04		:							
	05		:							
	06		:							
	07		:							
	08		:							
	09		:							
	10		:							
	11		:							
	12		:							
	13		:							
	14		:							
	15		:							
	16		:							
	17		:							
	18		:							
	19		:							
	20		:							
	21		:							
	22		:							
	23		:							
	24		:							
	25		:							
Remarks										

Note: Event is optional item. Duplicate and use this sheet.

Limited liability

Be sure to use this Equipment strictly following the handling and operating instructions in this Instruction Manual.
Yamato Scientific Co., Ltd. assumes no responsibility for accident or malfunction caused by use of this Equipment in any way not specified in this Instruction Manual.
Never attempt to perform matters prohibited in this Instruction Manual.
Otherwise, unexpected accident may result.

Notice

- **Descriptions in this Instruction Manual are subject to change without notice.**
- **WE, as Yamato Scientific Co., Ltd. will replace this Instruction Manual with missing page or paging disorder.**

Operation Manual
Forced Convection Constant Temperature Oven
DNE401/411, DNE601/611, DNE811, DNE911
First Edition July 16, 2015

YAMATO SCIENTIFIC RUSSIA, INC.
Russia, Moscow, st. Friedrich Engels, 46,
building 2
Tel : +7 495 740-68-71
E-mail: sales@yamatorussia.ru
https://yamatorussia.ru/